

# BIOS Release Notes

## TITLE

**SUBJECT:** MR83-AC0 BIOS Release Notes version F12  
**System:** MR83-AC0-000,G383-R80-AAP1-000,G383-R80-LAP1-000,  
G383-R80-LAP1-001

### About This Release

**Build Date:** 2025/01/16  
**BIOS Checksum:** 0x9EEEB69B (32M)  
**Release Owner:** Leon.Liang

### BIOS Components/Contents

**Processor stepping(s) supported:** AMD EPYC CPU Family 19h Model  
**System hardware configurations supported:** MR83-AC0-000  
**PCB Version:** 1.x  
**Microcode updates versions:**

CPUID	Family	Microcode Update ID
A0	Family 19h Model	0x0A900007
A1	Family 19h Model	0x0A900108

**IPMI support:**  
**AMI Kernel version:** 5.33\_0ACSD\_PI1.0.0.6\_022  
**AGESA PI version:** MI300PI 1.0.0.7  
**OPROM version:**

OPROM	Version
AST2600	1.12.00

### Installation Notes

#### IMPORTANT NOTES:

1. Please extract the MR83-AC0\_F12.zip to a bootable diskette that use FAT/FAT32 format

#### BIOS UPDATE INSTRUCTIONS FOR EFI Shell:

1. Insert USB flash drive to system for BIOS upgrade.
2. Power on system and boot to Build-In Shell.
3. Enter your USB filesystem, like "fs0:" or "fsx:", "x" is your USB filesystem number
4. Execute F.nsh for bios update
5. After bios flash finish, system must Power-Off to have the changes take effect.

#### BIOS UPDATE INSTRUCTIONS FOR Windows:

1. Insert bios update USB flash drive.
2. Use Command Shell.

## BIOS Release Notes

3. Enter \Tool\afuwin32 and execute f.bat for Windows 32bit.  
Or  
Enter \Tool\afuwin64 and execute f.bat for Windows 64bit.
4. After bios flash finish, system must Power-Off to have the changes take effect.

### **BIOS UPDATE FOR Easy BIOS Refresh:**

1. The system supports remotely update BIOS if BMC existent.
2. Please download the Easy BIOS Refresh User Guide from Gigabyte website, target system support page.

### **BIOS Version CHECK INSTRUCTIONS:**

1. Power on system and press <DEL> during POST
2. The bios version shows on the first main page

### **Known Issues/Workarounds**

### **Issues fixed in this version**