 
 


AORUS Waterforce X Firmware Update Instructions (Aio2Flasher.exe)


1. Make sure the device's SATA power and micro-USB is connected per setup instructions.

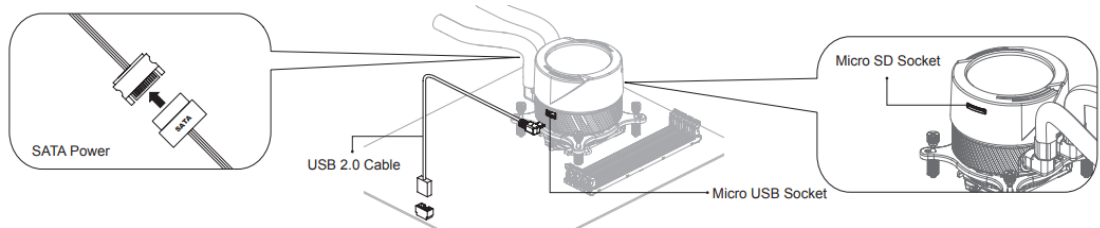


2. Format a MicroSD card to FAT32 and insert it into the cooler until you feel a light click. (FAT32 can only be in a partition of 32GB or smaller)

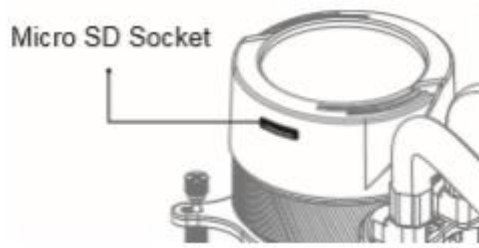


3. Extract the contents of the downloaded zipped firmware package.
4. Navigate into the extracted folder and run the "Aio2Flasher.exe" application.
5. If the existing firmware version is the newest, the window will say "Firmware was Newest", otherwise, click Begin to start the flashing process.

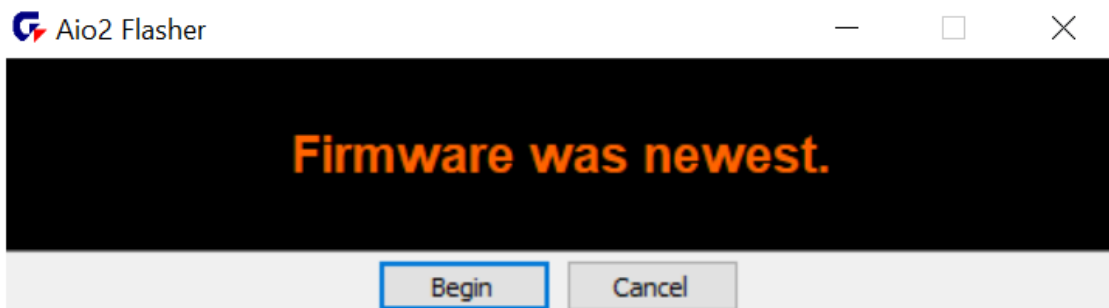

6. Wait until the progress reaches 100% and change to the Finished message (This will take a short while):

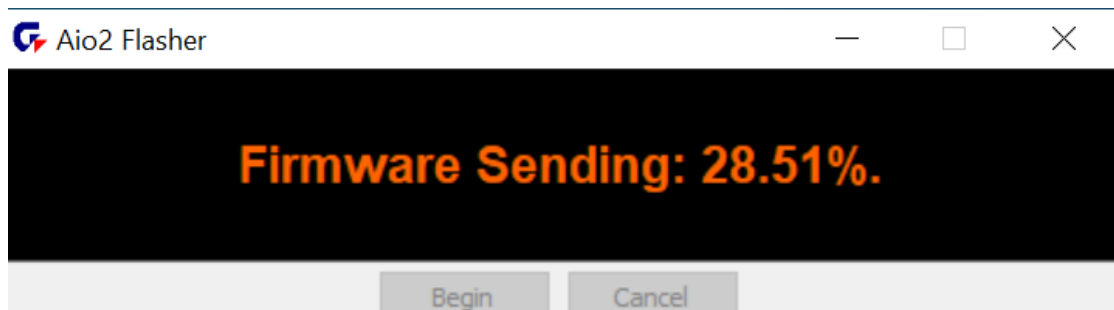

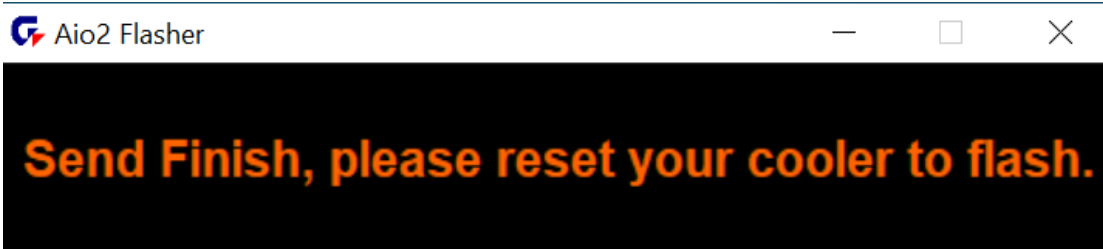

7. a) Shutdown your system completely then power-on again or;
b) Unplug then reconnect the cooler's SATA power while the system is on.
8. The LCD display on the cooler should display an update progress, please wait until the cooler LCD display fully shows "Upgrade finished".



9. Repeat step 7 to restart the device again.
10. Re-connect the micro-USB cable to have AORUS Engine recognize the cooler to complete the Firmware Update process. (Pump Max RPM up to 3200 RPM)

