

GIGABYTE GAMING A16

How to Remove and Replace the Battery

Consumer step-by-step guide

Before you begin
Shut down the notebook and disconnect all
cables.



Before You Start to Remove or Replace the Battery

4 things to do first

- 1 Shut down the notebook completely.
- 2 Unplug the AC adapter and all connected cables.
- 3 Work on a clean, stable, dry surface.
- 4 Please use the appropriate tools to assist you with the following steps.

Use a commercially available Phillips screwdriver and a non-marring pry tool.


This guide focuses only on removal and replacement

You will learn how to:

- remove the 11 lower-case screws
- release and lift off the lower case
- disconnect and remove the battery
- replace the battery

Step 1 • Remove the Lower-Case Screws

11 screws

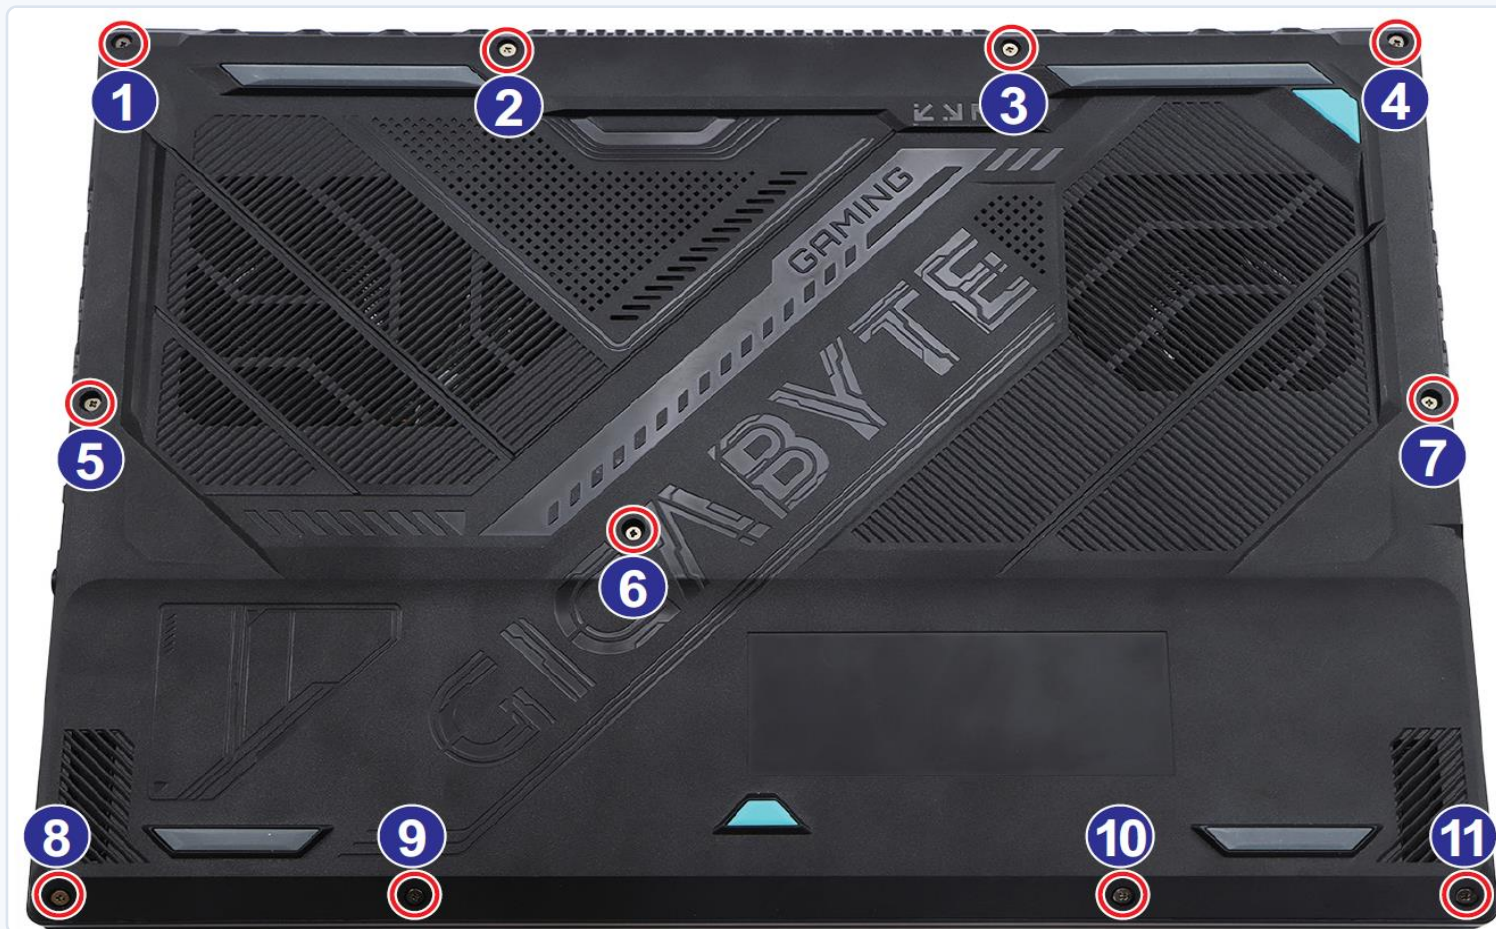


Turn the notebook over.

Use a Phillips-head screwdriver to remove all 11 screws shown in the numbered positions.

Keep the screws together in a small container so none are lost.

Manual screw specification: M2.0 × 6.0, quantity 10.

Step 2 • Release the Lower Case

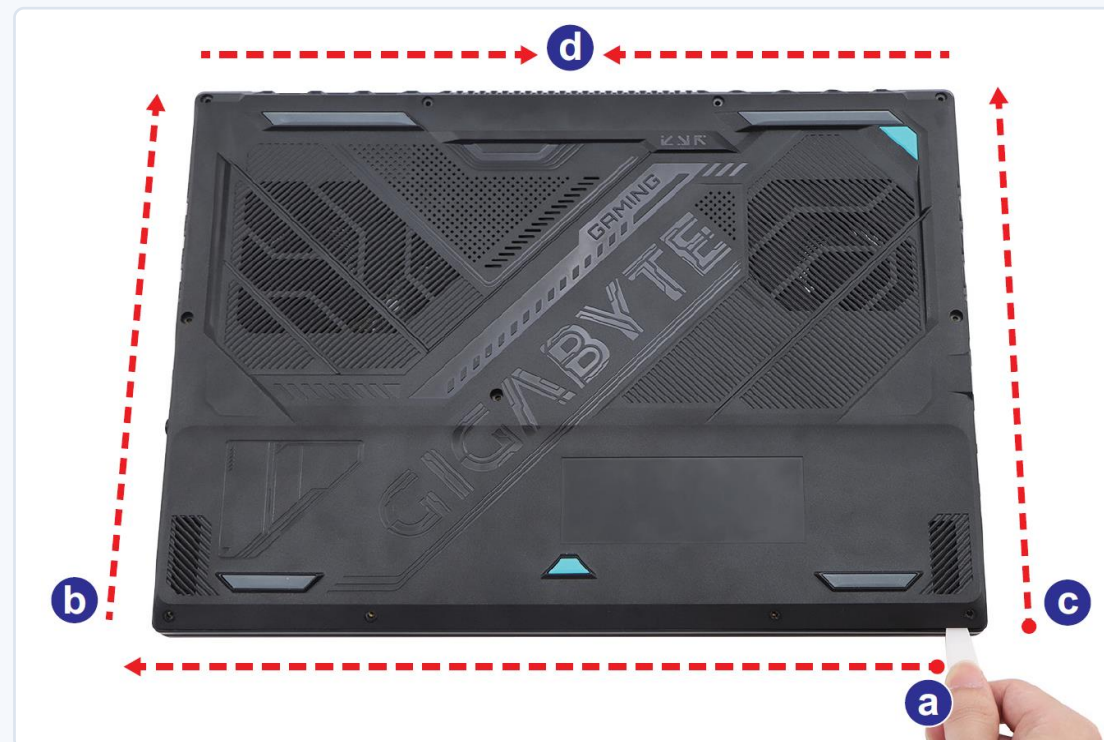

Start at the bottom edge and gently pry the lower case to release the first latches.

Then continue around the edges in the arrow direction until all remaining latches are free.

Please use the appropriate tools to assist you.

Step 3 • Lift Off the Lower Case



Once every latch is released, lift the lower case away from the notebook.


Go slowly.

If the cover does not lift easily, stop and check for a latch that is still engaged.

The battery is now accessible inside the notebook.

Step 4 • Locate the Battery

Battery

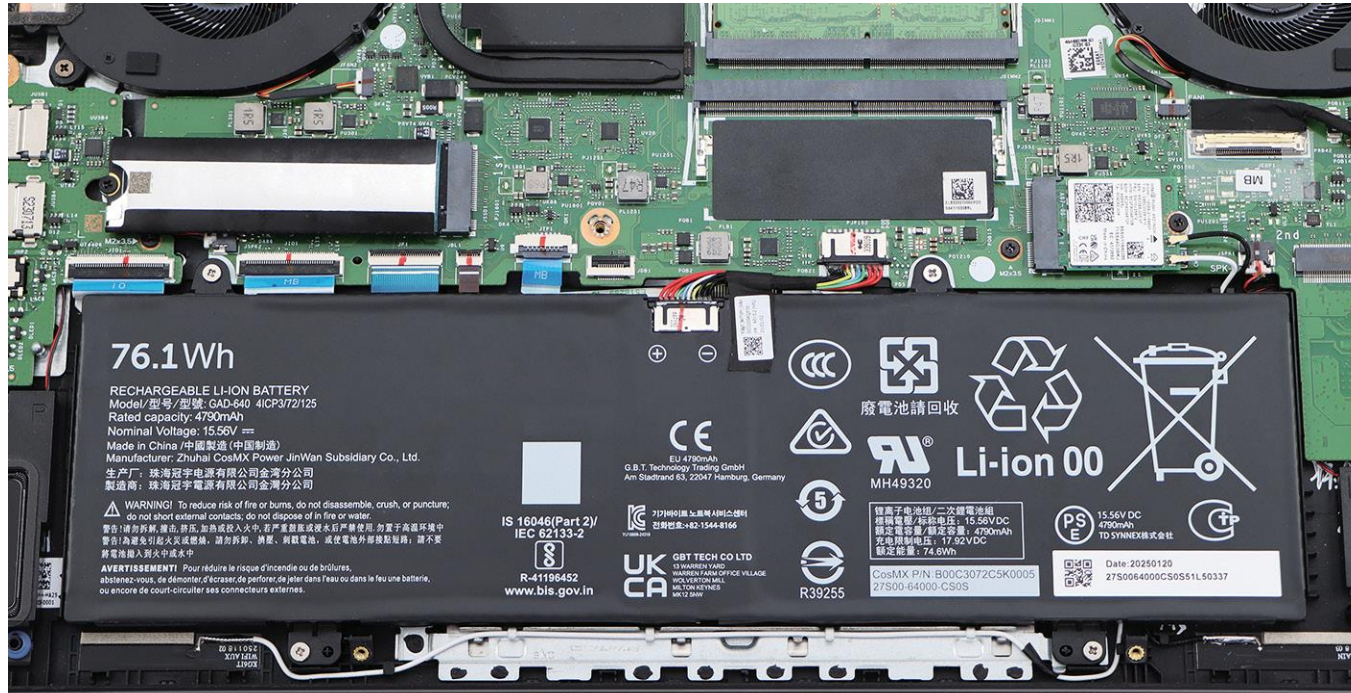

Find the battery pack in the lower section of the notebook.

Do not puncture, bend, squeeze, or use metal tools on the battery pack.

Step 5 • Disconnect the Cable & Remove 4 Screws



1 Disconnect the battery cable


Grip the connector body and pull it out gently.
Do not pull on the wires.

2 Remove the four battery screws

Remove the four numbered screws that secure the battery to the chassis.

Manual screw specification: M2.0 × 4.0, quantity 4.

Step 6 • Lift the Battery Out

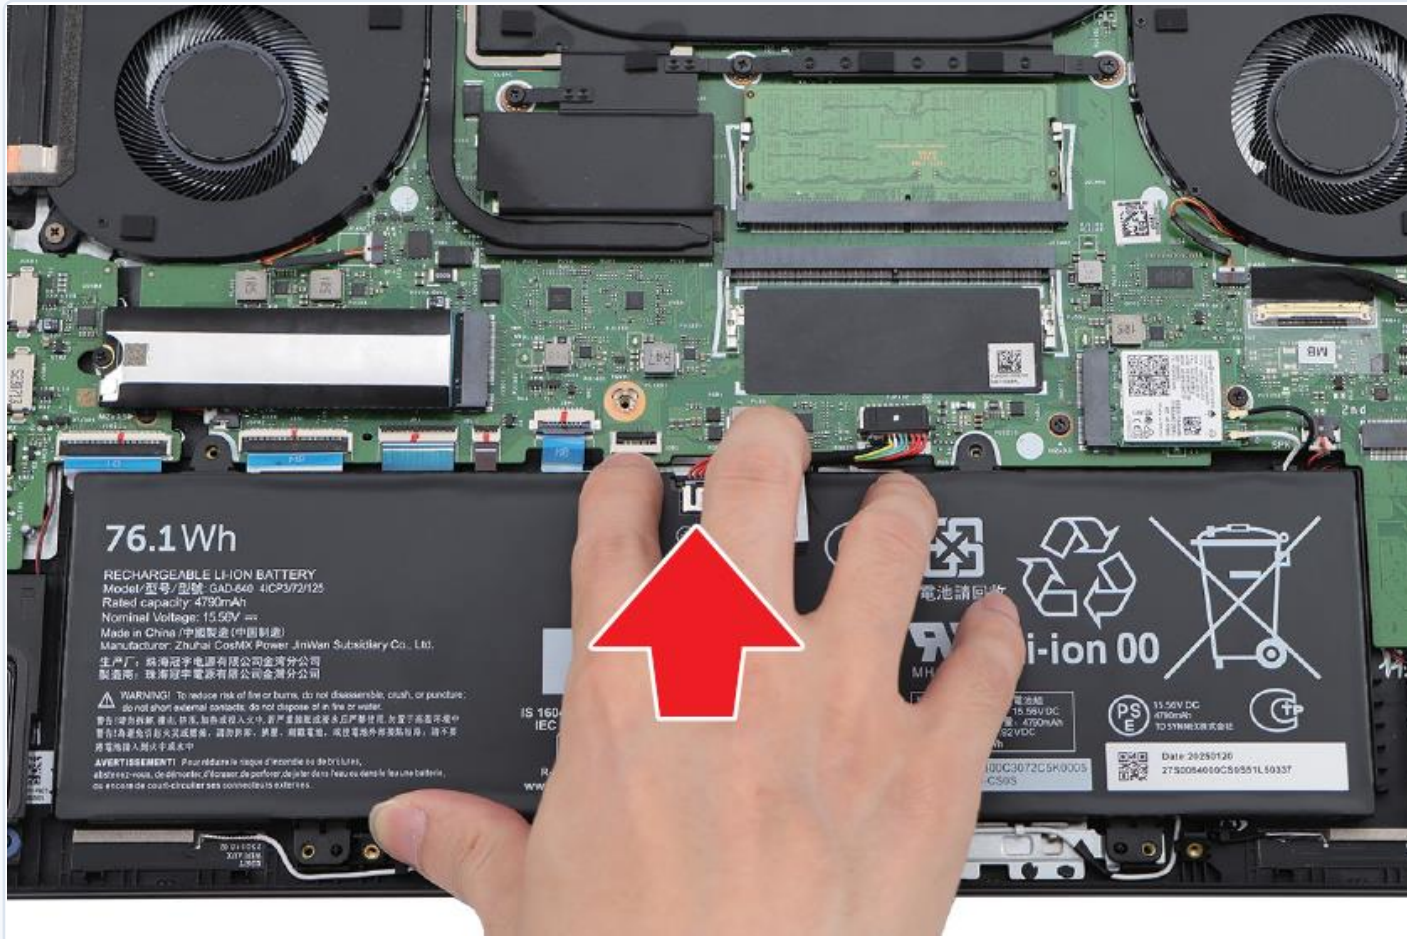


Lift the battery out of its compartment.

Hold the battery by its edges and remove it carefully from the notebook.

STOP if the battery is swollen, leaking, unusually hot, or visibly damaged. Do not continue handling it.

After Removal

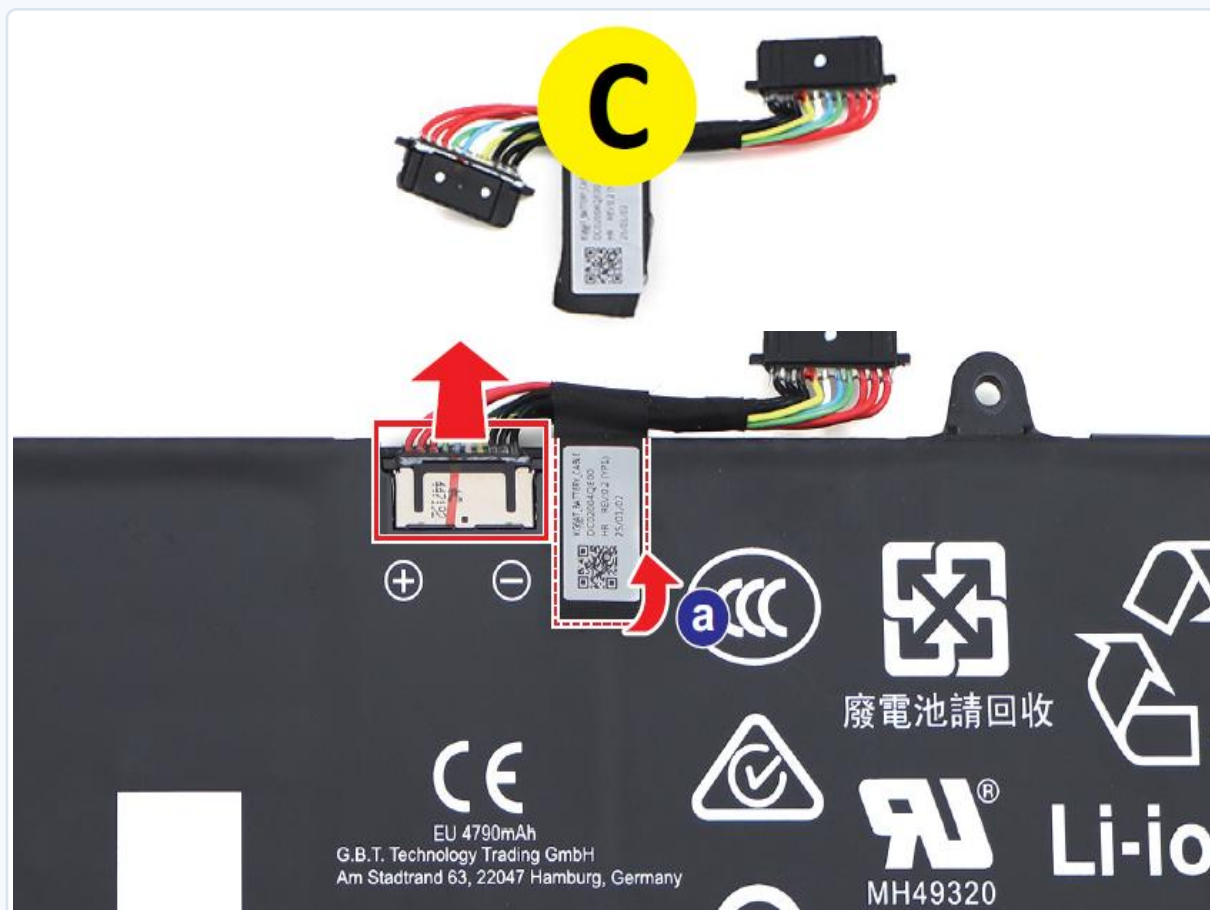

If you need to separate the battery cable

Detach the tape (a), then disconnect and remove the battery cable as shown in the manual C.

Dispose of or recycle the removed battery according to local regulations. Do not place it in household waste.

To install a compatible replacement battery, follow the removal steps in reverse order.

Battery Replacement



Ready to reinstall battery?

Simply follow the removal instructions on the previous pages in reverse order.

Start with Step 6 and work backward to Step 1.

Make sure every connector, screw, and cover is securely returned to its original position.