### Z370 AORUS Gaming 7

User's Manual

Rev. 1003 12ME-Z37ARG7-1003R



For more product details, please visit GIGABYTE's website.



To reduce the impacts on global warming, the packaging materials of this product are recyclable and reusable. GIGABYTE works with you to protect the environment.



We, Manufacturer/Importer,

G.B.T. Technology Trading GMbH Address: Bullenkoppel 16, 22047 Hamburg, Germany Declare that the product Product Type: Motherboard

Product Name: Z370 AORUS Gaming 7

conforms with the essential requirements of the following directives:

## EMC Directive 2014/30/EU:

Power-	Power-	🛛 Immuni	Conduc
ine flicker:	ine harmonics:	iy:	tion & Radiated Emissions:
EN 61000-3-3:2013	EN 61000-3-2:2006+A2:2009	EN 55024:2010	EN 55022:2010/AC2011

# Low Voltage Directive 2014/35/EU:

Safety:	
EN60950-1:2006+A11:2009+A12:2011+A2:2013	

## RoHS Directive 2011/65/EU

	substances in electronic equipment:	Restriction of use of certain
and applications banned by the directive.	substances listed in Annex II, in concentrations	This product does not contain any of the restricted

🛛 CE marking



Signature: Timmy Humy

Name: Timmy Huang

(Stamp)

Date: Aug. 31, 2017

#### Supplementary Information: Conforms to the following specifications: hereby declares that the product Representative Person's Name: ERIC LU **DECLARATION OF CONFORMITY** including that may cause undesired operation. cause harmful and (2) this device must accept any inference received, subject to the following two conditions: (1) This device may not This device complies with part 15 of the FCC Rules. Operation is (a), Class B Digital Device FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109 Responsible Party Name: G.B.T. INC. (U.S.A.) Per FCC Part 2 Section 2.1077(a) Model Number: Z370 AORUS Gaming 7 **Product Name: Motherboard** Phone/Fax No: (626) 854-9338/ (626) 854-9326 Signature: Eric Lu Address: 17358 Railroad Street Date: Aug. 31, 2017 City of Industry, CA 91748

#### **Copyright**

© 2018 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved. The trademarks mentioned in this manual are legally registered to their respective owners.

#### **Disclaimer**

Information in this manual is protected by copyright laws and is the property of GIGABYTE. Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice.

No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

#### **Documentation Classifications**

In order to assist in the use of this product, GIGABYTE provides the following types of documentations:

- For quick set-up of the product, read the Quick Installation Guide included with the product.
- For detailed product information, carefully read the User's Manual.

For product-related information, check on our website at: http://www.gigabyte.com

#### Identifying Your Motherboard Revision

The revision number on your motherboard looks like this: "REV: X.X." For example, "REV: 1.0" means the revision of the motherboard is 1.0. Check your motherboard revision before updating motherboard BIOS, drivers, or when looking for technical information.

Example:



#### Table of Contents

Box Conte	ents			6
Optional It	ems			6
Z370 AOR	US G	amin	g 7 Motherboard Layout	7
Chapter 1	Hard	ware	Installation	9
	1-1	Insta	allation Precautions	9
	1-2	Proc	luct Specifications	10
	1-3	Insta	alling the CPU and CPU Cooler	14
	1-3	3-1	Installing the CPU	14
	1-3	3-2	Installing the CPU Cooler	16
	1-4	Insta	alling the Memory	17
	1-4	l-1	Dual Channel Memory Configuration	17
	1-4	-2	Installing a Memory	18
	1-5	Insta	alling an Expansion Card	19
	1-6	Sett	ing up AMD CrossFire™/NVIDIA® SLI™ Configuration	
	1-7	Bac	Panel Connectors	21
	1-8	Onb	oard LEDs and Buttons	23
	1-9	Inte	nal Connectors	25
Chapter 2	BIOS	Setu	ıp	
	2-1	Star	tup Screen	40
	2-2	The	Main Menu	41
	2-3	M.I.	Γ	43
	2-4	Syst	em	55
	2-5	BIO	S	
	2-6	Peri	pherals	59
	2-7	Chip	set	63
	2-8	Pow	er	64
	2-9	Sav	e & Exit	66
Chapter 3	Confi	gurir	g a RAID Set	67
	3-1	Con	figuring SATA Controllers	67
	3-2	Insta	alling the RAID/AHCI Driver and Operating System	81
	3-3	Insta	alling an Intel® Optane™ Memory	
Chapter 4	Drive	rs In	stallation	87
	4-1	Driv	ers & Software	
	4-2	Арр	ication Software	88
	4-3	Info	mation	88

Chapter 5	Unique	Features	89
·	5-1 В	IOS Update Utilities	
	5-1-1	Updating the BIOS with the Q-Flash Utility	
	5-1-2	Updating the BIOS with the @BIOS Utility	
	5-2 A	PP Center	
	5-2-1	3D OSD	
	5-2-2	AutoGreen	
	5-2-3	BIOS Setup	
	5-2-4	Color Temperature	97
	5-2-5	Cloud Station	
	5-2-6	EasyTune	
	5-2-7	Easy RAID	104
	5-2-8	Fast Boot	
	5-2-9	Game Boost	107
	5-2-10	Platform Power Management	108
	5-2-11	RGB Fusion	109
	5-2-12	2 Smart TimeLock	
	5-2-13	3 Smart Keyboard	112
	5-2-14	4 Smart Backup	113
	5-2-15	5 Smart HUD	115
	5-2-16	6 System Information Viewer	116
	5-2-17	7 USB Blocker	117
	5-2-18	3 USB DAC-UP 2	118
	5-2-19	9 V-Tuner	119
Chapter 6	Append	ix	121
	6-1 K	iller Control Center	121
	6-2 C	onfiguring Audio Input and Output	
	6-2-1	Configuring 2/4/5.1/7.1-Channel Audio	
	6-2-2	Configuring S/PDIF Out	
	6-2-3	Configuring Microphone Recording	
	6-2-4	Using the Voice Recorder	
	6-2-5	Sound BlasterX 720°	
	6-3 Tr	roubleshooting	
	6-3-1	Frequently Asked Questions	
	6-3-2	Troubleshooting Procedure	
	6-4 D	ebug LED Codes	
	Regulato	bry Statements	
	Contact	Us	143

#### **Box Contents**

Z370 AORUS Gaming 7 motherboard

- Motherboard driver disk
- ☑ User's Manual
- ☑ Quick Installation Guide
- ☑ Four SATA cables
- ☑ I/O Shield
- One GC-SLI2PL SLI bridge connector
- One G Connector
- One digital LED strip adapter cable
- ☑ One RGB (RGBW) LED strip extension cable
- ☑ Two Velcro Cable Ties
- ☑ Two thermistor cables
- ☑ One M.2 screw kit

The box contents above are for reference only and the actual items shall depend on the product package you obtain. The box contents are subject to change without notice.

#### **Optional Items**

- 2-port USB 2.0 bracket (Part No. 12CR1-1UB030-6\*R)
- □ eSATA bracket (Part No. 12CF1-3SATPW-4\*R)
- □ 3.5" Front Panel with 2 USB 3.1 Gen 1 ports (Part No. 12CR1-FPX582-2\*R)
- HDMI-to-DVI adapter (Part No. 12CT2-HDMI01-1\*R)

#### Z370 AORUS Gaming 7 Motherboard Layout



(Note) For debug code information, please refer to Chapter 6.



#### Chapter 1 Hardware Installation

#### 1-1 Installation Precautions

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Prior to installation, carefully read the user's manual and follow these procedures:

- Prior to installation, make sure the chassis is suitable for the motherboard.
- Prior to installation, do not remove or break motherboard S/N (Serial Number) sticker or warranty sticker provided by your dealer. These stickers are required for warranty validation.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.
- When connecting hardware components to the internal connectors on the motherboard, make sure they are connected tightly and securely.
- When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) wrist strap when handling electronic components such as a motherboard, CPU or memory. If you do not have an ESD wrist strap, keep your hands dry and first touch a metal object to eliminate static electricity.
- Prior to installing the motherboard, please have it on top of an antistatic pad or within an electrostatic shielding container.
- Before connecting or unplugging the power supply cable from the motherboard, make sure the power supply has been turned off.
- Before turning on the power, make sure the power supply voltage has been set according to the local voltage standard.
- Before using the product, please verify that all cables and power connectors of your hardware components are connected.
- To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components.
- Make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- Do not place the computer system on an uneven surface.
- Do not place the computer system in a high-temperature or wet environment.
- Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.
- If you use an adapter, extension power cable, or power strip, ensure to consult with its installation and/or grounding instructions.

#### 1-2 Product Specifications

CPU	<ul> <li>Support for 8th Generation Intel<sup>®</sup> Core<sup>™</sup> i7 processors/Intel<sup>®</sup> Core<sup>™</sup> i5 processors/ Intel<sup>®</sup> Core<sup>™</sup> i3 processors in the LGA1151 package (Go to GIGABYTE's website for the latest CPU support list.)</li> <li>L3 cache varies with CPU</li> </ul>
Chipset	Intel® Z370 Express Chipset
Memory	<ul> <li>4 x DDR4 DIMM sockets supporting up to 64 GB of system memory</li> <li>Dual channel memory architecture</li> <li>Support for DDR4 2666/2400/2133 MHz memory modules</li> <li>Support for ECC Un-buffered DIMM 1Rx8/2Rx8 memory modules (operate in non-ECC mode)</li> <li>Support for non-ECC Un-buffered DIMM 1Rx8/2Rx8/1Rx16 memory modules</li> <li>Support for Extreme Memory Profile (XMP) memory modules (Go to GIGABYTE's website for the latest supported memory speeds and memory modules.)</li> </ul>
Onboard Graphics	<ul> <li>Integrated Graphics Processor-Intel® HD Graphics support:         <ul> <li>1 x DisplayPort, supporting a maximum resolution of 4096x2304@60 Hz</li> <li>* Support for DisplayPort 1.2 version, HDCP 2.2, and HDR.</li> <li>1 x HDMI port, supporting a maximum resolution of 4096x2160@30 Hz</li> <li>* Support for HDMI 1.4 version and HDCP 2.2.</li> </ul> </li> <li>Maximum shared memory of 1 GB</li> </ul>
Audio	<ul> <li>Realtek® ALC1220 codec</li> <li>ESS9018Q2C chip</li> <li>Support for Sound BlasterX 720°</li> <li>High Definition Audio</li> <li>2/4/5.1/7.1-channel</li> <li>Support for S/PDIF Out</li> </ul>
	1 x Intel® GbE LAN chip (10/100/1000 Mbit) (LAN1)     1 x Rivet Networks Killer™ E2500 LAN chip (10/100/1000 Mbit) (LAN2)
Expansion Slots	<ul> <li>1 x PCI Express x16 slot, running at x16 (PCIEX16)</li> <li>* For optimum performance, if only one PCI Express graphics card is to be installed, be sure to install it in the PCIEX16 slot.</li> </ul>
	<ul> <li>1 x PCI Express x16 slot, running at x8 (PCIEX8)</li> <li>* The PCIEX8 slot shares bandwidth with the PCIEX16 slot. When the PCIEX8 slot is populated, the PCIEX16 slot operates at up to x8 mode.</li> </ul>
	<ul> <li>1 x PCI Express x16 slot, running at x4 (PCIEX4)</li> <li>* The PCIEX4 slot shares bandwidth with the M2P_32G connector. The PCIEX4 slot operates at up to x2 mode when a PCIe SSD is installed in the M2P_32G connector.</li> </ul>
	<ul> <li>3 x PCI Express x1 slots         <ul> <li>The PCIEX1_3 slot shares bandwidth with the SATA3 1 connector. The SATA3 1 connector becomes unavailable when the PCIEX1_3 is populated.</li> <li>(All of the PCI Express slots conform to PCI Express 3.0 standard.)</li> </ul> </li> </ul>
Multi-Graphics Technology	<ul> <li>Support for NVIDIA<sup>®</sup> Quad-GPU SLI<sup>™</sup> and 2-Way NVIDIA<sup>®</sup> SLI<sup>™</sup> technologies</li> <li>Support for AMD Quad-GPU CrossFire<sup>™</sup> and 3-Way/2-Way AMD CrossFire<sup>™</sup> technologies</li> </ul>

Storage Interface	٠	Chipset:
		- 2 x M.2 connectors (Socket 3. M kev. type 2242/2260/2280/22110 SATA
		and PCIe x4/x2 SSD support) (M2M_32G) (M2A_32G)
		1 x M 2 connector (Socket 3 M key type 2242/2260/2280 PCIe x4/x2 SSD
		- 1 X W.Z CONNECTOR (SOCKETO, WINEY, Type ZZ4Z/ZZ00/ZZ001 CIE X4/XZ SOD
		Support) (MZP_32G)
		- Support for RAID 0, RAID 1, RAID 5, and RAID 10
		<ul> <li>Refer to "1-9 Internal Connectors," for the installation notices for the PCIEX4, M.2, and CATA segmentation</li> </ul>
		and SATA connectors.
	•	
USB	•	Chipset+2 ASMedia® USB 3.1 Gen 2 Controllers:
Ċ,		- 1 x USB Type-C <sup>™</sup> port with USB 3.1 Gen 2 support, available through the
		internal USB header
		<ul> <li>1 x USB Type-C<sup>™</sup> port on the back panel, with USB 3.1 Gen 2 support</li> </ul>
		<ul> <li>1 x USB 3.1 Gen 2 Type-A port (red) on the back panel</li> </ul>
	•	Chipset+Realtek <sup>®</sup> USB 3.1 Gen 1 Hub:
		- 2 x USB 3.1 Gen 1 ports available through the internal USB header
	•	Chipset:
		- 5 x USB 3.1 Gen 1 ports on the back panel
		- 4 x USB 2.0/1.1 ports available through the internal USB headers
Internal	•	1 x 24-pin ATX main power connector
Connectors	•	1 x 8-pin ATX 12V power connector
Connoctoro	•	1 x CPU fan header
	•	1 x water cooling CPU fan header
	•	4 x system fan headers
	•	1 x 3 Amp fan/water cooling pump header
	•	1 x system fan/water cooling pump header
	•	2 x digital LED strip headers
	•	2 x digital LED strip nower select jumpers
		2 x BCB (DCBW) LED strip booders
	Ţ	2 x KGD (KGDW) LED Sillp fielduels
	Ţ	
	•	6 X SAIA 6GD/S connectors
	•	1 x front panel neader
	•	1 x front panel audio neader
	•	1 x S/PDIF Out header
	•	1 x USB Type-C <sup>m</sup> header, with USB 3.1 Gen 2 support
	•	1 x USB 3.1 Gen 1 header
	•	2 x USB 2.0/1.1 headers
	•	1 x Thunderbolt <sup>™</sup> add-in card connector
	•	1 x Trusted Platform Module (TPM) header (2x6 pin, for the GC-TPM2.0_S
		module only)
	•	1 x power button
	•	1 x reset button
	•	1 x Clear CMOS button
	•	1 x OC button
	•	2 x temperature sensor headers

1

Back Panel Connectors	<ul> <li>1 x PS/2 keyboard/mouse port</li> <li>1 x DisplayPort</li> <li>1 x HDMI port</li> <li>5 x USB 3.1 Gen 1 ports</li> <li>1 x USB Type-C<sup>™</sup> port, with USB 3.1 Gen 2 support</li> <li>1 x USB 3.1 Gen 2 Type-A port (red)</li> <li>2 x RJ-45 ports</li> <li>1 x optical S/PDIF Out connector</li> <li>5 x audio jacks (Center/Subwoofer Speaker Out, Rear Speaker Out, Line In, Line Out, Mic In)</li> </ul>
I/O Controller	<ul> <li>iTE<sup>®</sup> I/O Controller Chip</li> </ul>
Hardware Monitor	<ul> <li>Voltage detection</li> <li>Temperature detection</li> <li>Fan speed detection</li> <li>Water cooling flow rate detection</li> <li>Overheating warning</li> <li>Fan fail warning</li> <li>Fan speed control <ul> <li>Whether the fan (pump) speed control function is supported will depend on the fan (pump) you install.</li> </ul> </li> </ul>
BIOS	<ul> <li>2 x 128 Mbit flash</li> <li>Use of licensed AMI UEFI BIOS</li> <li>Support for DualBIOS<sup>™</sup></li> <li>PnP 1.0a, DMI 2.7, WfM 2.0, SM BIOS 2.7, ACPI 5.0</li> </ul>
Unique Features	<ul> <li>Support for APP Center         <ul> <li>Available applications in APP Center may vary by motherboard model. Supported functions of each application may also vary depending on motherboard specifications.</li> <li>3D OSD</li> <li>@BIOS</li> <li>AutoGreen</li> <li>BIOS Setup</li> <li>Color Temperature</li> <li>Cloud Station</li> <li>Easy Tune</li> <li>Easy RAID</li> <li>Fast Boot</li> <li>Game Boost</li> <li>ON/OFF Charge</li> <li>Platform Power Management</li> <li>RGB Fusion</li> <li>Smart Backup</li> <li>Smart HUD</li> <li>System Information Viewer</li> <li>USB Blocker</li> </ul> </li> </ul>

1

Unique Features		- USB DAC-UP 2
		- V-Tuner
<ul> <li>Support for Q-Flash</li> </ul>		Support for Q-Flash
	•	Support for Xpress Install
Bundled	•	Norton <sup>®</sup> Internet Security (OEM version)
Software	•	XSplit Gamecaster + Broadcaster (12 months license)
Operating System	*	Support for Windows 10 64-bit
Form Factor	•	ATX Form Factor; 30.5cm x 24.4cm

\* GIGABYTE reserves the right to make any changes to the product specifications and product-related information without prior notice.



Please visit GIGABYTE's website for support lists of CPU, memory modules, SSDs, and M.2 devices.



Please visit the **Support\Utility List** page on GIGABYTE's website to download the latest version of apps.

#### 1-3 Installing the CPU and CPU Cooler



- · Make sure that the motherboard supports the CPU.
- (Go to GIGABYTE's website for the latest CPU support list.)
- Always turn off the computer and unplug the power cord from the power outlet before installing the CPU to prevent hardware damage.
- Locate the pin one of the CPU. The CPU cannot be inserted if oriented incorrectly. (Or you may locate the notches on both sides of the CPU and alignment keys on the CPU socket.)
- Apply an even and thin layer of thermal grease on the surface of the CPU.
- Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage of the CPU may occur.
- Set the CPU host frequency in accordance with the CPU specifications. It is not recommended
  that the system bus frequency be set beyond hardware specifications since it does not meet the
  standard requirements for the peripherals. If you wish to set the frequency beyond the standard
  specifications, please do so according to your hardware specifications including the CPU, graphics
  card, memory, hard drive, etc.

#### 1-3-1 Installing the CPU

A. Locate the alignment keys on the motherboard CPU socket and the notches on the CPU.



Triangle Pin One Marking on the CPU



Please visit GIGABYTE's website for details on hardware installation.

Hardware Installation

B. Follow the steps below to correctly install the CPU into the motherboard CPU socket.



To protect the socket contacts, do not remove the protective plastic cover unless the CPU is
inserted into the CPU socket. Save the cover properly and replace it if the CPU is removed.



Step 1:

Gently press the CPU socket lever handle down and away from the socket with your finger. Then completely lift the CPU socket lever and the metal load plate/plastic cover will be lifted as well.



#### Step 3:

Once the CPU is properly inserted, carefully replace the load plate. When replacing the load plate, make sure the front end of the load plate is under the shoulder screw. Then press the CPU socket lever. The protective plastic cover may pop off from the load plate during the process of engaging the lever. Remove the cover. (Save the cover properly and always replace it when the CPU is not installed.)



#### NOTE:





Hold the CPU with your thumb and index fingers. Align the CPU pin one marking (triangle) with the pin one corner of the CPU socket (or you may align the CPU notches with the socket alignment keys) and gently insert the CPU into position.



#### Step 4:

Finally, secure the lever under its retention tab to complete the installation of the CPU.

Hold the CPU socket lever by the handle, not the lever base portion.

#### 1-3-2 Installing the CPU Cooler

Refer to the steps below to correctly install the CPU cooler on the motherboard. (Actual installation process may differ depending the CPU cooler to be used. Refer to the user's manual for your CPU cooler.)



#### Step 1:

Apply an even and thin layer of thermal grease on the surface of the installed CPU.





Place the cooler atop the CPU, aligning the four push pins through the pin holes on the motherboard. Push down on the push pins diagonally.



Step 5:

After the installation, check the back of the motherboard. If the push pin is inserted as the picture above shows, the installation is complete.



Step 2:

Before installing the cooler, note the direction of the arrow sign — on the male push pin. (Turning the push pin along the direction of arrow is to remove the cooler, on the contrary, is to install.)





You should hear a "click" when pushing down each push pin. Check that the Male and Female push pins are joined closely.

(Refer to your CPU cooler installation manual for instructions on installing the cooler.)



Step 6:

Finally, attach the power connector of the CPU cooler to the CPU fan header (CPU\_FAN) on the motherboard.

Contraction Contraction

Use extreme care when removing the CPU cooler because the thermal grease/tape between the CPU cooler and CPU may adhere to the CPU. Inadequately removing the CPU cooler may damage the CPU.

Hardware Installation

#### 1-4 Installing the Memory

Read the following guidelines before you begin to install the memory:

- Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.
  - (Go to GIGABYTE's website for the latest supported memory speeds and memory modules.)
  - Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
  - Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

#### 1-4-1 Dual Channel Memory Configuration

This motherboard provides four memory sockets and supports Dual Channel Technology. After the memory is installed, the BIOS will automatically detect the specifications and capacity of the memory. Enabling Dual Channel memory mode will double the original memory bandwidth.

The four DDR4 memory sockets are divided into two channels and each channel has two memory sockets as following:

- ▶ Channel A: DDR4\_2, DDR4\_4
- ▶ Channel B: DDR4\_1, DDR4\_3



••	Dual Channe	Memory	Configurations	Table	

	DDR4_4	DDR4_2	DDR4_3	DDR4_1
2 Modules		DS/SS		DS/SS
	DS/SS		DS/SS	
4 Modules	DS/SS	DS/SS	DS/SS	DS/SS

(SS=Single-Sided, DS=Double-Sided, "- -"=No Memory)

Due to CPU limitations, read the following guidelines before installing the memory in Dual Channel mode.

- 1. Dual Channel mode cannot be enabled if only one memory module is installed.
- 2. When enabling Dual Channel mode with two or four memory modules, it is recommended that memory of the same capacity, brand, speed, and chips be used.

#### 1-4-2 Installing a Memory

Before installing a memory module, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the memory module. DDR4 and DDR3 DIMMs are not compatible to each other or DDR2 DIMMs. Be sure to install DDR4 DIMMs on this motherboard.





A DDR4 memory module has a notch, so it can only fit in one direction. Follow the steps below to correctly install your memory modules in the memory sockets.



#### Step 1:

Note the orientation of the memory module. Spread the retaining clips at both ends of the memory socket. Place the memory module on the socket. As indicated in the picture on the left, place your fingers on the top edge of the memory, push down on the memory and insert it vertically into the memory socket.



#### Step 2:

The clips at both ends of the socket will snap into place when the memory module is securely inserted.

#### 1-5 Installing an Expansion Card



Read the following guidelines before you begin to install an expansion card:

- Make sure the motherboard supports the expansion card. Carefully read the manual that came with your expansion card.
- Always turn off the computer and unplug the power cord from the power outlet before installing an
  expansion card to prevent hardware damage.



Follow the steps below to correctly install your expansion card in the expansion slot.

- 1. Locate an expansion slot that supports your card. Remove the metal slot cover from the chassis back panel.
- 2. Align the card with the slot, and press down on the card until it is fully seated in the slot.
- 3. Make sure the metal contacts on the card are completely inserted into the slot.
- 4. Secure the card's metal bracket to the chassis back panel with a screw.
- 5. After installing all expansion cards, replace the chassis cover(s).
- 6. Turn on your computer. If necessary, go to BIOS Setup to make any required BIOS changes for your expansion card(s).
- 7. Install the driver provided with the expansion card in your operating system.

Example: Installing and Removing a PCI Express Graphics Card:



• Installing a Graphics Card:

Gently push down on the top edge of the card until it is fully inserted into the PCI Express slot. Make sure the card is securely seated in the slot and does not rock.



Removing the Card: Gently push back on the lever on the slot and then lift the card straight out from the slot.

#### 1-6 Setting up AMD CrossFire<sup>™</sup>/NVIDIA<sup>®</sup> SLI<sup>™</sup> Configuration

#### A. System Requirements

- Windows 10 64-bit operating system
- A CrossFire/SLI-supported motherboard with two or more PCI Express x16 slots and correct driver
- CrossFire/SLI-ready graphics cards of identical brand and chip and correct driver
- (For the latest GPUs that support the 3-way CrossFire technology, please refer to the AMD website.) (Note 1) - CrossFire (Note 2)/SLI bridge connectors
- A power supply with sufficient power is recommended (Refer to the manual of your graphics cards for the power requirement)

#### B. Connecting the Graphics Cards

Step 1:

Observe the steps in "1-5 Installing an Expansion Card" and install CrossFire/SLI graphics cards on the PCI Express x16 slots. (To set up a 2-Way configuration, we recommend installing the graphics cards on the PCIEX16 and PCIEX8 slots.)

Step 2:

Insert the CrossFire (Note 2)/SLI bridge connectors in the CrossFire/SLI gold edge connectors on top of the cards. Step 3:

Plug the display cable into the graphics card on the PCIEX16 slot.

#### C. Configuring the Graphics Card Driver

C-1. To Enable CrossFire Function

After installing the graphics card driver in the operating system, go to the AMD RADEON SETTINGS screen. Browse to Gaming\Global Settings and ensure AMD CrossFire is set to On.



#### C-2. To Enable SLI Function

After installing the graphics card driver in the operating system, go to the NVIDIA Control Panel. Browse to the Configure SLI, Surround, PhysX screen and ensure Maximize 3D performance is enabled.



(Note 1) When using dual core graphics cards, only 2-way is supported.

(Note 2) The bridge connector(s) may be needed or not depending on your graphics cards.



Procedure and driver screen for enabling CrossFire/SLI technology may differ by graphics cards and driver version. Refer to the manual that came with your graphics cards for more information about enabling CrossFire/SLI technology.

Hardware Installation

#### 1-7 Back Panel Connectors



#### PS/2 Keyboard/Mouse Port

Use this port to connect a PS/2 mouse or keyboard.

#### USB 3.1 Gen 1 Port

The USB 3.1 Gen 1 port supports the USB 3.1 Gen 1 specification and is compatible to the USB 2.0 specification. You can connect a USB DAC to this port or use this port for USB devices.

#### O DisplayPort

DisplayPort delivers high quality digital imaging and audio, supporting bi-directional audio transmission. DisplayPort can support both DPCP and HDCP 2.2 content protection mechanisms. It provides improved visuals supporting Rec. 2020 (Wide Color Gamut) and High Dynamic Range (HDR) for Blu-ray UHD playback. You can use this port to connect your DisplayPort-supported monitor. Note: The DisplayPort Technology can support a maximum resolution of 4096x2304@60 Hz but the actual resolutions supported depend on the monitor being used.

#### HDMI Port

The HDMI port supports HDCP 2.2 and Dolby TrueHD and DTS HD Master Audio formats. It also supports up to 192KHz/16bit 8-channel LPCM audio output. You can use this port to connect your HDMI-supported monitor. The maximum supported resolution is 4096x2160@30 Hz, but the actual resolutions supported are dependent on the monitor being used.

After installing the HDMI/DisplayPort device, make sure to set the default sound playback device to HDMI/DisplayPort. (The item name may differ depending on your operating system.)



For example, in Windows 10, right-click the speaker icon in the notification area and click **Playback devices**. On the **Playback** tab, set **Intel(R) Display Audio** to the default playback device.



- When removing the cable connected to a back panel connector, first remove the cable from your device and then remove it from the motherboard.
- When removing the cable, pull it straight out from the connector. Do not rock it side to side to prevent an electrical short inside the cable connector.

#### USB 3.1 Gen 1 Port

The USB 3.1 Gen 1 port supports the USB 3.1 Gen 1 specification and is compatible to the USB 2.0 specification. Use this port for USB devices.

#### RJ-45 LAN Port (LAN2)

The Gigabit Ethernet LAN port provides Internet connection at up to 1 Gbps data rate. The following describes the states of the LAN port LEDs.

Connection/Sneed LED:



State	Description	State	Description
Orange	1 Gbps data rate	Blinking	Data transmission or receiving is occurring
Green	100 Mbps data rate	Off	No data transmission or receiving is occurring
Off	10 Mbps data rate		

Activity LED

#### 

The reversible USB port supports the USB 3.1 Gen 2 specification and is compatible to the USB 3.1 Gen 1 and USB 2.0 specification. Use this port for USB devices.

#### RJ-45 LAN Port (LAN1)

The Gigabit Ethernet LAN port provides Internet connection at up to 1 Gbps data rate. The following describes the states of the LAN port LEDs.



#### • USB 3.1 Gen 2 Type-A Port (Red)

The USB 3.1 Gen 2 Type-A port supports the USB 3.1 Gen 2 specification and is compatible to the USB 3.1 Gen 1 and USB 2.0 specification. Use this port for USB devices.

#### Center/Subwoofer Speaker Out

Use this audio jack to connect center/subwoofer speakers in a 5.1/7.1-channel audio configuration.

#### Rear Speaker Out

This jack can be used to connect rear speakers in a 4/5.1/7.1-channel audio configuration.

#### Optical S/PDIF Out Connector

This connector provides digital audio out to an external audio system that supports digital optical audio. Before using this feature, ensure that your audio system provides an optical digital audio in connector.

Line In

The line in jack. Use this audio jack for line in devices such as an optical drive, walkman, etc.

Line Out

The line out jack. Use this audio jack for a headphone or 2-channel speaker. This jack can be used to connect front speakers in a 4/5.1/7.1-channel audio configuration.

#### Mic In

The Mic in jack.



If you want to install a Side Speaker, you need to retask either the Line in or Mic in jack to be Side Speaker out through the audio driver. Refer to the instructions on setting up a 2/4/5.1/7.1-channel audio configuration in Chapter 6, "Configuring 2/4/5.1/7.1-Channel Audio."

#### 1-8 Onboard LEDs and Buttons

#### CPU/VGA/DRAM/BOOT (Status LEDs)

The status LEDs show whether the CPU, graphics card, memory, and operating system are working properly after system power-on. If the CPU/VGA/DRAM LED is on, that means the corresponding device is not working normally; if the BOOT LED is on, that means you haven't entered the operating system yet.





#### **Quick Buttons**

This motherboard has 3 quick buttons: power button, reset button and clear CMOS button. The power button and reset button allow users to quickly turn on/off or reset the computer in an open-case environment when they want to change hardware components or conduct hardware testing. Use this button to clear the BIOS configuration and reset the CMOS values to factory defaults when needed.





- Always turn off your computer and unplug the power cord from the power outlet before using the clear CMOS button.
- Do not use the clear CMOS button when the system is on, or the system may shutdown and data loss or damage may occur.
- After system restart, go to BIOS Setup to load factory defaults (select Load Optimized Defaults) or manually configure the BIOS settings (refer to Chapter 2, "BIOS Setup," for BIOS configurations).

#### OC Button (OC)

The OC button helps enthusiasts and overclockers not only get the most performance from their hardware, but also the absolute most enjoyable OC experience. Press this button to load the most optimized GIGABYTE overclocking configuration for your hardware.



#### 1-9 Internal Connectors



1)	ATX_12V_2X4	13)	SATA3 0/1/2/3/4/5
2)	ATX	14)	M2M_32G/M2A_32G/M2P_32G
3)	CPU_FAN	15)	F_PANEL
4)	SYS_FAN1/2/3/4	16)	F_AUDIO
5)	SYS_FAN5_PUMP	17)	SPDIF_O
6)	HPWR_FAN_PUMP	18)	F_USB31C
7)	CPU_OPT	19)	F_USB30
8)	EC_TEMP1/EC_TEMP2	20)	F_USB1/F_USB2
9)	LED_C1/LED_C2	21)	THB_C
10)	D_LED1/D_LED2	22)	CLR_CMOS
11)	DLED_V_SW1/DLED_V_SW2	23)	ТРМ
12)	BAT		

Read the following guidelines before connecting external devices:

- First make sure your devices are compliant with the connectors you wish to connect.
- Before installing the devices, be sure to turn off the devices and your computer. Unplug the power cord from the power outlet to prevent damage to the devices.
- After installing the device and before turning on the computer, make sure the device cable has been securely attached to the connector on the motherboard.

#### 1/2) ATX\_12V\_2X4/ATX (2x4 12V Power Connector and 2x12 Main Power Connector)

With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, first make sure the power supply is turned off and all devices are properly installed. The power connector possesses a foolproof design. Connect the power supply cable to the power connector in the correct orientation.

The 12V power connector mainly supplies power to the CPU. If the 12V power connector is not connected, the computer will not start.

To meet expansion requirements, it is recommended that a power supply that can withstand high power consumption be used (500W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable or unbootable system.





.....

ATX_12V_2X4:			
Pin No.	Definition		
1	GND (Only for 2x4-pin 12V)		
2	GND (Only for 2x4-pin 12V)		
3	GND		
4	GND		
5	+12V (Only for 2x4-pin 12V)		
6	+12V (Only for 2x4-pin 12V)		
7	+12V		
8	+12V		



Pin No.	Definition	Pin No.	Definition
1	3.3V	13	3.3V
2	3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON (soft On/Off)
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	Power Good	20	NC
9	5VSB (stand by +5V)	21	+5V
10	+12V	22	+5V
11	+12V (Only for 2x12-pin	23	+5V (Only for 2x12-pin ATX)
	ATX)		
12	3.3V (Only for 2x12-pin	24	GND (Only for 2x12-pin ATX)
	ATX)		

#### 3/4) CPU\_FAN/SYS\_FAN1/2/3/4 (Fan Headers)

All fan headers on this motherboard are 4-pin. Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The motherboard supports CPU fan speed control, which requires the use of a CPU fan with fan speed control design. For optimum heat dissipation, it is recommended that a system fan be installed inside the chassis.



#### 5) SYS\_FAN5\_PUMP (System Fan/Water Cooling Pump Header)

The fan/pump header is 4-pin and possesses a foolproof insertion design. Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The speed control function requires the use of a fan with fan speed control design. For optimum heat dissipation, it is recommended that a system fan be installed inside the chassis. The header also provides speed control for a water cooling pump, refer to Chapter 2, "BIOS Setup," "M.I.T.," for more information



1	•		•
'	 	-	

	Pin No.	Definition
1     GND       2     Voltage Speed Control       3     Sense		GND
		Voltage Speed Control
		Sense
	4	PWM Speed Control



- Be sure to connect fan cables to the fan headers to prevent your CPU and system from overheating. Overheating may result in damage to the CPU or the system may hang.
- These fan headers are not configuration jumper blocks. Do not place a jumper cap on the headers.

#### 6) HPWR\_FAN\_PUMP (3 Amp Fan/Water Cooling Pump Header)

The fan/pump header is 4-pin and possesses a foolproof insertion design. Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The speed control function requires the use of a fan with fan speed control design. The header also provides speed control for a water cooling pump, refer to Chapter 2, "BIOS Setup," "M.I.T.," for more information





Pin No.	Definition
1	GND
2	Voltage Speed Control
3	Sense
4	PWM Speed Control

Because a 3 Amp fan can run very fast, DO NOT touch it when it is operating to avoid injury.

#### 7) CPU\_OPT (Water Cooling CPU Fan Header)

The fan header is 4-pin and possesses a foolproof insertion design. Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The speed control function requires the use of a fan with fan speed control design.



1				_	
	•	•	•	•	1
			_		

Pin No.	Definition
1	GND
2	Voltage Speed Control
3	Sense
4	PWM Speed Control

 EC\_TEMP1/EC\_TEMP2 (Temperature Sensor Headers) Connect the thermistor cables to the headers for temperature detection.





1 ••• EC\_TEMP2

Pin No.	Definition
1	SENSOR IN
2	GND

#### 9) LED\_C1/LED\_C2 (RGB (RGBW) LED Strip Headers)

The headers can be used to connect a standard 5050 RGB (RGBW) LED strip (12V/G/R/B/W), with maximum power rating of 2A (12V) and maximum length of 2m.



1 ••••• LED\_C1 ••••• 1 LED\_C2

Pin No.	Definition
1	12V
2	G
3	R
4	В
5	W

Connect one end of the RGB (RGBW) LED strip extension cable to the header and the other end to your RGB (RGBW) LED strip. The black wire (marked with a triangle on the plug) of the extension cable must be connected to Pin 1 (12V) of this header. The 12V pin (marked with an arrow) on the other end of the extension cable must be lined up with the 12V of the LED strip. Be careful with the connection orientation of the LED strip; incorrect connection may lead to the damage of the LED strip. If you are connecting a RGBW LED strip (5-pin), combine the two plugs of the extension cable together first. If you are connecting a RGB LED strip (4-pin), use only the 4-pin plug of the extension cable.

Contraction of the second

For how to turn on/off the lights of the LED strip, refer to the instructions on in Chapter 2, "BIOS Setup," "Peripherals," or Chapter 5, "Unique Features," "APP Center\RGB Fusion."



Before installing the devices, be sure to turn off the devices and your computer. Unplug the power cord from the power outlet to prevent damage to the devices.

#### 10) D LED1/D LED2 (Digital LED Strip Headers)

The headers can be used to connect a standard 5050 digital LED strip, with maximum power rating of 2A (12V or 5V) and maximum length of 5m or maximum number of 300 LEDs. There are 12V and 5V digital LED strips. Be sure to verify the voltage requirements of your digital LED strip and set the DLED\_V\_SW1 and DLED\_V\_SW2 jumpers accordingly.



1 .... D LED1

Pin No.	Definition
1	V
2	D
3	G

Connecting a 4-pin digital LED strip (using the included digital LED strip adapter cable):

Connecting a 3-pin digital LED strip:



Digital LED Strip The power pin (marked with a triangle on the plug) of the LED strip must be connected to Pin 1 of the digital LED strip header. Incorrect connection may lead to the damage of the LED strip.



••••1

D LED2

Connect one end of the included digital LED strip adapter cable to this header and the other end to your digital LED strip. The triangle marking on the plug of the adapter cable must be connected to Pin 1 of the header. The "V" pin of the other end of the adapter cable must be connected to the power pin (marked with a triangle) of the LED strip. Incorrect connection may lead to the damage of the LED strip.



For how to turn on/off the lights of the LED strip, refer to the instructions on in Chapter 2, "BIOS Setup," "Peripherals," or Chapter 5, "Unique Features," "APP Center\RGB Fusion."



Before installing the devices, be sure to turn off the devices and your computer. Unplug the power cord from the power outlet to prevent damage to the devices.

#### 11) DLED\_V\_SW1/DLED\_V\_SW2 (Digital LED Strip Power Select Jumpers)

The jumpers allow you to select the supply voltage of the D\_LED1 and D\_LED2 headers. Be sure to verify the voltage requirements of your digital LED strip and set the correct voltage with this jumper before connection. Incorrect connection may lead to the damage of the LED strip.



1	1-2: 5V (Default)	•••1	1-2: 5V (Default)
1 •••	2-3: 12V	•••1	2-3: 12V
DLED_V_S\	W1	DLED_	V_SW2

Hardware Installation

#### 12) BAT (Battery)

The battery provides power to keep the values (such as BIOS configurations, date, and time information) in the CMOS when the computer is turned off. Replace the battery when the battery voltage drops to a low level, or the CMOS values may not be accurate or may be lost.





You may clear the CMOS values by removing the battery:

- 1. Turn off your computer and unplug the power cord.
- Gently remove the battery from the battery holder and wait for one minute. (Or use a metal object like a screwdriver to touch the positive and negative terminals of the battery holder, making them short for 5 seconds.)
- 3. Replace the battery.
- 4. Plug in the power cord and restart your computer.



Always turn off your computer and unplug the power cord before replacing the battery.

- Replace the battery with an equivalent one. Damage to your devices may occur if the battery is replaced with an incorrect model.
- Contact the place of purchase or local dealer if you are not able to replace the battery by yourself
  or uncertain about the battery model.
- When installing the battery, note the orientation of the positive side (+) and the negative side (-)
  of the battery (the positive side should face up).
- Used batteries must be handled in accordance with local environmental regulations.

#### 13) SATA3 0/1/2/3/4/5 (SATA 6Gb/s Connectors)

The SATA connectors conform to SATA 6Gb/s standard and are compatible with SATA 3Gb/s and SATA 1.5Gb/s standard. Each SATA connector supports a single SATA device. The Intel® Chipset supports RAID 0, RAID 1, RAID 5, and RAID 10. Refer to Chapter 3, "Configuring a RAID Set," for instructions on configuring a RAID array.



To enable hot-plugging for the SATA ports, refer to Chapter 2, "BIOS Setup," "Peripherals\SATA And RST Configuration," for more information.

#### 14) M2M\_32G/M2A\_32G/M2P\_32G (M.2 Socket 3 Connectors)

The M.2 connectors support M.2 SATA SSDs or M.2 PCIe SSDs and support RAID configuration. Please note that an M.2 PCIe SSD cannot be used to create a RAID set either with an M.2 SATA SSD or a SATA hard drive. To create a RAID array with an M.2 PCIe SSD, you must set up the configuration in UEFI BIOS mode. Refer to Chapter 3, "Configuring a RAID Set," for instructions on configuring a RAID array.



Follow the steps below to correctly install an M.2 SSD in the M.2 connector.



#### Step 1:

Get a screw and a standoff from the included M.2 screw kit. Locate the M.2 connector where you will install the M.2 SSD, use a screwdriver to unfasten the screw on the heatsink and then remove the heatsink. (Only the M2M 32G connector has the heatsink)



#### Step 3:

Press the M.2 SSD down and then secure it with the screw. Replace the heatsink and secure it to the original hole.



#### Step 2:

Locate the proper mounting hole for the M.2 SSD to be installed and then tighten the standoff first. Insert the M.2 SSD into the M.2 connector at an angle.





The installation is completed, as shown in the picture above.



Select the proper hole for the M.2 SSD to be installed and refasten the screw and nut.

Hardware Installation

#### Installation Notices for the PCIEX4, M.2 and SATA Connectors:

Due to the limited number of lanes provided by the Chipset, the availability of the SATA connectors may be affected by the type of device installed in the M2. sockets. The M2M\_32G connector shares bandwidth with the SATA3 4, 5 connectors; the M2A\_32G connector shares bandwidth with the SATA3 0; the M2P\_32G connector shares bandwidth with the PCIEX4 connector. Refer to the following tables for details.

• M2M_32G:						
Type of M.2 SSD	SATA3 0	SATA3 1	SATA3 2	SATA3 3	SATA3 4	SATA3 5
M.2 SATA SSD	>	*	*	*	×	×
M.2 PCIe SSD	>	<b>*</b>	<b>*</b>	<b>*</b>	×	×
No M.2 SSD Installed	<b>,</b>	~	~	~	~	~

✓ : Available, ★: Not available

#### • M2A\_32G:

Type of M.2 SSD	SATA3 0	SATA3 1	SATA3 2	SATA3 3	SATA3 4	SATA3 5
M.2 SATA SSD	×	*	~	>	*	*
M.2 PCIe SSD	~	*	~	*	~	~
No M.2 SSD Installed	*	*	~	*	~	~

✓ : Available, ★: Not available

#### • M2P\_32G:

Type of M.2 SSD	PCIEX4	SATA3 0	SATA3 1	SATA3 2	SATA3 3	SATA3 4	SATA3 5
M.2 PCIe SSD*	🗸 (Note)	*	*	*	>	*	>
No M.2 SSD Installed	*	~	~	~	~	~	*

✓ : Available, X: Not available

\* The M2P\_32G supports PCIe SSDs only.

(Note) The PCIEX4 slot shares bandwidth with the M2P\_32G connector. The PCIEX4 slot operates at up to x2 mode when a PCIe SSD is installed in the M2P\_32G connector.

#### 15) F\_PANEL (Front Panel Header)

Connect the power switch, reset switch, speaker, chassis intrusion switch/sensor and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.





• PLED/PWR\_LED (Power LED, Yellow/Purple):

System Status	LED	C
S0	On	is
S3/S4/S5	Off	S

Connects to the power status indicator on the chassis front panel. The LED s on when the system is operating. The LED is off when the system is in S3/ S4 sleep state or powered off (S5).

• PW (Power Switch, Red):

Connects to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch (refer to Chapter 2, "BIOS Setup," "Power," for more information).

- SPEAK (Speaker, Orange): Connects to the speaker on the chassis front panel. The system reports system startup status by issuing a beep code. One single short beep will be heard if no problem is detected at system startup.
- HD (Hard Drive Activity LED, Blue): Connects to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.
- RES (Reset Switch, Green): Connects to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.
- CI (Chassis Intrusion Header, Gray): Connects to the chassis intrusion switch/sensor on the chassis that can detect if the chassis cover has been removed. This function requires a chassis with a chassis intrusion switch/sensor.
- NC (Orange): No Connection.



The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

#### 16) F\_AUDIO (Front Panel Audio Header)

The front panel audio header supports Intel® High Definition audio (HD). You may connect your chassis front panel audio module to this header. Make sure the wire assignments of the module connector match the pin assignments of the motherboard header. Incorrect connection between the module connector and the motherboard header will make the device unable to work or even damage it.





Pin No. Definition MIC2 L 1 2 GND 3 MIC2 R NC 4 5 LINE2\_R 6 Sense 7 GND 8 No Pin 9 LINE2\_L 10 Sense

Some chassis provide a front panel audio module that has separated connectors on each wire instead of a single plug. For information about connecting the front panel audio module that has different wire assignments, please contact the chassis manufacturer.

#### 17) SPDIF\_O (S/PDIF Out Header)

This header supports digital S/PDIF Out and connects a S/PDIF digital audio cable (provided by expansion cards) for digital audio output from your motherboard to certain expansion cards like graphics cards and sound cards. For example, some graphics cards may require you to use a S/PDIF digital audio cable for digital audio output from your motherboard to your graphics card if you wish to connect an HDMI display to the graphics card and have digital audio output from the HDMI display at the same time. For information about connecting the S/PDIF digital audio cable, carefully read the manual for your expansion card.





Pin No.	Definition
1	5VDUAL
2	No Pin
3	SPDIFO
4	GND

#### 18) F\_USB31C (USB Type-C<sup>™</sup> Header with USB 3.1 Gen 2 Support)

The header conforms to USB 3.1 Gen 2 specification and can provide one USB port.



Pin No.	Definition	Pin No.	Definition
1	VBUS	11	VBUS
2	TX1+	12	TX2+
3	TX1-	13	TX2-
4	GND	14	GND
5	RX1+	15	RX2+
6	RX1-	16	RX2-
7	VBUS	17	GND
8	CC1	18	D-
9	SBU1	19	D+
10	SBU2	20	CC2

#### 19) F\_USB30 (USB 3.1 Gen 1 Header)

The header conforms to USB 3.1 Gen 1 and USB 2.0 specification and can provide two USB ports. For purchasing the optional 3.5" front panel that provides two USB 3.1 Gen 1 ports, please contact the local dealer.



Pin No.	Definition	Pin No.	Definition
1	VBUS	11	D2+
2	SSRX1-	12	D2-
3	SSRX1+	13	GND
4	GND	14	SSTX2+
5	SSTX1-	15	SSTX2-
6	SSTX1+	16	GND
7	GND	17	SSRX2+
8	D1-	18	SSRX2-
9	D1+	19	VBUS
10	NC	20	No Pin



Prior to installing the USB bracket, be sure to turn off your computer and unplug the power cord from the power outlet to prevent damage to the USB bracket.
#### 20) F\_USB1/F\_USB2 (USB 2.0/1.1 Headers)

The headers conform to USB 2.0/1.1 specification. Each USB header can provide two USB ports via an optional USB bracket. For purchasing the optional USB bracket, please contact the local dealer.

9 10



Pin No.	Definition
1	Power (5V)
2	Power (5V)
3	USB DX-
4	USB DY-
5	USB DX+
6	USB DY+
7	GND
8	GND
9	No Pin
10	NC



- Do not plug the IEEE 1394 bracket (2x5-pin) cable into the USB 2.0/1.1 header.
- Prior to installing the USB bracket, be sure to turn off your computer and unplug the power cord from the power outlet to prevent damage to the USB bracket.

#### 21) THB\_C (Thunderbolt<sup>™</sup> Add-in Card Connector)

This connector is for a GIGABYTE Thunderbolt<sup>™</sup> add-in card.



Supports a Thunderbolt<sup>™</sup> add-in card.

#### 22) CLR\_CMOS (Clear CMOS Jumper)

Use this jumper to clear the BIOS configuration and reset the CMOS values to factory defaults. To clear the CMOS values, use a metal object like a screwdriver to touch the two pins for a few seconds.



Open: Normal
 Short: Clear CMOS Values



- Always turn off your computer and unplug the power cord from the power outlet before clearing the CMOS values.
- After system restart, go to BIOS Setup to load factory defaults (select Load Optimized Defaults) or manually configure the BIOS settings (refer to Chapter 2, "BIOS Setup," for BIOS configurations).

#### 23) TPM (Trusted Platform Module Header)

You may connect a TPM (Trusted Platform Module) to this header.





Pin No.	Definition
1	LAD0
2	VCC3
3	LAD1
4	No Pin
5	LAD2
6	LCLK
7	LAD3
8	GND
9	LFRAME
10	NC
11	SERIRQ
12	LRESET

# Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) records hardware parameters of the system in the CMOS on the motherboard. Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters and loading operating system, etc. BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features.

When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS.

To access the BIOS Setup program, press the <Delete> key during the POST when the power is turned on.

To upgrade the BIOS, use either the GIGABYTE Q-Flash or @BIOS utility.

- Q-Flash allows the user to quickly and easily upgrade or back up BIOS without entering the operating system.
- @BIOS is a Windows-based utility that searches and downloads the latest version of BIOS from the Internet and updates the BIOS.

For instructions on using the Q-Flash and @BIOS utilities, refer to Chapter 5, "BIOS Update Utilities."



- Because BIOS flashing is potentially risky, if you do not encounter problems using the current version of BIOS, it is recommended that you not flash the BIOS. To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction.
- It is recommended that you not alter the default settings (unless you need to) to prevent system
  instability or other unexpected results. Inadequately altering the settings may result in system's
  failure to boot. If this occurs, try to clear the CMOS values and reset the board to default values.
  (Refer to the "Load Optimized Defaults" section in this chapter or introductions of the battery or the
  clear CMOS jumper/button in Chapter 1 for how to clear the CMOS values.)

## 2-1 Startup Screen

The following startup Logo screen will appear when the computer boots.



#### Function Keys:

#### <DEL>: BIOS SETUP\Q-FLASH

Press the <Delete> key to enter BIOS Setup or to access the Q-Flash utility in BIOS Setup.

#### <F9>: SYSTEM INFORMATION

Press the <F9> key to display your system information.

#### <F12>: BOOT MENU

Boot Menu allows you to set the first boot device without entering BIOS Setup. In Boot Menu, use the up arrow key <1> or the down arrow key <1> to select the first boot device, then press <Enter> to accept. The system will boot from the device immediately.

Note: The setting in Boot Menu is effective for one time only. After system restart, the device boot order will still be based on BIOS Setup settings.

#### <END>: Q-FLASH

Press the <End> key to access the Q-Flash utility directly without having to enter BIOS Setup first.

## 2-2 The Main Menu

#### **Classic Setup**

The Classic Setup mode provides detailed BIOS settings. You can press the arrow keys on your keyboard to move among the items and press <Enter> to accept or enter a sub-menu. Or you can use your mouse to select the item you want.

#### (Sample BIOS Version: D9)



Configuration Items Current Settings

Quick Access Bar allows you to enter Easy Mode, select BIOS default language, configure fan settings, or enter Q-Flash.

#### **Classic Setup Function Keys**

<←><→>	Move the selection bar to select a setup menu
<↑><↓>	Move the selection bar to select an configuration item on a menu
<enter></enter>	Execute command or enter a menu
<+>/ <page up=""></page>	Increase the numeric value or make changes
<->/ <page down=""></page>	Decrease the numeric value or make changes
<f1></f1>	Show descriptions of the function keys
<f2></f2>	Switch to Easy Mode
<f5></f5>	Restore the previous BIOS settings for the current submenus
<f7></f7>	Load the Optimized BIOS default settings for the current submenus
<f8></f8>	Access the Q-Flash utility
<f9></f9>	Display system information
<f10></f10>	Save all the changes and exit the BIOS Setup program
<f12></f12>	Capture the current screen as an image and save it to your USB drive
<esc></esc>	Main Menu: Exit the BIOS Setup program
	Submenus: Exit current submenu

#### B. Easy Mode

Easy Mode allows users to quickly view their current system information or to make adjustments for optimum performance. In Easy Mode, you can use your mouse to move through configuration items or press <F2> to switch to the Classic Setup screen.



## 2-3 M.I.T.



Whether the system will work stably with the overclock/overvoltage settings you made is dependent on your overall system configurations. Incorrectly doing overclock/overvoltage may result in damage to CPU, chipset, or memory and reduce the useful life of these components. This page is for advanced users only and we recommend you not to alter the default settings to prevent system instability or other unexpected results. (Inadequately altering the settings may result in system's failure to boot. If this occurs, clear the CMOS values and reset the board to default values.)

Advanced Frequency Settings



#### CPU Base Clock

Allows you to manually set the CPU base clock in 0.01 MHz increments. (Default: Auto) **Important:** It is highly recommended that the CPU frequency be set in accordance with the CPU specifications.

- Host Clock Value This value changes with the CPU Base Clock setting.
- Graphics Slice Ratio (Note)
   Allows you to set the Graphics Slice Ratio.
- Graphics UnSlice Ratio (Note)
   Allows you to set the Graphics UnSlice Ratio.
- CPU Upgrade (Note)
- Allows you to set the CPU frequency. Options may vary depending on the CPU being used. (Default: Auto)
  - Allows you to alter the clock ratio for the installed CPU. The adjustable range is dependent on the CPU being installed.
- CPU Frequency
   Displays the current operating CPU frequency.
- ☞ FCLK Frequency for Early Power On

Allows you to set the FCLK frequency. Options are: Normal(800Mhz), 1GHz, 400MHz. (Default: 1GHz)

Advanced CPU Core Settings

		GIGABYTE	08/02/2017
M.I.T.		Peripherals Chipset Powe	wednesday 1
CPU Clock Rat		Auto	32
CPU Frequenc		3.19GHz	3.20GHz
FCLK Frequen	icy for Early Power On	1GHz	
AVX Offset		Auto	
Uncore Ratio		Auto	
Uncore Frequ	ency	3.19GHz	3.20GHZ
CPU Flex Ratio	o Override	Disabled	
CPU Flex Ratio	o Settings	32	
Intel(R) Turbo	Boost Technology	Auto	
Turbo Ratio	(1-Core Active)	Auto	36
Turbo Ratio	(2-Core Active)	Auto	36
Turbo Ratio	(3-Core Active)	Auto	35
Turbo Ratio	(4-Core Active)	Auto	34
Turbo Ratio	(S-COTE ACCIVE)	Auto	34
TUIDO RACIO	(o-core Accive)	AULO	34
Package Pow	er Limit 1 - TDP (watts)	Auto	95
Package Pow	er Limit 7 (Makka)	Auto	10
Package Pow	er Limit2 (Watts)	Auto	33
Package Pow	er Limitz Time	Auto	33
Platform Pow	er Limit I (watts)	Auto	93
Platform Dow	er Limit? (Matte)	Auto	95
Placionin Pow	(Matte)	Auto	95
Power Limits	(watts)	Auto	55
Power Linits	Time	Auto	
-			
Back			

#### ∽ CPU Clock Ratio, CPU Frequency, FCLK Frequency for Early Power On

The settings above are synchronous to those under the same items on the **Advanced Frequency Settings** menu.

C AVX Offset (Note)

AVX offset is the negative offset of AVX ratio.

∽ Uncore Ratio

Allows you to set the CPU Uncore ratio. The adjustable range is dependent on the CPU being used.

#### ☞ Uncore Frequency

Displays the current CPU Uncore frequency.

(Note) This item is present only when you install a CPU that supports this feature. For more information about Intel® CPUs' unique features, please visit Intel's website.

**BIOS Setup** 

#### ∽ CPU Flex Ratio Override

Enables or disables the CPU Flex Ratio. The maximum CPU clock ratio will be based on the **CPU Flex Ratio Settings** value if **CPU Clock Ratio** is set to **Auto**. (Default: Disabled)

∽ CPU Flex Ratio Settings

Allows you to set the CPU Flex Ratio. The adjustable range may vary by CPU.

#### Intel(R) Turbo Boost Technology (Note)

Allows you to determine whether to enable the Intel® CPU Turbo Boost technology. Auto lets the BIOS automatically configure this setting. (Default: Auto)

#### Turbo Ratio (Note)

Allows you to set the CPU Turbo ratios for different number of active cores. Auto sets the CPU Turbo ratios according to the CPU specifications. (Default: Auto)

#### ∽ Power Limit TDP (Watts) / Power Limit Time

Allows you to set the power limit for CPU Turbo mode and how long it takes to operate at the specified power limit. If the specified value is exceeded, the CPU will automatically reduce the core frequency in order to reduce the power. **Auto** sets the power limit according to the CPU specifications. (Default: Auto)

#### ∽ Core Current Limit (Amps)

Allows you to set a current limit for CPU Turbo mode. When the CPU current exceeds the specified current limit, the CPU will automatically reduce the core frequency in order to reduce the current. **Auto** sets the power limit according to the CPU specifications. (Default: Auto)

#### Turbo Per Core Limit Control (Note)

Allows you to control each CPU core limit separately. (Default: Auto)

#### ∽ No. of CPU Cores Enabled (Note)

Allows you to select the number of CPU cores to enable in an Intel® multi-core CPU (the number of CPU cores may vary by CPU). **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### ∽ Hyper-Threading Technology (Note)

Allows you to determine whether to enable multi-threading technology when using an Intel® CPU that supports this function. This feature only works for operating systems that support multi-processor mode. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### ∽ Intel(R) Speed Shift Technology (Intel<sup>®</sup> Speed Shift Technology) <sup>(Note)</sup>

Enables or disables Intel® Speed Shift Technology. Enabling this feature allows the processor to ramp up its operating frequency more quickly and then improves the system responsiveness. (Default: Disabled)

#### ∽ CPU Enhanced Halt (C1E) (Note)

Enables or disables Intel® CPU Enhanced Halt (C1E) function, a CPU power-saving function in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### C3 State Support (Note)

Allows you to determine whether to let the CPU enter C3 mode in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. The C3 state is a more enhanced power-saving state than C1. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### C6/C7 State Support (Note)

Allows you to determine whether to let the CPU enter C6/C7 mode in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. The C6/C7 state is a more enhanced power-saving state than C3. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

(Note) This item is present only when you install a CPU that supports this feature. For more information about Intel® CPUs' unique features, please visit Intel's website.

#### C8 State Support (Note 1)

Allows you to determine whether to let the CPU enter C8 mode in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. The C8 state is a more enhanced power-saving state than C6/C7. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### C10 State Support (Note 1)

Allows you to determine whether to let the CPU enter C10 mode in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. The C10 state is a more enhanced power-saving state than C8. **Auto** lets the BIOS automatically configure this setting. (Default: Disabled)

#### Package C State Limit (Note 1)

Allows you to specify the C-state limit for the processor. Auto lets the BIOS automatically configure this setting. (Default: Auto)

#### CPU Thermal Monitor (Note 1)

Enables or disables Intel® Thermal Monitor function, a CPU overheating protection function. When enabled, the CPU core frequency and voltage will be reduced when the CPU is overheated. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### Ring to Core offset (Down Bin)

Allows you to determine whether to disable the CPU Ring ratio auto-down function. Auto lets the BIOS automatically configure this setting. (Default: Auto)

#### CPU EIST Function (Note 1)

Enables or disables Enhanced Intel® Speed Step Technology (EIST). Depending on CPU loading, Intel® EIST technology can dynamically and effectively lower the CPU voltage and core frequency to decrease average power consumption and heat production. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### Race To Halt (RTH) (Note 1)/Energy Efficient Turbo (Note 1) Enables or disables the CPU power saving related settings.

#### Voltage Optimization

Allows you to determine whether to enable voltage optimization to reduce power consumption. (Default: Auto)

#### Hardware Prefetcher

Allows you to determine whether to enable hardware prefetcher to prefetch data and instructions from the memory into the cache. (Default: Auto)

#### Adjacent Cache Line Prefetch

Allows you to determine whether to enable the adjacent cache line prefetch mechanism that lets the processor retrieve the requested cache line as well as the subsequent cache line. (Default: Enabled)

#### Extreme Memory Profile (X.M.P.) (Note 2)

Allows the BIOS to read the SPD data on XMP memory module(s) to enhance memory performance when enabled.

- ➡ Disabled Disables this function. (Default)
- ▶ Profile1 Uses Profile 1 settings.
- ► Profile2 (Note 2) Uses Profile 2 settings.
- (Note 1) This item is present only when you install a CPU that supports this feature. For more information about Intel® CPUs' unique features, please visit Intel's website.
- (Note 2) This item is present only when you install a CPU and a memory module that support this feature.

**BIOS Setup** 

#### ∽ System Memory Multiplier

Allows you to set the system memory multiplier. Auto sets memory multiplier according to memory SPD data. (Default: Auto)

- Memory Ref Clock Allows you to manually adjust the memory reference clock. (Default: Auto)
- Memory Odd Ratio (100/133 or 200/266) Enabled allows Qclk to run in odd frequency. (Default: Auto)
- ∽ Memory Frequency (MHz)

The first memory frequency value is the normal operating frequency of the memory being used; the second is the memory frequency that is automatically adjusted according to the **System Memory Multiplier** settings.

#### Advanced Memory Settings

			GIO	<b>GABYTE</b>		08/02/2017
M.I.T.	System		Peripherals	Chipset	Power Save & Ex	Wednesday 13:
Extreme Men	norv Profile(X.	M.P.)		Disable	d\\\\\\\	
System Mem	ory Multiplier			Auto	21.33	
Memory Ref (	Clock			Auto		
Memory Odd	Ratio (100/13	3 or 200/266	)	Auto		
Memory Bool	t Mode			Auto		
Memory Freq	uency(MHz)			2132MF	z 2133MHz	
Realtime Mer	mory Timing			Auto		
Memory Enh	ancement Set	tings		Normal		
Memory Timi	ng Mode			Auto		
Profile DDR V	/oltage					
Memory Mult	iplier Tweake					
Channel Inte	rleaving					
Rank Interlea						
Channel A Me	emory Sub Tin	nings				
Channel B Me	emory Sub Tin	nings				
Esc Bac	k					
				<b>*</b>		

☞ Extreme Memory Profile (X.M.P.) (Note), System Memory Multiplier, Memory Ref Clock,

#### Memory Odd Ratio (100/133 or 200/266), Memory Frequency(MHz)

The settings above are synchronous to those under the same items on the **Advanced Frequency Settings** menu.

#### C Memory Boot Mode (Note)

Provides memory detection and training methods.

► Auto	Lets the BIOS automatically configure this setting. (Default)
➡ Normal	The BIOS automatically performs memory training. Please note that if the system
	becomes unstable or unbootable, try to clear the CMOS values and reset the board
	to default values. (Refer to the introductions of the battery/clear CMOS jumper/
	button in Chapter 1 for how to clear the CMOS values.)
➡ Enable Fast Boot	Skip memory detection and training in some specific criteria for faster memory

- Enable Fast Boot Skip memory detection and training in some specific criteria for faster memory boot.
- ➡ Disable Fast Boot Detect and train memory at every single boot.
- (Note) This item is present only when you install a CPU and a memory module that support this feature.

#### ∽ Realtime Memory Timing

Allows you to fine-tune memory timings after the BIOS stage. (Default: Auto)

#### ∽ Memory Enhancement Settings

Provides several memory performance enhancement settings: Normal (basic performance), Relax OC, Enhanced Stability, and Enhanced Performance. (Default: Normal)

#### ∽ Memory Timing Mode

Manual and Advanced Manual allows the Memory Multiplier Tweaker, Channel Interleaving, Rank Interleaving, and memory timing settings below to be configurable. Options are: Auto (default), Manual, Advanced Manual.

#### ☞ Profile DDR Voltage

When using a non-XMP memory module or **Extreme Memory Profile (X.M.P.)** is set to **Disabled**, the value is displayed according to your memory specification. When **Extreme Memory Profile (X.M.P.)** is set to **Profile1** or **Profile2**, the value is displayed according to the SPD data on the XMP memory.

#### Memory Multiplier Tweaker

Provides different levels of memory auto-tuning. (Default: Auto)

#### ∽ Channel Interleaving

Enables or disables memory channel interleaving. **Enabled** allows the system to simultaneously access different channels of the memory to increase memory performance and stability. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### ∽ Rank Interleaving

Enables or disables memory rank interleaving. **Enabled** allows the system to simultaneously access different ranks of the memory to increase memory performance and stability. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### Channel A/B Memory Sub Timings

This sub-menu provides memory timing settings for each channel of memory. The respective timing setting screens are configurable only when **Memory Timing Mode** is set to **Manual** or **Advanced Manual**. Note: Your system may become unstable or fail to boot after you make changes on the memory timings. If this occurs, please reset the board to default values by loading optimized defaults or clearing the CMOS values.

Advanced Voltage Settings



Advanced Power Settings

GIGABYTE						08/02/20	17 43.55	
M.I.T.	System	BIOS	Peripherals	Chipset	Power	Save & Exit	Wednesd	<sub>day</sub> 13:55
Load line cc CPU Vcore I VAXG Load	ompensation Loadine Calibra Line Calibration	tion		Auto	222111111111			
Esc Ba	ack			~				

#### Advanced Power Settings

#### ∽ CPU Vcore Loadline Calibration

Allows you to configure Load-Line Calibration for the CPU Vcore voltage. Selecting a higher level keeps the CPU Vcore voltage more consistent with what is set in BIOS under heavy load. **Auto** lets the BIOS automatically configure this setting and sets the voltage following Intel's specifications. (Default: Auto)

#### VAXG Loadline Calibration

Allows you to configure Load-Line Calibration for the CPU VAXG voltage. Selecting a higher level keeps the CPU VAXG voltage more consistent with what is set in BIOS under heavy load. **Auto** lets the BIOS automatically configure this setting and sets the voltage following Intel's specifications. (Default: Auto)

#### CPU Core Voltage Control

This section provides CPU voltage control options.

#### Chipset Voltage Control

This section provides Chipset voltage control options.

#### DRAM Voltage Control

This section provides memory voltage control options.

#### Internal VR Control

This section provides VR voltage control options.

#### PC Health Status

		08/02/2017 4 5 5 5	
Ø	M.I.T. System	BIOS Peripherals Chipset Power Save & Exit	Wednesday 13:55
	Reset Case Open Status Case Open CPU VCGR CPU VCCGA CPU VCCGD DDRVt A/B DDRVOP A/B +33V +5V PCH Core +12V CPU VAXG	Visabled VES 1.044 V 0.946 V 0.583 V 2.521 V 3.205 V 4.950 V 1.045 V 11.880 V 0.000 V	

#### ∽ Reset Case Open Status

>> Disabled Keeps or clears the record of previous chassis intrusion status. (Default)

➤ Enabled Clears the record of previous chassis intrusion status and the Case Open field will show "No" at next boot.

#### 🗢 Case Open

Displays the detection status of the chassis intrusion detection device attached to the motherboard CI header. If the system chassis cover is removed, this field will show "Yes", otherwise it will show "No". To clear the chassis intrusion status record, set **Reset Case Open Status** to **Enabled**, save the settings to the CMOS, and then restart your system.

#### CPU Vcore/CPU VCCSA/CPU VCCIO/DDRVtt A/B/DRAM Channel A/B Voltage/DDRVpp A/B/+3.3V/+5V/PCH Core/+12V/CPU VAXG

Displays the current system voltages.

#### Miscellaneous Settings



#### Max Link Speed

Allows you to set the operation mode of the PCI Express slots to Gen 1, Gen 2, or Gen 3. Actual operation mode is subject to the hardware specification of each slot. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

#### → 3DMark01 Enhancement

Allows you to determine whether to enhance some legacy benchmark performance. (Default: Disabled)

#### Smart Fan 5 Settings

	GIGABY	08/02/2017 13
Monitor	CPU FAN	(a) Temperature 44.0 °C (c) Temperature 44.0 °C (c) Temperature 44.0 °C
100%	100°C	CPU Temperature Warning Control CPU Temperature Disabled CPU Fan Fail Warning Disabled * Disabled * Enabled
CPU Fan Speed Contr Fan Control Use Temp Temperature Interval CPU Fan Control mod CPU FAN Stop	ol Normal o ol CPU o erature Input CPU o e Auto o Disabled o	(b)         CPU         44.0 °C         (c)         System 1         31.0 °           (c)         System 2         32.0 °C         (c)         PCIEX         35.0 °C           (c)         CPCIEX16         28.0 °C         (c)         VENMONS         42.0 °C           (c)         PCIEX16         28.0 °C         (c)         VENMONS         42.0 °C           (c)         PCIEX18         29.0 °C         (c)         EC_TEMP1         - °C

#### Smart Fan 5 Settings

#### つ Monitor

Allows you to select a target to monitor and to make further adjustment. (Default: CPU FAN)

#### ☞ Fan Speed Control

Allows you to determine whether to enable the fan speed control function and adjust the fan speed.

► Normal	Allows the fan to run at different speeds according to the temperature. You can adjust
	the fan speed with System Information Viewer based on your system requirements.
	(Default)

- Silent Allows the fan to run at slow speeds.
- Manual Allows you to control the fan speed in the curve graph.
- ➡ Full Speed Allows the fan to run at full speeds.

#### ∽ Fan Control Use Temperature Input

Allows you to select the reference temperature for fan speed control.

#### ☞ Temperature Interval

Allows you to select the temperature interval for fan speed change.

#### ∽ Fan/Pump Control Mode

Auto Lets the BIOS automatically detect the type of fan/pump installed and sets the optimal control mode. (Default)

▶ PWM PWM mode is recommended for a 4-pin fan/pump.

#### ☞ Fan/Pump Stop

Enables or disables the fan/pump stop function. You can set the temperature limit using the temperature curve. The fan or pump stops operation when the temperature is lower than the limit. (Default: Disabled)

#### ∽ Temperature

Displays the current temperature of the selected target area.

#### ☞ Fan Speed

Displays current fan/pump speeds.

☞ Flow Rate Displays the flow rate of your water cooling system.

#### ☞ Temperature Warning Control

Sets the warning threshold for temperature. When temperature exceeds the threshold, BIOS will emit warning sound. Options are: Disabled (default), 60°C/140°F, 70°C/158°F, 80°C/176°F, 90°C/194°F.

#### ∽ Fan/Pump Fail Warning

Allows the system to emit warning sound if the fan/pump is not connected or fails. Check the fan/pump condition or fan/pump connection when this occurs. (Default: Disabled)

## 2-4 System



This section provides information on your motherboard model and BIOS version. You can also select the default language used by the BIOS and manually set the system time.

#### Access Level

Displays the current access level depending on the type of password protection used. (If no password is set, the default will display as **Administrator**.) The Administrator level allows you to make changes to all BIOS settings; the User level only allows you to make changes to certain BIOS settings but not all.

#### ☞ System Language

Selects the default language used by the BIOS.

#### ∽ System Date

Sets the system date. The date format is week (read-only), month, date, and year. Use <Enter> to switch between the Month, Date, and Year fields and use the <Page Up> or <Page Down> key to set the desired value.

#### ∽ System Time

Sets the system time. The time format is hour, minute, and second. For example, 1 p.m. is 13:00:00. Use <Enter> to switch between the Hour, Minute, and Second fields and use the <Page Up> or <Page Down> key to set the desired value.

## 2-5 BIOS



#### Bootup NumLock State

Enables or disables Numlock feature on the numeric keypad of the keyboard after the POST. (Default: On)

#### Security Option

Specifies whether a password is required every time the system boots, or only when you enter BIOS Setup. After configuring this item, set the password(s) under the Administrator Password/User Password item.

Setup A password is only required for entering the BIOS Setup program.

System A password is required for booting the system and for entering the BIOS Setup program. (Default)

#### ∽ Full Screen LOGO Show

Allows you to determine whether to display the GIGABYTE Logo at system startup. **Disabled** skips the GIGABYTE Logo when the system starts up. (Default: Enabled)

#### ☞ Boot Option Priorities

Specifies the overall boot order from the available devices. Removable storage devices that support GPT format will be prefixed with "UEFI:" string on the boot device list. To boot from an operating system that supports GPT partitioning, select the device prefixed with "UEFI:" string.

Or if you want to install an operating system that supports GPT partitioning such as Windows 10 64-bit, select the optical drive that contains the Windows 10 64-bit installation disk and is prefixed with "UEFI:" string.

#### ∽ Hard Drive/CD/DVD ROM Drive/Floppy Drive/Network Device BBS Priorities

Specifies the boot order for a specific device type, such as hard drives, optical drives, floppy disk drives, and devices that support Boot from LAN function, etc. Press <Enter> on this item to enter the submenu that presents the devices of the same type that are connected. This item is present only if at least one device for this type is installed.

#### Fast Boot

Enables or disables Fast Boot to shorten the OS boot process. **Ultra Fast** provides the fastest bootup speed. (Default: Disabled)

#### ☞ SATA Support

➡ Last Boot HDD Only Except for the previous boot drive, all SATA devices are disabled before the OS boot process completes.

All Sata Devices All SATA devices are functional in the operating system and during the POST. (Default)

This item is configurable only when Fast Boot is set to Enabled or Ultra Fast.

#### ☞ VGA Support

Allows you to select which type of operating system to boot.

- ► Auto Enables legacy option ROM only.
- ➡ EFI Driver Enables EFI option ROM. (Default)

This item is configurable only when Fast Boot is set to Enabled or Ultra Fast.

#### ☞ USB Support

- All USB devices are disabled before the OS boot process completes.
- ➡ Full Initial All USB devices are functional in the operating system and during the POST.
- Partial Initial Part of the USB devices are disabled before the OS boot process completes. (Default)

This item is configurable only when Fast Boot is set to Enabled. This function is disabled when Fast Boot is set to Ultra Fast.

#### ☞ PS2 Devices Support

Enabled All PS/2 devices are functional in the operating system and during the POST. (Default)

This item is configurable only when Fast Boot is set to Enabled. This function is disabled when Fast Boot is set to Ultra Fast.

#### ∽ NetWork Stack Driver Support

- Disabled Disables booting from the network. (Default)
- ➡ Enabled Enables booting from the network.

This item is configurable only when Fast Boot is set to Enabled or Ultra Fast.

#### ∽ Next Boot After AC Power Loss

- ► Normal Boot Enables normal bootup upon the return of the AC power. (Default)
- ➡ Fast Boot Keeps the Fast Boot settings upon the return of the AC power.

This item is configurable only when Fast Boot is set to Enabled or Ultra Fast.

#### ∽ Mouse Speed

Allows you to set the mouse cursor movement speed. (Default: 1 X)

#### ☞ CSM Support

Enables or disables UEFI CSM (Compatibility Support Module) to support a legacy PC boot process.

- ➡ Enabled Enables UEFI CSM. (Default)
- Disabled Disables UEFI CSM and supports UEFI BIOS boot process only.

#### ∽ LAN PXE Boot Option ROM

Allows you to select whether to enable the legacy option ROM for the LAN controller. (Default: Disabled) This item is configurable only when **CSM Support** is set to **Enabled**.

#### ∽ Storage Boot Option Control

Allows you to select whether to enable the UEFI or legacy option ROM for the storage device controller.

- ➡ Do not launch Disables option ROM.
- ➡ UEFI Enables UEFI option ROM only. (Default)
- ➡ Legacy Enables legacy option ROM only.

This item is configurable only when CSM Support is set to Enabled.

#### Other PCI devices

Allows you to select whether to enable the UEFI or Legacy option ROM for the PCI device controller other than the LAN, storage device, and graphics controllers.

✤ Do not launch Disables option ROM.

- ➡ UEFI Enables UEFI option ROM only. (Default)
- ➡ Legacy Enables legacy option ROM only.

This item is configurable only when CSM Support is set to Enabled.

#### ∽ Administrator Password

Allows you to configure an administrator password. Press <Enter> on this item, type the password, and then press <Enter>. You will be requested to confirm the password. Type the password again and press <Enter>. You must enter the administrator password (or user password) at system startup and when entering BIOS Setup. Differing from the user password, the administrator password allows you to make changes to all BIOS settings.

#### User Password

Allows you to configure a user password. Press <Enter> on this item, type the password, and then press <Enter>. You will be requested to confirm the password. Type the password again and press <Enter>. You must enter the administrator password (or user password) at system startup and when entering BIOS Setup. However, the user password only allows you to make changes to certain BIOS settings but not all.

To cancel the password, press <Enter> on the password item and when requested for the password, enter the correct one first. When prompted for a new password, press <Enter> without entering any password. Press <Enter> again when prompted to confirm.

NOTE: Before setting the User Password, be sure to set the Administrator Password first.

## 2-6 Peripherals



#### Initial Display Output

Specifies the first initiation of the monitor display from the installed PCI Express graphics card or the onboard graphics.

- ► IGFX Sets the onboard graphics as the first display.
- > PCIe 1 Slot Sets the graphics card on the PCIEX16 slot as the first display. (Default)
- ▶ PCle 2 Slot Sets the graphics card on the PCIEX8 slot as the first display.
- ▶ PCle 3 Slot Sets the graphics card on the PCIEX4 slot as the first display.

#### ConBoard LAN Controller (Rivet Networks Killer™ E2500 LAN Chip, LAN2)

Enables or disables the Rivet Networks Killer<sup>™</sup> E2500 LAN function. (Default: Enabled) If you wish to install a 3rd party add-in network card instead of using the onboard LAN, set this item to **Disabled**.

#### 🗢 EZ RAID

Allows you to quickly set up a RAID array. Refer to Chapter 3, "Configuring a RAID Set," for instructions on configuring a RAID array.

#### ∽ Above 4G Decoding

Enables or disables 64-bit capable devices to be decoded in above 4 GB address space (only if your system supports 64-bit PCI decoding). Set to Enabled if more than one advanced graphics card are installed and their drivers are not able to be launched when entering the operating system (because of the limited 4 GB memory address space). (Default: Disabled)

#### ☞ RGB Fusion

Allows you to set the LED lighting mode for the motherboard.

- ➤ Off Disables this function.
- ▶ Pulse Mode All LEDs simultaneously fade in and fade out.
- → Color Cycle All LEDs simultaneously cycle through a full spectrum of colors.
- Static Mode All LEDs emit a single color. (Default)
- ➡ Flash Mode All LEDs simultaneously flash on and off.
- Double Flash All LEDs flash in an interlaced pattern.

#### ∽ LEDs in Sleep, Hibernation, and Soft Off States

Allows you to set the lighting mode of the motherboard LEDs in system S3/S4/S5 state. This feature is supported only with a 5V digital LED strip.

Off Disables the selected lighting mode when the system enters S3/S4/S5 state. (Default)
 On Enables the selected lighting mode when the system enters S3/S4/S5 state.

#### ∽ Intel Platform Trust Technology (PTT)

Enables or disables Intel® PTT Technology. (Default: Disabled)

#### ∽ SW Guard Extensions (SGX)

Enables or disables the Intel® Software Guard Extensions technology. This feature allows legal software to operate in a safe environment and protects the software against attacks from malicious software. The **Software Controlled** option allows you to enable or disable this feature with an Intel-provided application. (Default: Software Controlled)

#### ☞ USB 3.0 DAC-UP 2 (Output Voltage of USB 3.1 Gen 1 Ports on the Back Panel)

Allows you to increase the output voltage of the USB 3.1 Gen 1 ports on the back panel (the ones below the PS/2 keyboard/mouse port) to strengthen the stability of your USB device(s).

➡ Normal

- Keeps the original output voltage. (Default)
- ✤ Disable USB bus power Disables the power of the USB connectors. High-end audio players may
- connect their own external USB power source.
- ► Voltage Compensation +0.1V Adds 0.1V to the original output voltage.
- ► Voltage Compensation +0.2V Adds 0.2V to the original output voltage.
- ➡ Voltage Compensation +0.3V Adds 0.3V to the original output voltage.

#### Front USB 3.0\_1 (Output Voltage of USB Ports Provided by the Onboard F\_USB30 Connector)

Allows you to increase the output voltage of the USB ports provided by the onboard F\_USB30 connector to strengthen the stability of your USB device(s).

- ► Normal Keeps the original output voltage. (Default)
- Disable USB bus power
   Disables the power of the USB connectors. High-end audio players may
   connect their own external USB power source.
- $\blacktriangleright$  Voltage Compensation +0.1V  $\,$  Adds 0.1V to the original output voltage.
- ➡ Voltage Compensation +0.2V Adds 0.2V to the original output voltage.
- $\blacktriangleright$  Voltage Compensation +0.3V  $\,$  Adds 0.3V to the original output voltage.

#### Intel(R) Ethernet Connection (LAN1)

This sub-menu provides information on LAN configuration and related configuration options.

### OffBoard SATA Controller Configuration

Displays information on your M.2 PCIe SSD if installed.

#### Trusted Computing

Enables or disables Trusted Platform Module (TPM).

- Intel(R) Bios Guard Technology Enables or disables the Intel® BIOS Guard feature, which protects the BIOS from malicious attacks.
- Network Stack Configuration

#### Over the stack

Disables or enables booting from the network to install a GPT format OS, such as installing the OS from the Windows Deployment Services server. (Default: Disabled)

☞ Ipv4 PXE Support

Enables or disables IPv4 PXE Support. This item is configurable only when Network Stack is enabled.

#### ☞ Ipv4 HTTP Support

Enables or disables HTTP boot support for IPv4. This item is configurable only when  $\ensuremath{\textit{Network Stack}}$  is enabled.

#### ☞ Ipv6 PXE Support

Enables or disables IPv6 PXE Support. This item is configurable only when Network Stack is enabled.

#### ☞ Ipv6 HTTP Support

Enables or disables HTTP boot support for IPv6. This item is configurable only when **Network Stack** is enabled.

#### ☞ IP6 Configuration Policy

Allows you to change IP6 Configuration Policy to Automatic or Manual. This item is configurable only when **Network Stack** is enabled.

#### ∽ PXE boot wait time

Allows you to configure how long to wait before you can press <Esc> to abort the PXE boot. This item is configurable only when **Network Stack** is enabled. (Default: 0)

#### Media detect count

Allows you to set the number of times to check the presence of media. This item is configurable only when **Network Stack** is enabled. (Default: 1)

#### NVMe Configuration

Displays information on your M.2 NVME PCIe SSD if installed.

#### USB Configuration

#### ∽ Legacy USB Support

Allows USB keyboard/mouse to be used in MS-DOS. (Default: Enabled)

#### ∽ XHCI Hand-off

Determines whether to enable XHCI Hand-off feature for an operating system without XHCI Hand-off support. (Default: Disabled)

#### ☞ USB Mass Storage Driver Support

Enables or disables support for USB storage devices. (Default: Enabled)

#### ∽ Port 60/64 Emulation

Enables or disables emulation of I/O ports 64h and 60h. This should be enabled for full legacy support for USB keyboards/mice in MS-DOS or in operating system that does not natively support USB devices. (Default: Disabled)

#### ∽ Mass Storage Devices

Displays a list of connected USB mass storage devices. This item appears only when a USB storage device is installed.

#### SATA And RST Configuration

#### ☞ SATA Controller(s)

Enables or disables the integrated SATA controllers. (Default: Enabled)

#### ☞ SATA Mode Selection

Enables or disables RAID for the SATA controllers integrated in the Chipset or configures the SATA controllers to AHCI mode.

► Intel RST Premium With Intel Optane System Acceleration
Enables RAID for the SATA controller.

Configures the SATA controllers to AHCI mode. Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced Serial ATA features such as Native Command Queuing and hot plug. (Default)

#### ∽ Aggressive LPM Support

Enables or disables the power saving feature, ALPM (Aggressive Link Power Management), for the Chipset SATA controllers. (Default: Enabled)

· Port 0/1/2/3/4/5

Enables or disables each SATA port. (Default: Enabled)

#### ∽ Hot plug

AHCI

Enables or disable the hot plug capability for each SATA port. (Default: Disabled)

#### ∽ Configured as eSATA

Enables or disables support for external SATA devices.

#### ∽ Mechanical Presence Switch

Allows you to determine whether to turn on the Mechanical Presence switch for the SATA device. This item is configurable only when **Hot plug** is enabled. (Default: Enabled)

## 2-7 Chipset

GIGABYTE										
m	<b>``</b>	-							08/02/2017 Wednesday	13:56
				Peripherals	Chipset	Power	Save & Exit			
										-
	VT-d				Ena	bled				
	Internal Gr	aphics			Aut	0				
	DVMT Pre-	Allocated			64M					
	DVMT Tota	al Gfx Mem			256	м				
	Audio Con	troller			Ena	bled				
	PCH LAN C	ontroller			Ena	bled				
	Wake on I	LAN Enable			Ena	bled				
	High Precis	sion Timer			Ena	bled				
	IOAPIC 24-	119 Entries			Ena	bled				
- 6										
	Alt He	elp								
					7			-		

#### ∽ VT-d (Note)

Enables or disables Intel® Virtualization Technology for Directed I/O. (Default: Enabled)

#### ☞ Internal Graphics

Enables or disables the onboard graphics function. (Default: Auto)

#### C DVMT Pre-Allocated

Allows you to set the onboard graphics memory size. Options are: 32M~1024M. (Default: 64M)

#### → DVMT Total Gfx Mem

Allows you to allocate the DVMT memory size of the onboard graphics. Options are: 128M, 256M, MAX. (Default: 256M)

#### ∽ Audio Controller

Enables or disables the onboard audio function. (Default: Enabled) If you wish to install a 3rd party add-in audio card instead of using the onboard audio, set this item to **Disabled**.

#### ∽ PCH LAN Controller (Intel® GbE LAN Chip, LAN1)

Enables or disables the Intel® GbE LAN function. (Default: Enabled) If you wish to install a 3rd party add-in network card instead of using the onboard LAN, set this item to **Disabled**.

# Wake on LAN Enable Enables or disables the wake on LAN function. (Default: Enabled)

# High Precision Timer Enables or disables High Precision Event Timer (HPET) in the operating system. (Default: Enabled)

#### ☞ IOAPIC 24-119 Entries

Enables or disables this function. (Default: Enabled)

(Note) This item is present only when you install a CPU that supports this feature. For more information about Intel® CPUs' unique features, please visit Intel's website.

## 2-8 Power



#### Platform Power Management

Enables or disables the Active State Power Management function (ASPM). (Default: Disabled)

#### PEG ASPM

Allows you to configure the ASPM mode for the device connected to the CPU PEG bus. This item is configurable only when **Platform Power Management** is set to **Enabled**. (Default: Enabled)

#### ☞ PCH ASPM

Allows you to configure the ASPM mode for the device connected to Chipset's PCI Express bus. This item is configurable only when **Platform Power Management** is set to **Enabled**. (Default: Enabled)

#### 🗢 🛛 DMI ASPM

Allows you to configure the ASPM mode for both CPU side and Chipset side of the DMI link. This item is configurable only when **Platform Power Management** is set to **Enabled**. (Default: Enabled)

#### 🗢 AC BACK

Determines the state of the system after the return of power from an AC power loss.

- ➡ Always Off The system stays off upon the return of the AC power. (Default)
- ➡ Always On The system is turned on upon the return of the AC power.
- Memory The system returns to its last known awake state upon the return of the AC power.

#### Power On By Keyboard

Allows the system to be turned on by a PS/2 keyboard wake-up event.

Note: To use this function, you need an ATX power supply providing at least 1A on the +5VSB lead.

- ➡ Disabled Disables this function. (Default)
- ► Any Key Press any key to turn on the system.
- >> Keyboard 98 Press POWER button on the Windows 98 keyboard to turn on the system.
- ➡ Password Set a password with 1~5 characters to turn on the system.

#### ∽ Power On Password

#### Set the password when Power On By Keyboard is set to Password.

Press <Enter> on this item and set a password with up to 5 characters and then press <Enter> to accept. To turn on the system, enter the password and press <Enter>.

Note: To cancel the password, press <Enter> on this item. When prompted for the password, press <Enter> again without entering the password to clear the password settings.

#### ∽ Power On By Mouse

Allows the system to be turned on by a PS/2 mouse wake-up event.

Note: To use this function, you need an ATX power supply providing at least 1A on the +5VSB lead.

- ➡ Disabled Disables this function. (Default)
- ► Move Move the mouse to turn on the system.
- >> Double Click Double click on left button on the mouse to turn on the system.

#### ∽ ErP

Determines whether to let the system consume least power in S5 (shutdown) state. (Default: Disabled) Note: When this item is set to **Enabled**, the following functions will become unavailable: Resume by Alarm, PME event wake up, power on by mouse, power on by keyboard, and wake on LAN.

#### ∽ Soft-Off by PWR-BTTN

Configures the way to turn off the computer in MS-DOS mode using the power button.

▶ Instant-Off Press the power button and then the system will be turned off instantly. (Default)

Delay 4 Sec. Press and hold the power button for 4 seconds to turn off the system. If the power button is pressed for less than 4 seconds, the system will enter suspend mode.

#### ☞ Resume by Alarm

Determines whether to power on the system at a desired time. (Default: Disabled) If enabled, set the date and time as following:

>> Wake up day: Turn on the system at a specific time on each day or on a specific day in a month.

➤ Wake up hour/minute/second: Set the time at which the system will be powered on automatically. Note: When using this function, avoid inadequate shutdown from the operating system or removal of the AC power, or the settings may not be effective.

#### ☞ RC6(Render Standby)

Allows you to determine whether to let the onboard graphics enter standby mode to decrease power consumption. (Default: Enabled)

## 2-9 Save & Exit



#### ∽ Save & Exit Setup

Press <Enter> on this item and select **Yes**. This saves the changes to the CMOS and exits the BIOS Setup program. Select **No** or press <Esc> to return to the BIOS Setup Main Menu.

#### ☞ Exit Without Saving

Press <Enter> on this item and select **Yes**. This exits the BIOS Setup without saving the changes made in BIOS Setup to the CMOS. Select **No** or press <Esc> to return to the BIOS Setup Main Menu.

#### ∽ Load Optimized Defaults

Press <Enter> on this item and select **Yes** to load the optimal BIOS default settings. The BIOS defaults settings help the system to operate in optimum state. Always load the Optimized defaults after updating the BIOS or after clearing the CMOS values.

#### Boot Override

Allows you to select a device to boot immediately. Press <Enter> on the device you select and select **Yes** to confirm. Your system will restart automatically and boot from that device.

#### Save Profiles

This function allows you to save the current BIOS settings to a profile. You can create up to 8 profiles and save as Setup Profile 1~ Setup Profile 8. Press <Enter> to complete. Or you can select **Select File in HDD/FDD/USB** to save the profile to your storage device.

#### Coad Profiles

If your system becomes unstable and you have loaded the BIOS default settings, you can use this function to load the BIOS settings from a profile created before, without the hassles of reconfiguring the BIOS settings. First select the profile you wish to load and then press <Enter> to complete. You can select **Select File in HDD/FDD/USB** to input the profile previously created from your storage device or load the profile automatically created by the BIOS, such as reverting the BIOS settings to the last settings that worked properly (last known good record).

## Chapter 3 Configuring a RAID Set

#### RAID Levels

	RAID 0	RAID 1	RAID 5	RAID 10
Minimum Number of Hard Drives	≥2	2	≥3	4
Array Capacity	Number of hard drives * Size of the smallest drive	Size of the smallest drive	(Number of hard drives -1) * Size of the smallest drive	(Number of hard drives/2) * Size of the smallest drive
Fault Tolerance	No	Yes	Yes	Yes

#### To create a RAID set, follow the steps below:

- A. Install SATA hard drive(s) or SSDs in your computer.
- B. Configure SATA controller mode in BIOS Setup.
- C. Configure a RAID array in RAID BIOS.  $^{(Note \ 1)}$
- D. Install the RAID/AHCI driver and operating system.

#### Before you begin, please prepare the following items:

- At least two SATA hard drives or SSDs (Note 2) (to ensure optimal performance, it is recommended that you use two hard drives with identical model and capacity). (Note 3)
- A Windows setup disk.
- Motherboard driver disk.
- A USB thumb drive.

## 3-1 Configuring SATA Controllers

#### A. Installing hard drives

Install the hard drives/SSDs in the Intel<sup>®</sup> Chipset controlled connectors on the motherboard. Then connect the power connectors from your power supply to the hard drives.

- (Note 1) Skip this step if you do not want to create RAID array on the SATA controller.
- (Note 2) An M.2 PCIe SSD cannot be used to set up a RAID set either with an M.2 SATA SSD or a SATA hard drive.
- (Note 3) Refer to "1-9 Internal Connectors," for the installation notices for the M.2 and SATA connectors.

#### B. Configuring SATA controller mode in BIOS Setup

Make sure to configure the SATA controller mode correctly in system BIOS Setup.

#### Step 1:

Turn on your computer and press <Delete> to enter BIOS Setup during the POST (Power-On Self-Test). Go to Peripherals\SATA And RST Configuration, make sure SATA Controller(s) is enabled. To create RAID, set SATA Mode Selection to Intel RST Premium With Intel Optane System Acceleration (Figure 1).





Step 2:

To use the EZ RAID feature, follow the steps in "C-1." To configure UEFI RAID, follow the steps in "C-2." To enter the legacy RAID ROM, refer to "C-3" for more information. Finally, save the settings and exit BIOS Setup.



The BIOS Setup menus described in this section may differ from the exact settings for your motherboard. The actual BIOS Setup menu options you will see shall depend on the motherboard you have and the BIOS version.

Configuring a RAID Set

#### C-1. Using EZ RAID

GIGABYTE motherboards provide you with the EZ RAID feature, allowing you to quickly configure a RAID array with simplified steps.

Step 1:

After restarting the computer, enter the BIOS Setup and go to **Peripherals**. Press <Enter> on the **EZ RAID** item. Select the type of hard drives you use for RAID in the **Type** tab and then press <Enter>. (Figure 2)



Step 2:

Figure 2

Go to the **Mode** tab to select a RAID level. RAID levels supported include RAID 0, RAID 1, RAID 10, and RAID 5 (the selections available depend on the number of the hard drives being installed). Then press <Enter> to move to the **Create** tab. Click **Proceed** to begin (Figure 3).





Configuring a RAID Set

After completing, you'll be brought back to the Intel(R) Rapid Storage Technology screen. Under RAID Volumes you can see the new RAID volume. To see more detailed information, press <Enter> on the volume to check for information on RAID level, stripe block size, array name, and array capacity, etc. (Figure 4).

				GIO	GABYTE				
	M.I.T.	System	BIOS	Peripherals	Chipset	Power	Save & Exit	Thursday	14:15
	RAID VOLU	ME INFO							
	Volume Act	ions							
•	Delete								
	Name:				Volu	ume1			
V B	RAID Level:				RAI	00(Stripe)			
	Strip Size:				16KI	в			
	Size:				1.8T	В			
	Status:				Nor	mal			
	Bootable:				Yes				
	SATA 0.0. TO	DSHIBA DT01AC	A100 763ZL	J2FS. 931.5GB					
	SATA 0.1, TO	OSHIBA DT01AC	A100 763ZN	17MFS, 931.5GB					
	Esc Ba	ck							
	-				<b>X</b>				

Figure 4

#### **Delete RAID Volume**

To delete a RAID array, press <Enter> on the volume to be deleted on the Intel(R) Rapid Storage Technology screen. After entering the RAID VOLUME INFO screen, press <Enter> on Delete to enter the Delete screen. Press <Enter> on Yes (Figure 5).



Figure 5

#### C-2. UEFI RAID Configuration

Step 1:

In BIOS Setup, go to BIOS and set CSM Support to Disabled (Figure 6). Save the changes and exit BIOS Setup.

$\sim$		GIGABYTE	18/03/2017
<b>(</b> )	M.I.T. System	BIOS Peripherals Chipset Power Save & Exit	Thursday 14:16
	Boot Configuration		
	Bootup NumLock State	On	
	Security Option	System	
	Full Screen LOGO Show	Enabled	
U	Boot Option Priorities Boot Option #1	JetFlashTranscend 8GB 1100	
	Boot Option #2	UEFI: JetFlashTranscend 8GB 1100, Par	tition 1
	Hard Drive BBS Priorities Fast Boot	Disabled	
	Mouse Speed	1 X	
	CSM Support Administrator Password User Password	Control of the second	
	Help		
<u> </u>			

Figure 6

Step 2:

After the system reboot, enter BIOS Setup again. Then enter the **Peripherals\Intel(R) Rapid Storage Technology** sub-menu (Figure 7).





Step 3:

On the Intel(R) Rapid Storage Technology menu, press <Enter> on Create RAID Volume to enter the Create RAID Volume screen. Enter a volume name with 1~16 letters (letters cannot be special characters) under the Name item and press <Enter>. Then, select a RAID level (Figure 8). RAID levels supported include RAID 0, RAID 1, RAID 10, and RAID 5 (the selections available depend on the number of the hard drives being installed). Next, use the down arrow key to move to Select Disks.

	GIGABYTE	08/02/2017
M.I.T. System BIOS	Peripherals Chipset Power Save & E	Thursday 14:16
Create RAID Volume		
Name:	Volume1	
RAID Level:	RAID0(Stripe)	
Select Disks:		
SATA 0.0, TOSHIBA DT01ACA100 763ZLJ	2FS, 931.5GB	
SATA 0.1, TOSHIBA DT01ACA100 763ZM	RAID Level:	
Strip Size:	RAID0(Stripe)	
Capacity (MB):	BAID1(Mirror)	
Create Volume	Recovery	
Select at least two disks		
Esc Back		

Step 4:

Figure 8

Under **Select Disks** item, select the hard drives to be included in the RAID array. Press the <Space> key on the hard drives to be selected (selected hard drives are marked with "X"). Then set the stripe block size (Figure 9). The stripe block size can be set from 4 KB to 128 KB. Once you have selected the stripe block size, set the volume capacity.

	GIGABYTE		08/03/2017
M.I.T. System BIOS Peripl	herals Chipset	Power Save &	Thursday 14:1
Create RAID Volume			
Name:	Vol	ume1	
RAID Level:	RA	ID0(Stripe)	
Select Disks:			
SATA 0.0, TOSHIBA DT01ACA100 763ZLJ2	Strip Size:	8	
SATA 0.1, TOSHIBA DT01ACA100 763ZM7	4KB		
	8KB		
Strip Size:	164.0		
capacity (mb).	TOKD		
Create Volume	32KB		
	64KB		
Select at least two disks	128KB		
Back			
_			
	Eiguro 0		
	i igule 9		

Configuring a RAID Set
Step 5:

After setting the capacity, move to Create Volume and press <Enter> to begin. (Figure 10)

GIADID	BYTE
M.I.T. System BIOS Peripherals Cl	hipset Power Save & Exit
Create RAID Volume	
Name:	Volume1
RAID Level:	RAID0(Stripe)
Salact Dicke	
SATA 0.0 TOSHIBA DT014CA100 7637LI2ES 931 5CB	x
SATA 0.1, TOSHIBA DT01ACA100 763ZM7MFS, 931.5GB	×
Strip Size:	16KB
Capacity (MB):	1907734
Create Volume	
Esc Back	

Figure 10

After completing, you'll be brought back to the Intel(R) Rapid Storage Technology screen. Under RAID Volumes you can see the new RAID volume. To see more detailed information, press <Enter> on the volume to check for information on RAID level, stripe block size, array name, and array capacity, etc. (Figure 11)



Figure 11

#### **Delete RAID Volume**

To delete a RAID array, press <Enter> on the volume to be deleted on the Intel(R) Rapid Storage Technology screen. After entering the RAID VOLUME INFO screen, press <Enter> on Delete to enter the Delete screen. Press <Enter> on Yes (Figure 12).



Figure 12

## C-3. Configuring Legacy RAID ROM

Enter the Intel<sup>®</sup> legacy RAID BIOS setup utility to configure a RAID array. Skip this step and proceed with the installation of Windows operating system for a non-RAID configuration.

## Step 1:

In BIOS Setup, go to **BIOS** and set **CSM Support** to **Enabled** and **Storage Boot Option Control** to **Legacy**. Next, go to **Peripherals\SATA And RST Configuration** and make sure **USE RST Legacy OROM** is set to **Enabled**. Save the changes and exit BIOS Setup. After the POST memory test begins and before the operating system boot begins, look for a message which says "Press <Ctrl-I> to enter Configuration Utility" (Figure 13). Press <Ctrl> + <I> to enter the RAID Configuration Utility.



## Step 2:

After you press <Ctrl> + <l>, the MAIN MENU screen will appear (Figure 14).

## Create RAID Volume

If you want to create a RAID array, select Create RAID Volume in MAIN MENU and press < Enter>.



Step 3:

After entering the CREATE VOLUME MENU screen, enter a volume name with 1~16 letters (letters cannot be special characters) under the Name item and press <Enter>. Then, select a RAID level (Figure 15). RAID levels supported include RAID 0, RAID 1, RAID 10, and RAID 5 (the selections available depend on the number of the hard drives being installed). Press <Enter> to proceed.

	Intel(R) Rapid Storage Tec Copyright (C) Intel Co	hnology - Option ROM - 15.8.0.30 orporation. All Rights Reserved.	10		
	CREATH Na RAID Le Di Strip S Capac Sy	VOLUME MENU ] me : Volume0 vel : RAID0(Stripe) sks : Setect Disks ize : 16KB ity : 1863.0 GB rdc : N/A Create Volume			
		: [ HELP ]			
RAID 0: Stripes data (performance).					
[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select		
Figure 15					

Step 4:

Under Disks item, select the hard drives to be included in the RAID array. If only two hard drives are installed, they will be automatically assigned to the array. Set the stripe block size (Figure 16) if necessary. The stripe block size can be set from 4 KB to 128 KB. Once you have selected the stripe block size, press <Enter>.

	Intel(R) Rapid Storage Te Copyright (C) Intel C	cchnology - Option ROM - 15.8.0.1 Corporation. All Rights Reserved.	3010			
	[ CREATE Nar RAID Lev Dis Strip Si Capaci Sy	VOLUME MENU ] me : Volume0 yel : RAID0(Stripe) ks : Select Disks ze : 16KB ty : 1863.0 GB nc : N/A Create Volume				
		[ HELP ]				
	The following are typical values:					
	RAID0 RAID10 RAID5	- 128KB ) - 64KB - 64KB				
[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select			
		Figure 16				

Figure 16

Step 5:

Enter the array capacity and press <Enter>. Finally press <Enter> on the **Create Volume** item to begin creating the RAID array. When prompted to confirm whether to create this volume, press <Y> to confirm or <N> to cancel (Figure 17).

	Intel(	R) Rapid Storage Technolo Copyright(C) Intel Corpora	gy - Option ROM - 15.8.0.3010 ation. All Rights Reserved.			
		[ CREATE VOI Name : RAID Level : Disks : Strip Size : Capacity :	UME MENU ] Volume0 RAID0(Stripe) Select Disks 16 KB 1863.0 GB			
	WAR	NING : ALL DATA ON SE Are you sure you want to	LECTED DISKS WILL BE LOST create this volume? (Y/N) :			
Press ENTER to create the specified volume.						
[↑	↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select		
			· -			



When completed, you can see detailed information about the RAID array in the **DISK/VOLUME INFORMATION** section, including the RAID level, stripe block size, array name, and array capacity, etc. (Figure 18)



To exit the RAID BIOS utility, press <Esc> or select 6. Exit in MAIN MENU.

Now, you can proceed to install the SATA RAID/AHCI driver and operating system.

#### **Recovery Volume Options**

Intel<sup>®</sup> Rapid Recover Technology provides data protection by allowing users to easily restore data and system operation using a designated recovery drive. With the Rapid Recovery Technology, which employs RAID 1 functionality, users can copy the data from the master drive to the recovery drive; if needed, the data on the recovery drive can be restored back to the master drive.

Before you begin:

- The recovery drive must have equal or greater capacity than the master drive.
- A recovery volume can be created with two hard drives only. A recovery volume and a RAID array cannot co-exist in the system at the same time, that is, if you have already created a recovery volume, you are unable to create a RAID array.
- By default, only the master drive can be viewed in the operating system; the recovery drive is hidden.

Step 1:

Select Create RAID Volume in MAIN MENU and press <Enter> (Figure 19).



Step 2:

After entering the volume name, select Recovery under the RAID Level item and press <Enter> (Figure 20).

		Intel(R) Rapid Storage Technolo Copyright (C) Intel Corpor	ogy - Option ROM - 15.8.0.3 ation. All Rights Reserved.	010
		[ CREATE VO Name : RAID Level : Disks : Strip Size : Capacity : Sync : [ HF Recovery: Copies data betwe	LUME MENU ] Volume0 Recovery Select Disks N/A 931.5 GB Continuous Create Volume ELP ] en a master and a recovery d	isk.
	[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select
Figure 20				

Configuring a RAID Set

Step 3:

Press <Enter> under the **Select Disks** item. In the **SELECT DISKS** box, press <Tab> on the hard drive you want to use for the master drive and press <Space> on the hard drive you want to use for the recovery drive. (Make sure the recovery drive has equal or larger capacity than the master drive.) Then press <Enter> to confirm (Figure 21).

		Intel(R) Rapid Copyright	Storage Technolog (C) Intel Corporat	y - Option ROM - 15.8.0.3 ion. All Rights Reserved.	010	
			E CREATE VOLU Name : RAID Level : I SELEC	JME MENU ] ———— Volume0 Recovery F DISKS ]———————————————————————————————————		
	ID M1 R2	Drive Model TOSHIBA DT01ACA1 TOSHIBA DT01ACA1	Serial # 763ZM7MFS 763ZLL4FS	<b>Size</b> 931.5GF 931.5GF	Status 3 Non-RAID Disk 3 Non-RAID Disk	
Select 1 Master and 1 Recovery disk to create volume.						
	[↑↓]-(	Change [TAB]-1	Next	[ESC]-Previous Menu	[ENTER]-Select	



Step 4:

Under **Sync**, select **Continuous** or **On Request** (Figure 22). When set to **Continuous**, changes made to the data on the master drive will be automatically and continuously copied to the recovery drive when both hard drives are installed in the system. **On Request** allows users to update data from the master drive to the recovery drive manually using the Intel<sup>®</sup> Rapid Storage Technology utility in the operating system. **On Request** allows users to restore the master drive to a previous state.

I	ntel(R) Rapid Storage Teo Copyright (C) Intel C	chnology - Option ROM - 15.8.0.301 corporation. All Rights Reserved.	0		
	CREAT Na RAID LA D Strip S Capa S	E VOLUME MENU ] ime : Volume0 evel : Recovery siks : Select Disks Size : N/A city : 0.0 GB yne : Continuous Create Volume			
	[ HELP ]]				
Select a sync option: On Request: volume is updated manually Continuous: volume is updated automatically					
[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select		
Figure 22					

Step 5:

Finally press <Enter> on the **Create Volume** item to begin creating the Recovery Volume and follow the onscreen instructions to complete.

#### **Delete RAID Volume**

To delete a RAID array, select **Delete RAID Volume** in **MAIN MENU** and press <Enter>. In the **DELETE VOLUME MENU** section, use the up or down arrow key to select the array to be deleted and press <Delete>. When prompted to confirm your selection (Figure 23), press <Y> to confirm or <N> to abort.



#### **Acceleration Options**

This option allows you to view the status of your accelerated drive/volume (Figure 24) created using the Intel® IRST utility. In case you are unable to run the Intel® IRST utility due to an application error or operating system issue, you will need to remove acceleration or manually enable synchronization (Maximized mode only) using this option in the RAID ROM utility.

Steps:

Select Acceleration Options in MAIN MENU and press <Enter>.

To remove the acceleration, select the accelerated drive/volume, press <R>, and press <Y> to confirm.

To synchronize data from the cache device to the accelerated drive/volume, press <S> and press <Y> to confirm.

Intel(R) Rapid Storage Technology - Option ROM - 15.8.0.3010 Copyright (C) Intel Corporation. All Rights Reserved.						
		[ ACC]	ELERATION OPT	fions ]		_
	Name	Type	Capacity	Mode	Status	
	DISK PORT 3	Non-KAID Disk	931.5GB	Ennanced	In Sync	
	[ HELP ]]					
	Press 's' to synchronize data from the cache device to					
Press 'T to remove the Disk/Volume Acceleration WARNING' IT IS RECOMMENDED THAT YOU PERFORM A SYNCHRONIZATION						
		BEFORE I	REMOVING ACC	CELERATION		
L.	[ <b>A</b> ]] 0-14			IDECI.	D	
	[T↓]-Select			[ESC]-	Previous Menu	
Figure 24						

# 3-2 Installing the RAID/AHCI Driver and Operating System

With the correct BIOS settings, you are ready to install the operating system.

## A. Installing Windows

As some operating systems already include Intel<sup>®</sup> RAID/AHCI driver, you do not need to install separate RAID/ AHCI driver during the Windows installation process. After the operating system is installed, we recommend that you install all required drivers from the motherboard driver disk using "Xpress Install" to ensure system performance and compatibility. If the operating system to be installed requires that you provide additional SATA RAID/AHCI driver during the OS installation process, please refer to the steps below:

Step 1:

Copy the IRST folder under Boot in the driver disk to your USB thumb drive.

Step 2:

Boot from the Windows setup disk and perform standard OS installation steps. When the screen requesting you to load the driver appears, select **Browse**.

Step 3:

Insert the USB thumb drive and then browse to the location of the driver. The location of the driver is as follows: \IRST\f6flpy-x64

Step 4:

When a screen as shown in Figure 1 appears, select Intel Chipset SATA RAID Controller and click Next to load the driver and continue the OS installation.

Intel Chips	et SATA RAID Con	troller (D:\IRST\f6flj	oy-x64\iaStorAC.int	9	

Figure 1

## B. Rebuilding an Array

Rebuilding is the process of restoring data to a hard drive from other drives in the array. Rebuilding applies only to fault-tolerant arrays such as RAID 1, RAID 5 or RAID 10 arrays. The procedures below assume a new drive is added to replace a failed drive to rebuild a RAID 1 array. (Note: The new drive must have equal or greater capacity than the old one.)

Turn off your computer and replace the failed hard drive with a new one. Restart your computer.

#### · Performing the Rebuild in the Operating System

While in the operating system, make sure the chipset driver has been installed from the motherboard driver disk. Then launch the Intel<sup>®</sup> Rapid Storage Technology utility from the Start menu.



Step 1:

Go to the Manage menu and click Rebuild to another disk in Manage Volume.



The **Status** item on the left of the screen displays the rebuild progress. After the RAID 1 volume rebuilding, the **Status** will display as **Normal**.



Step 2:

Select a new drive to rebuild the RAID and click **Rebuild**.

#### · Restoring the Master Drive to a Previous State (for Recovery Volume only)

When two hard drives are set to Recovery Volume in Update on Request mode, you can restore the master drive data to the last backup state when needed. For example, in case the master drive detects a virus, you can restore the recovery drive data to the master drive.

#### Step 1:

Select 4. Recovery Volume Options in the MAIN MENU of the Intel<sup>®</sup> RAID Configuration Utility. On the RECOVERY VOLUMES OPTIONS menu, select Enable Only Recovery Disk to show the recovery drive in the operating system. Follow the on-screen instructions to complete and exit the RAID Configuration Utility.





Step 2:

Go to the **Manage** menu of the Intel<sup>®</sup> Rapid Storage Technology utility and click **Recover data** in **Manage Volume**.



The **Status** item on the left of the screen displays the recovering status. After the recovery volume is completed, the **Status** will display as **Normal**.

Data Recovery	×
Are you sure you want to copy all the data from the rec	overy disk to the master disk?
A WARNING: Completing this action will override any	master disk changes since the last update.
You can continue using other applications during the	s time.
More help	Yes

## Step 3:

Click Yes to begin the data recovery.

## 3-3 Installing an Intel<sup>®</sup> Optane<sup>™</sup> Memory

#### A. System Requirements

- 1. Intel<sup>®</sup> Optane<sup>™</sup> memory
- 2. The Optane<sup>™</sup> memory must have at least 16 GB capacity, and it must have equal or smaller capacity than the hard drive/SSD to be accelerated.
- The Optane<sup>™</sup> memory cannot be used to accelerate an existing RAID array; the accelerated hard drive/SSD cannot be included in a RAID array.
- 4. The hard drive/SSD to be accelerated must be a SATA hard drive or M.2 SATA SSD and must have Windows 10 64-bit (or later version) installed on it. (Must be formatted for GPT partition.)
- 5. The motherboard driver disk

#### **B. Installation Guidelines**

#### B-1: Installation in AHCI mode

If the SATA controller has been configured in AHCI mode, please follow the steps below:



#### Step 1:

After entering the operating system, insert the motherboard driver disk into your optical drive. On the Xpress Install screen, select Intel(R) Optane(TM) Memory System Acceleration<sup>(Note)</sup> to install. Follow the on-screen instructions to continue. The system will auto-restart.



#### Step 3:

Launch the Intel(R) Optane Memory application from the Start menu. A message which says Intel<sup>®</sup> Optane<sup>™</sup> Memory is disabled will appear on the main screen. Click **Enable** to activate the Intel<sup>®</sup> Optane<sup>™</sup> Memory and restart the system again.



#### Step 2:

After re-entering the operating system, the dialog box as shown above will appear. Click **Yes** to continue the installation and then restart the system.



#### Step 4:

Launch the Intel(R) Optane Memory application from the Start menu and make sure the Intel® Optane<sup>™</sup> Memory has been enabled. (The SATA controller mode is changed to Intel RST Premium With Intel Optane System Acceleration from AHCI mode. DO NOT change your SATA controller mode back to AHCI. Doing so will prevent Intel® Optane<sup>™</sup> memory from functioning properly.

(Note) If the system already has Intel<sup>®</sup> Rapid Storage Technology utility installed, you have to remove it first before installing the Intel(R) Optane(TM) Memory System Acceleration application.

## B-2: Installation in Intel RST Premium With Intel Optane System Acceleration mode

If the SATA controller has been configured in Intel RST Premium With Intel Optane System Acceleration mode, please follow the steps below:

	GIGABYTE	08/01/2017 + +
MLT. System	BIOS Pergherata Choset We Power Save & Ext	Thursday 14:
Reet Configuration		
<b>Bootup NumLock State</b>		
A A . A . A		
Editorea LOCO Them	System	
	CHICKS	
Boot Option #1	JetFlashTranscend BGB 1100	
Boot Option #2	UEFI: JetFlashTranscend GGB	1100, Partition 1
Mouse Speed	5 X	
CSM Support	Disabled	
User Password		
All Help		

#### Step 1:

After system restarts, go to the BIOS Setup, make sure **CSM Support** under the **BIOS** menu is disabled.



#### Step 3:

Enter the operating system, launch the Intel® Rapid Storage Technology utility from the Start menu, and then enable Intel® Optane<sup>™</sup> Memory on the Intel® Optane<sup>™</sup> Memory screen.





#### Step 2:

Go to Peripherals\SATA And RST Configuration and make sure USE RST Legacy OROM is disabled. If you want to enable the Optane<sup>™</sup> memory installed in the M2M\_32G connector, set PCle Storage Dev on Port 17 to RST Controlled; to enable the Optane<sup>™</sup> memory installed in the M2A\_32G connector, set PCle Storage Dev on Port 9 to RST Controlled; to enable the Optane<sup>™</sup> memory installed in the M2P\_32G connector, set PCle Storage Dev on Port 21 to RST Controlled.



#### Step 4:

If you install more than one Optane<sup>™</sup> memory, please select which one you are going to use.

Step 5: Follow the on-screen instruction to continue the installation and then restart the system when completed.



- An Optane<sup>™</sup> memory cannot be used to accelerate an M.2 PCIe SSD.
- If more than one Optane<sup>™</sup> memory is installed, you can select only one of them to accelerate your SATAbased boot drive. The other(s) can only be used as data drive(s).
- Do not abruptly remove the Optane<sup>™</sup> memory. Doing so will cause the operating system to stop functioning correctly.
- If you want to change/remove the Optane<sup>™</sup> memory, you must disable it using the Intel<sup>®</sup> Rapid Storage Technology or Intel(R) Optane Memory application first.
- After enabling the Optane<sup>™</sup> memory, the related BIOS settings will remain even after a BIOS update.


1

# Chapter 4 Drivers Installation



- Before installing the drivers, first install the operating system.
- After installing the operating system, insert the motherboard driver disk into your optical drive. Click on the message "Tap to choose what happens with this disc" on the top-right corner of the screen and select "Run Run.exe." (Or go to My Computer, double-click the optical drive and execute the Run.exe program.)

## 4-1 Drivers & Software

"Xpress Install" will automatically scan your system and then list all of the drivers that are recommended to install. You can click the **Xpress Install** button and "Xpress Install" will install all of the selected drivers. Or click the arrow **Orsel** icon to individually install the drivers you need.

Intel Z370 AORUS Gaming Serie	s Ver 1.0 B17.0801.1		
<b>бібавуте</b> : Хр	ress Install		
Drivers & Software	We recommend that you install the drivers and software listed below for your mo Please click "Xpress install" to install all the drivers automatically.	otherboard. Xpress Insta	
ste	Google Drive	💽 Install	
Application Software	Store your files safely and access them from any device.Learn more By installing this application, you agree to the Google Drive Terms and Use and f		
	Google Chrome (R) a faster way to browse the web	🕑 Install	
Google	Google Search built into the address bar Stable and Secure learn more. By installing this application, you agree to the Google Chrome Terms of use and Privacy Policy.		
	Google Toolbar for Internet Explorer	🕑 Install	
	Google Toolbar makes web browsing more convenient: Search from any websit		
	By installing this application you agree to the Google Toolbar Terms and Conditi		
	Vinton Internet Security(NIS)	🕑 Install	



Please ignore the popup dialog box(es) (e.g. the **Found New Hardware Wizard**) displayed when "Xpress Install" is installing the drivers. Failure to do so may affect the driver installation.

Some device drivers will restart your system automatically during the driver installation. After the system restart, "Xpress Install" will continue to install other drivers.

## 4-2 Application Software

This page displays the apps that GIGABYTE develops and some free software. You can select the apps you want and click the **Install O Install O Install O Install** 



## 4-3 Information

This page provides detailed information on the drivers on the driver disk. The **Contact** page provides contact information of the GIGABYTE Taiwan headquarter. You can click the URL on this page to link to the GIGA-BYTE website to check more information on the GIGABYTE headquarter or worldwide branch offices.

You You	I can save print or e-mail the	system information by clicking the buttons below
vers & tware	consure, prin, or e-manue.	Driver Disk Contents   Conta
Cł	iipset	
olication .		
•		
rmation		
An	tivirus	
Au	dio	
Bo	otDrv	

# Chapter 5 Unique Features

## 5-1 BIOS Update Utilities

GIGABYTE motherboards provide two unique BIOS update tools, Q-Flash<sup>™</sup> and @BIOS<sup>™</sup>. GIGABYTE Q-Flash and @BIOS are easy-to-use and allow you to update the BIOS without the need to enter MS-DOS mode. Additionally, this motherboard features the DualBIOS<sup>™</sup> design, providing multiple protection for the safety and stability of your computer.

## What is DualBIOS<sup>™</sup>?

Motherboards that support DualBIOS have two BIOS onboard, a main BIOS and a backup BIOS. Normally, the system works on the main BIOS. However, if the main BIOS is corrupted or damaged, the backup BIOS will take over on the next system boot to ensure normal system operation. For the sake of system safety, users cannot update the backup BIOS manually.

## What is Q-Flash<sup>™</sup>?

With Q-Flash you can update the system BIOS without having to enter operating systems like MS-DOS or Window first. Embedded in the BIOS, the Q-Flash tool frees you from the hassles of going through complicated BIOS flashing process.

## What is @BIOS<sup>™</sup>?

@BIOS allows you to update the system BIOS while in the Windows environment. @BIOS will download the latest BIOS file from the nearest @BIOS server site and update the BIOS.

## 5-1-1 Updating the BIOS with the Q-Flash Utility

## A. Before You Begin

- 1. From GIGABYTE's website, download the latest compressed BIOS update file that matches your motherboard model.
- Extract the file and save the new BIOS file (e.g. Z370AORUSGaming7.F1) to your USB flash drive, or hard drive. Note: The USB flash drive or hard drive must use FAT32/16/12 file system.
- 3. Restart the system. During the POST, press the <End> key to enter Q-Flash. Note: You can access Q-Flash by either pressing the <End> key during the POST or click the Q-Flash icon (or press the <F8> key) in BIOS Setup. However, if the BIOS update file is saved to a hard drive in RAID/AHCI mode or a hard drive attached to an independent SATA controller, use the <End> key during the POST to access Q-Flash.



Because BIOS flashing is potentially risky, please do it with caution. Inadequate BIOS flashing may result in system malfunction.



Select Q-Flash to access Q-Flash

## B. Updating the BIOS

In the main menu of Q-Flash, use the keyboard or mouse to select an item to execute. When updating the BIOS, choose the location where the BIOS file is saved. The following procedure assumes that you have saved the BIOS file to a USB flash drive.

Step 1:

1. Insert the USB flash drive containing the BIOS file into the computer. In the main screen of Q-Flash, select Update BIOS.





- The Save BIOS option allows you to save the current BIOS file.
- Q-Flash only supports USB flash drive or hard drives using FAT32/16/12 file system.
- If the BIOS update file is saved to a hard drive in RAID/AHCI mode or a hard drive attached to an independent SATA controller, use the <End> key during the POST to access Q-Flash.
- 2. Select the BIOS update file.



Make sure the BIOS update file matches your motherboard model.

Step 2:

The screen will show that the BIOS file is being read from your USB flash drive. Please select **Fast** or **Intact** to begin the BIOS update. The screen will then display the update process.



Do not turn off or restart the system when the system is reading/updating the BIOS.
Do not remove the USB flash drive or hard drive when the system is updating the BIOS.

Step 3:

The system will restart after the update process is complete.

Step 4:

During the POST, press <Delete> to enter BIOS Setup. Select Load Optimized Defaults on the Save & Exit screen and press <Enter> to load BIOS defaults. System will re-detect all peripheral devices after a BIOS update, so we recommend that you reload BIOS defaults.



Select Yes to load BIOS defaults

Step 5:

Select **Save & Exit Setup** and press <Enter>. And then select **Yes** to save settings to CMOS and exit BIOS Setup. The procedure is complete after the system restarts.

## 5-1-2 Updating the BIOS with the @BIOS Utility

## A. Before You Begin

- In Windows, close all applications and TSR (Terminate and Stay Resident) programs. This helps prevent unexpected failures when performing a BIOS update.
- If the BIOS is being updated via the Internet, ensure the Internet connection is stable and do NOT interrupt the Internet connection (for example, avoid a power loss or switching off the Internet). Failure to do so may result in a corrupted BIOS or a system that is unable to start.
- GIGABYTE product warranty does not cover any BIOS damage or system failure resulting from an inadequate BIOS flashing.



#### 1. Update the BIOS Using the Internet Update Function:



Click **Update from Server**, select the @BIOS server site closest to your location and then download the BIOS file that matches your motherboard model. Follow the on-screen instructions to complete.

ADRUS

@BIOS

Flash Memory Type

Flash Memory Size

Current BIOS version Z370 AORUS Gaming 7 D9

MXIC 25L/U Ser

128M bits

BIOS Vendor

WI UEFI BIO

Update from File Save to File Face Wizard



If the BIOS update file for your motherboard is not present on the @BIOS server site, please manually download the BIOS update file from GIGABYTE's website and follow the instructions in "Update the BIOS without Using the Internet Update Function" below.

#### 2. Update the BIOS without Using the Internet Update Function:



Click **Update from File**, then select the location where you save the BIOS update file obtained from the Internet or through other source. Follow the on-screen instructions to complete.

## 3. Save the Current BIOS File:



Click Save to File to save the current BIOS file.

## 4. Change the Boot-up Logo:



Click **Upload new image** in Face-Wizard and you will be able to change the boot-up logo with your own picture, creating a personalized boot-up screen. Click **Backup current image** to save the current boot-up logo.



Supported image formats include jpg, bmp, and gif.

## C. After Updating the BIOS

Restart your system after updating the BIOS.



- Make sure that the BIOS file to be flashed matches your motherboard model. Updating the BIOS with an incorrect BIOS file could cause your system not to boot.
- Do not turn off the system or remove the power during the BIOS update process, or the BIOS may corrupt and the system may not boot.

Unique Features

## 5-2 APP Center

GIGABYTE App Center gives you easy access to a wealth of GIGABYTE apps that help you get the most from your GIGABYTE motherboard <sup>(Note)</sup>. Using a simple, unified user interface, GIGABYTE App Center allows you to easily launch all GIGABYTE apps installed on your system, check related updates online, and download the apps, drivers, and BIOS.

## **Running the APP Center**

Insert the motherboard driver disk. On the Autorun screen, go to Application Software\Install GIGABYTE Utilities to install GIGABYTE App Center and the selected apps. Restart your computer after the installation is complete. In Desktop mode, click the App Center icon in the notification area to launch the App Center utility (Figure 1). On the main menu, you can select an app to run or click LiveUpdate to update an app online.



Figure 1

If the App Center is closed, you can restart it by clicking Launch App Center on the Start menu (Figure 2).



Figure 2

(Note) Available applications in APP Center may differ by motherboard model. Supported functions of each application may also vary depending on motherboard specifications.

## 5-2-1 3D OSD

3D OSD (Note) automatically detects and displays your system information during games, allowing you to easily get hold of your system information without switching between screens.

#### The 3D OSD Interface



## Using 3D OSD

## Main Menu:

Allows you to enable or disable the 3D OSD feature and to select the type of real-time system information you wish to display. 3D OSD will detect and display a list of available options.

#### **Configuration Menu:**

Allows you to set a hotkey for enabling /disabling 3D OSD and specify the font size/location/color of the displayed information.

(Note) Please ensure that DirectX End-User Runtime has been installed on your system prior to installing 3D OSD.

## 5-2-2 AutoGreen

AutoGreen <sup>(Note)</sup> is an easy-to-use tool that provides users with simple options to enable system power savings via a Bluetooth-enabled smart phone/tablet device. When the device is out of the range of the computer's Bluetooth receiver, the system will enter the specified power saving mode. Before using this app, you need to turn on Bluetooth on both your computer and smart phone/tablet device.

## The AutoGreen Interface



## Control Tab:

The Control tab allows you to select a system power saving mode.

Button	Description
Disable	Disables this function
Standby	Enters Power on Suspend mode
Suspend	Enters Suspend to RAM mode
Hibernate	Enters Suspend to Disk mode

#### Bluetooth Devices Tab:

The **Bluetooth** tab allows you to pair your smart phone/tablet device with the Bluetooth receiver on your computer. Press **Refresh** to let AutoGreen search for the Bluetooth devices around you. A message will appear on both your computer and smart phone/tablet device prompting you to compare the passcodes on the two devices. Confirm to complete the pairing process.

(Note) Once your smart phone/tablet device has been paired with your AutoGreen-enabled computer, you'll not be able to use it to connect to other Bluetooth device(s).

## 5-2-3 BIOS Setup

This app provides information on your motherboard model and BIOS version. You can also use it to select the default language used by the BIOS and set the system time/power management settings.

#### The BIOS Setup Interface

<b>CADRUS</b>	
HIOS Setup	
1 Model Name	
BIOS Version	
BIOS Date	
System Language	English 🔹
Boot Option Priorities	
Bootup NumLock State	-
G Full Screen Logo Show	
🕐 АС ВАСК	Always Off 🔹
ErP	
Soft-Off by PWR-BTTN	Instant-Off 🔹

Using BIOS Setup:

System Language:

Allows you to select the default language used by the BIOS.

Boot Option Priorities:

Allows you to specify the overall boot order from the available devices.

Bootup NumLock State:

Allows you to enable or disable Numlock feature on the numeric keypad of the keyboard after the POST.

Full Screen LOGO Show:

Allows you to determine whether to display the GIGABYTE Logo at system startup.

AC BACK:

Determines the state of the system after the return of power from an AC power loss.

Button	Description
Memory	The system returns to its last known awake state upon the return of the AC power.
Always On	The system is turned on upon the return of the AC power.
Always Off	The system stays off upon the return of the AC power.

• ErP:

Allows you to determine whether to let the system consume least power in S5 (shutdown) state.

#### • Soft-Off by PWR-BTTN:

Allows you to configures the way to turn off the computer in MS-DOS mode using the power button.

Button	Description
Instant-Off	Press the power button and then the system will be turned off instantly.
Delay 4 Sec.	Press and hold the power button for 4 seconds to turn off the system. If the power button is pressed for less than 4 seconds, the system will enter suspend mode.

After you configure the settings, click **Save** and restart the system. If you click the **Reset** button, the system will load the optimal BIOS default settings.

## 5-2-4 Color Temperature

GIGABYTE Color Temperature is a simple interface which allows you to directly adjust the monitor color temperature and reduce the blue light to protect your eyes.

## The Color Temperature Interface



## **Using Color Temperature**

You can use the slider for adjustment. To close the app, click the sicon on the top right corner. Clicking the **Reset** button reverts to the default settings.

## 5-2-5 Cloud Station

GIGABYTE Cloud Station (Server) is composed of HomeCloud, GIGABYTE Remote, Remote OC, and HotSpot, which allow your smart phone, tablet device, and remote computer to communicate, share resources, and control the host computer via wireless connection. Cloud Station allows your computer to share files with another computer that has Cloud Station (Server) installed.

#### Before You Begin:

- To use HomeCloud, GIGABYTE Remote, and Remote OC, you must install GIGABYTE Cloud Station on your smart phone/tablet device. (For Android systems, please download the app from Google Play; for iOS systems, please download it from App Store.)<sup>(Note 1)</sup>
- To share HomeCloud files between computers, you need to install Cloud Station (Server) on the host computer and Cloud Station on the remote computer.
- Your smart phone/tablet device must have Android 4.0/iOS 6.0 or above version.
- The first time you use HomeCloud, GIGABYTE Remote, and Remote OC, you must sign in with your Google/ Facebook/Windows Live account. Be sure to use the same account to sign in on your smart phone/tablet device and computers.

#### HomeCloud

HomeCloud allows you to upload/download/back up files (Note 2) from your smart phone/tablet device/computer to the host computer.

#### The HomeCloud Interface

Cloud Station (Server):



- (Note 1) You can use your smart phone/tablet device to scan the QR code on the HomeCloud UI to link to the download page of the GIGABYTE Cloud Station on App Store or Google Play.
- (Note 2) For iOS systems, the file types are limited to image/video files.

Unique Features

#### **Cloud Station:**



## Using HomeCloud

Step 1:

Launch HomeCloud on the host computer (installed with Cloud Station (Server)), sign in with your Google/ Facebook/Windows Live account or select the account on the **Account List**. Then enable **HomeCloud Function**. To automatically enable this function after system reboot, enable **Always run on next reboot**. Step 2:

Run Cloud Station on your smart phone/tablet device/remote computer, sign in with the same account you use for HomeCloud on your host computer. Tap on **HomeCloud** to perform the following functions:

#### On the Host Computer:

Option	Function
Account List	Displays currently signed in account(s).
Remove	Remove the selected account.
Share Folder	Displays the shared folder directory of the currently signed in account.
Open Folder	Access the shared folder of the currently signed in account.

#### On the Smart Phone/Tablet Device/Remote Computer:

Option	Function
All Picture Files	File Upload: Tap on the folder, browse and select the files inside. Tap on the menu icon
All Music Files	and select Upload selected Files to upload the files to your computer.
All Video Files	File Download: Tap on the folder and then tap on the menu icon, select <b>Download</b> Files. You can browse the files and select the files that you want to download to your
All Files	smart phone/tablet device.
User Contacts	Tap on the folder and then tap on the menu icon to use the options including Backup
Call Log	to remote, Restore From remote, View Remote Contact, and Reselect Computers.

#### **GIGABYTE Remote**

GIGABYTE Remote allows you to use your smart phone/tablet device to remotely control the mouse/keyboard/ Windows Media Player on your computer.

## The GIGABYTE Remote Interface



## Using GIGABYTE Remote

Step 1:

On the host computer, launch GIGABYTE Remote and enable **GIGABYTE Remote Function**. To automatically enable this function after system reboot, enable **Always run on next reboot**.

Step 2:

Run GIGABYTE Cloud Station on your smart phone/tablet device, sign in with the same account you use for HomeCloud on your computer. Tap on **Remote Control** to perform the following remote controls:

Option	Function
Mouse	Remotely perform mouse functionalities including dragging, right/left-clicking, and holding the mouse left button.
Keyboard	Remotely control your keyboard such as text input (tap on Real-Time Mode to type texts) or deletion.
Media	Remotely configure and control the currently running Windows Media Player application on your computer.

#### On the Smart Phone/Tablet Device:

## Remote OC

Remote OC provides you with remote control options including overclocking and system tweaking, system monitoring plus the ability to also remotely power down/reset the PC when needed.

## The Remote OC Interface



## Using Remote OC

Step 1:

On the host computer, launch Remote OC and enable **Remote OC Function**. To automatically enable this function after system reboot, enable **Always run on next reboot**.

Step 2:

Run GIGABYTE Cloud Station on your smart phone/tablet device, sign in with the same account you use for HomeCloud on your computer. Tap on **Remote OC** to perform the following functions:

Option	Function
Tuner	Allows you to change CPU/memory frequency and voltage settings.
INFO	Displays the system information, including the CPU, motherboard, and memory.
HW MONIT	Allows you to monitor system temperatures, voltages, and fan speeds.
QUICK BOOST	Provides you with three preset overclocking configurations.
CONTROL	Allows you to remotely reboot or shut down your computer.

## On the Smart Phone/Tablet Device:

#### HotSpot

HotSpot turns your computer into a virtual wireless access point and allows you to share your connection with your other wireless devices. Make sure your computer has been connected to a network and Wi-Fi is enabled.

## The HotSpot Interface

Cloud Station (Server)
NotSpot
Make this network connection available for sharing
Available HotSpot device
SSID
SSID
HotSpot Password(must have at least 8 characters.)
Password
Start
HotSpot utility allows desktop's Internet connection share to other devices like tablet, or smart phone. This utility is based on WIFI HotSpot technology and it requires WIFI card and useable Internet connection.
si 🔹 📀

## Using HotSpot:

Configuring your host computer:

The options are as follows. Make sure to click Start to complete.

- Make this network connection available for sharing: Select a currently running network connection you want to share.
- Available HotSpot device: Select a network virtual adapter. If there are more than one Wi-Fi card on your computer, you need to select the one you want to use from the list.
- · SSID:
  - The hotspot SSID name. You can keep the default name or create your own one.
- HotSpot Password(must have at least 8 characters):

The password is required when other wireless devices want to access the Internet through the virtual wireless access point. You can keep the default name or create your own one. The password must have at least 8 characters and cannot be empty.

## Sharing your connection with other wireless devices:

First make sure Wi-Fi is enabled on the wireless devices. Then browse to the network configuration screen, search for available Wi-Fi networks, and tap the name of your virtual wireless access point, enter the password, and confirm.

## 5-2-6 EasyTune

GIGABYTE's EasyTune is a simple and easy-to-use interface that allows users to fine-tune their system settings or do overclock/overvoltage in Windows environment.

## The EasyTune Interface

CADRUS 🛤	yTune		$\mathcal{A}$	
C Smart Boost	Advanced CPU OC	Advanced DDR OC	Advanced Power	K Hotkey
ECO CRU I f Corel 3.00 GHC	<b>ဆို</b> Defau ကျင အစခ		DC	AutoTuning
BIOS: D9	Genuine Intel(R) CP 3.20GHz 1699.17 MH	U 0000 @ G Skill Intl IZ 2131.9	93 MHZ	ieForce GTX 670 324 MHz

## **Tabs Information**

Tab	Description
CC Smart Boost	The <b>Smart Boost</b> tab provides you with different levels of CPU frequency to choose to achieve desired system performance. After making changes, be sure to restart your system for these changes to take effect.
Advanced CPU OC	The <b>Advanced CPU OC</b> tab allows you to set CPU base clock, frequency, and voltages, and integrated graphics frequency. You can save the current settings to a profile. You can create up to 2 profiles.
Advanced DDR OC	The Advanced DDR OC tab allows you to set the memory clock.
(D) <sup>*</sup> Advanced Power	The Advanced Power tab allows you to adjust voltages.
K Hotkey	The HotKey tab allows you to set hotkeys for your profiles.



Available functions in EasyTune may vary by motherboard model and CPU. Grayed-out area(s) indicates that the item is not configurable or the function is not supported.



Incorrectly doing overclock/overvoltage may result in damage to the hardware components such as CPU, chipset, and memory and reduce the useful life of these components. Before you do the overclock/overvoltage, make sure that you fully know each function of EasyTune, or system instability or other unexpected results may occur.

## 5-2-7 Easy RAID

The GIGABYTE Easy RAID<sup>(Note)</sup> utility includes the following 'EZ' setups applications that will offer greatly simplified install and configuration procedures: Disk Mode Switch and XHD.

#### **Disk Mode Switch**

Disk Mode Switch allows you to change the SATA controller disk mode from AHCI to RAID mode even after the hard drive has been installed with an operating system. After switching the operating mode, please restart your computer and make sure the Intel® Rapid Storage Technology utility can work properly.



(Note) This feature is supported only in UEFI mode.

## XHD

With GIGABYTE XHD (Note 1), users can quickly configure a RAID-ready system for RAID 0 when a new SATA drive is added. All with a simple click of a button, XHD helps to enhance your hard drive read/write performance without the need for complex and time-consuming configurations.

## A. System Requirements

- 1. An Intel<sup>®</sup> Chipset motherboard supporting RAID
- 2. Intel® SATA controllers set to RAID mode
- 3. Intel® Rapid Storage Technology utility installed
- 4. Intel® SATA controller driver installed
- 5. The new drive must have equal or greater capacity than the system drive.

## B. Using XHD

Select XHD and click Create RAID 0 based on your need (Note 2).

<b>V</b> ADRUS				
EZ Easy R/	AID			
Disk Mode Switch				
RAID	OS HDD - * 500GB(500,363,689,984 Bytes) * HITACHI HDS721050CLA660 * SATA			
* 1.0TB(1.000,727,379,968 Bytes) * TOSHIBA DT01ACA100 * HDD0				
Warning: All data on the				
Create RAID 0				

- (Note 1) The XHD utility only supports the SATA connectors controlled by the Intel® Chipset.
- (Note 2) Except for the operating system drive, all data on other hard drive will be deleted. Back up your data before using the XHD utility.

## 5-2-8 Fast Boot

Through the simple GIGABYTE Fast Boot interface, you can enable or change the Fast Boot or Next Boot After AC Power Loss setting right in the operating system.

#### The Fast Boot Interface

<b>K</b> ADRUS			
Fast Boot			
Disabled			
Ultra Fast			
	SS		
Normal Boot			
C Fast Boot			
Enter BIOS Setup Now			
Save	Exit		

## Using Fast Boot

BIOS Fast Boot:

This option is the same as the **Fast Boot** option (Note) in BIOS Setup. It allows you to enable or disable the fast boot function to shorten OS boot time.

• Next Boot After AC Power Loss:

This option is the same as the **Next Boot After AC Power Loss** option (Note) in BIOS Setup. It allows you to select the system bootup mode upon the return of an AC power loss. (This mode is configurable only when **BIOS Fast Boot** is set to **Enabled** or **Ultra Fast**.)

After you configure the settings, click **Save** to save and click **Exit**. The settings will take effect on next boot. If you click the **Enter BIOS Setup Now** button, the system will restart and enter BIOS Setup immediately.

(Note) For more details about this function, refer to Chapter 2, "BIOS Setup."

Unique Features

## 5-2-9 Game Boost

This app allows you to flexibly manage your applications to optimize your gaming performance by freeing up system resources and memory usage.

## The Game Boost Interface

KADRUS	8
Game Boost	
Optimize Ctrl+Alt+B	Revert Ctrl+Alt+R
AlarmClock.exe     Time Management Application	24.7 MB
ApCent.exe     ApCent.exe	96.3 MB
ApplicationFrameHost.exe     Application Frame Host	22.7 MB
O dwm.exe Desktop Window Manager	45.4 MB
Explorer.EXE     Windows Explorer	98.5 MB
GBoost.exe	43.8 MB
GraphicsCardEngine.exe	3 MB
GO!	

## **Using Game Boost**

Select the application you want to suspend and then click **Go** to optimize your system for gaming. To revert the computer back to the state it was before, click **Revert**. In addition, two hotkeys are provided as follows:

- Optimize(Ctrl+Alt+B): Automatically optimizes your gaming platform and gaming performance.
- Revert(Ctrl+Alt+R): Restores your computer back to the state before the gaming begins.

## 5-2-10 Platform Power Management

This application allows you to change the Platform Power Management settings in Windows and sync the settings to the BIOS.

#### The Platform Power Management Interface



**Using Platform Power Management:** 

• Platform Power Management:

Enables or disables the Active State Power Management function (ASPM).

• PEG ASPM:

Allows you to configure the ASPM mode for the device connected to the CPU PEG bus.

• PCH ASPM:

Allows you to configure the ASPM mode for the device connected to Chipset's PCI Express bus.

DMI ASPM Control:

Allows you to configure the ASPM mode for both CPU side and Chipset side of the DMI link.

(Note) PEG ASPM, PCH ASPM, DMI ASPM Control are configurable only when Platform Power Management is set to Enabled.
# 5-2-11 RGB Fusion

This application allows you to enable or specify the lighting mode of the onboard LEDs and rear panel LEDs ( $^{Note 1}$ ) while in the Windows environment.

### The RGB Fusion Interface

CADRUS RGB	Fusion		
Basic	Advanced	Intelligent	
Pulse	Music	Color Cycle	© Cor
Static	Flash	Random	<u>ка о 255</u> нах особет Биогіте
Wave	Double Flash		Brightness

### **Using RGB Fusion**

The content of the top right corner: Allows you to enable or disable the LED lighting.
 The content of the top right corner: Allows your computer to connect to the GIGABYTE RGB Fusion app installed on your handheld devices. (Note 2)

Basic <sup>(Note 3)</sup>: Allows to you to configure the lighting behaviour of all LEDs/armor LEDs.
 Pulse — All LEDs simultaneously fade in and fade out.
 Music — All LEDs are synchronized with your music.
 Color Cycle — All LEDs simultaneously cycle through a full spectrum of colors.
 Static — All LEDs emit a single color.
 Flash — All LEDs simultaneously flash on and off.
 Random — Single LED regions flash randomly.
 Wave — A full color spectrum cascades throughout the armor LED.
 Double Flash — All LEDs flash in an interlaced pattern.
 DEMO — The LEDs/digital LED strip cycle through a full spectrum of analog/digital colors.

(Note 1) This function is available only on motherboards with an I/O shield that has audio LEDs.

(Note 2) Please download the **RGB Fusion** app from App Store or Google Play.

(Note 3) Regions/Modes/Colors available may vary by motherboard.

CADRUS R	GB Fusion		×	$\lambda$	`\//♥● ≉ ⊗
Basic	Advanced	Intelligent			
Z370 AORUS Gaming 3	The MainBoard LED	Modes			
					-AMA Flash
			-www-		Color Cycle
				Digital Light	
		Light strip Setting			
		Calibration			
		Digital Modes			
		Mode A			
		Profile A	B) (C)		
	Digital LED C1	RESET	SAVE	EXPORT	IMPORT
		RESET		Duon	

Advanced (Note): Allows you to configure the lighting behaviour and color of the LEDs in each region. You can
save the settings as a profile and create up to three customized profiles.

Pulse — The selected region LEDs simultaneously fade in and fade out.

Static — The selected region LEDs emit a single color.

Flash — The selected region LEDs simultaneously flash on and off.

Custom — The selected region LEDs can customize the Color stop, mode, color, transition and duration.

 $\label{eq:constraint} \textbf{Double Flash} - \textbf{The selected region LEDs flash in an interlaced pattern}.$ 

Off — Disable the selected region LEDs.

**Digital Light** — Provides multiple digital lighting mode throughout the armor LED and LED strip. **Calibration** — Calibrate LED colors.

CADRUS RGB	Fusion		$\searrow$	\// <b>*</b> * 8
Basic	Advanced	Intelligent		
CPU Temperature			<20%	Green
떠 <sup>8</sup> CPU Usage			21%-40% >41%	Yellow Orange
ල් <sup>6</sup> CPU Fan				
Schedule 05	900 × 17:30 ×			
LAN Speed				
System Temperatu	Jre			

• Intelligent: LEDs emit various colors based on the condition of your PC.

(Note) Regions/Modes/Colors available may vary by motherboard.

# 5-2-12 Smart TimeLock

GIGABYTE Smart TimeLock allows you to effectively manage computer or Internet usage time with simple rules and options.

### The Smart TimeLock Interface

<b>K</b> AORUS	
Smart TimeLoc	k
Weekday (Monday^     Allowed Time:	·Friday)
2.	.0 hours a day
Disable	
22:00 - 07:00	<u>·</u>
Weekend (Saturday Allowed Time:	v~Sunday)
6.	.0 hours a day
	8 hours
22:00 ~ 07:00	
Click the lock button to change sett	ing. Lock Mode: ShutDown 💌
Save	Exit

### Using Smart TimeLock

Click the lock icon of on the bottom left corner and enter the password (Note). Set the time when a user can or cannot use your computer for weekdays and weekends. The **Lock Mode** on the bottom right corner allows you to choose to turn off the computer or only close the Internet connection during the specified time period. Click **Save** to save the settings and click **Exit** to exit.

An alert will appear 15 minutes and 1 minute prior to the default shutdown time. When the alert appears, you can enter the password to extend the usage time or click **Cancel** to close the alert. If you respond **Cancel**, you will be requested to enter the password to extend the usage time again when the default shutdown time arrives, or the computer will shutdown right away.

(Note) You can set the User Password in the system BIOS Setup program to prevent the system time being changed by other users.

# 5-2-13 Smart Keyboard

GIGABYTE Smart Keyboard allows you to set your own hotkeys using the F1 through F12 keys. You can use the customized hotkeys to change the mouse sensitivity, replace a word or password, open a file or an application, all of which helps to make the most out of your keyboard and mouse.

### The Smart Keyboard Interface



### Using Smart Keyboard

Select one of the F1 through F12 keys and configure the following functions:

• Marco Key:

Allows you to assign key strokes to the selected key, or use the key to record mouse location, or set time interval between each keystroke.

• Sniper Key:

Using this option, you can switch the mouse sensitivity when you are in sniper mode for better sniper accuracy.

Smart Cut:

Allows you to create keyboard shortcuts for a file or an application.

• Smart Key:

Allows you to give the selected key the ability to replace to a word or password.

• Disable:

Allows you to disable the functionality of particular key(s).

After completing the settings, make sure to click Enable keyboard monitor function on the top right corner.

· Save:

Save current settings as a profile.

- Load: Load a previously save profile.
- (Note) It is recommended that Smart Keyboard be closed if it violates the end user license agreement of your game.

**Unique Features** 

# 5-2-14 Smart Backup

Smart Backup allows you to back up a partition as an image file every hour. You can use these images to restore your system or files when needed.

KADRUS	A 8
() Smart Backup	
Settings	
Backup	
	Badiup Non
Recovery	
	File Recovery
Pause smart backup process	

The Smart Backup main ment	The Sm	art Backu	ip main	menu
----------------------------	--------	-----------	---------	------

Button	Description
Settings	Allows you to select the source and destination partition
Start	Allows you to create a rescue drive
Backup Now	Allows you to perform the backup immediately
File	Allows you to recover your files from the backup
Recovery	image
System Recovery	Allows you to recover your system from the backup image

- Smi You
- Smart Backup only supports NTFS file system.
  - You need to select the destination partition in Settings the first time you use Smart Backup.
  - The Backup Now button will be available only after 10 minutes you have logged in Windows.
  - Select the Always run on next reboot checkbox to automatically enable Smart Backup after system reboot.

Source		
Drive	Total Space	L
E TOSHIBA DT01ACA100	931.513GB	
CAL 1	930.959GB	
B-DI Hitachi HDS721050CLA660	465.762GB	
- □ [語 D:\ [ 系統保留 ]	0.488GB	
-DIE EAL ]	465.271GB	
Dastination		-
Destination Select the backup destination.		
Destination Select the backup destination. Drive	Total Space	
Destination Stett the basing destination Drive B-DI Heachi HD5721059CLA660	Total Space 465.76268	U
Select the books destination Select the books destination Drive B-DIM Hausch HorziosoccLasso L DIM E1(1)	Total Space 465.762GB 465.271GB	l

### Creating a backup:

Click the **Settings** button on the main menu. In the **Settings** dialog box, select the source partition and destination partition and click **OK**. The initial backup will start after 10 minutes and regular backup will be performed hourly. Note: By default, all partitions on the system drive are selected as the backup source. The backup destination cannot be on the same partition as the backup source.

### Saving the backup to a network location:

If you want to save the backup to a network location, select **Browse network location**. Make sure your computer and the computer where you want to save the backup are in the same domain. Choose the network location where you want to store the backup and enter the user name and password. Follow the on-screen instructions to complete.

1 P S V Documen	ts Vev			- 0	×
$\leftrightarrow \rightarrow \cdot \uparrow \square $ Th	is PC > Bocuments >	v 1	5 Search Docs	viter(s	,p
	Nper				
-	Nerve	Date modified	Туре	See	
Contractor  Contr	My Enclop Sough Conlog Temp	5/16/2017 8:04 PM 5/16/2017 3:04 PM 5/16/2017 3:21 PM	File fulder File fulder File fulder		

### Recovering a file:

Click the **File Recovery** button on the main menu. Use the time slider on the top of the popped out window to select a previous backup time. The right pane will display the backed-up partitions in the backup destination (in the **My Backup** folder). Browse to the file you want and copy it.



# Recovering your system with Smart Backup:

Steps:

- 1. Click the System Recovery button on the main menu.
- 2. Select the location where your backup is saved.
- 3. Use the time slider to select a time point.
- Select a partition backup created on the selected time point and click Restore.
- Confirm whether to restart your system to proceed with the restore immediately or later. Once you respond "Yes" the system will restart to the Windows recovery environment. Follow the onscreen instructions to restore your system.



All of your files and programs will be deleted and replaced with those on the selected backup. If needed, be sure to make a copy of your data before the restore.

## 5-2-15 Smart HUD

GIGABYTE Smart HUD provides you with the ability to watch a video on YouTube or Twitch simultaneously during gameplay by simply setting the URLs on the UI. The easy-to-use UI allows you to memorize frequently used URLs, set window position and size, and change window transparency. Also, you can control Smart HUD videos and volume with hotkeys.

### The Smart HUD Interface



### **Using Smart HUD**

• The I icon on the top right corner: Allows you to open the Smart HUD window.

### Configuration Menu:

-	
□+ı/ edit	Add or remove video URLs or add preference.
Positioning	Select the window position.
Resolution	Select the window size.
Transparency	Set the window transparency.

### • Hot Keys:

Alt + F7	Start, pause
Alt + F8	Fast forward
Alt + F9	Fast backward
Alt + F10	Replay
Alt + F11	Increase the volume
Alt + F12	Decrease the volume

(Note) Please ensure that DirectX End-User Runtime has been installed on your system prior to installing Smart HUD.

# 5-2-16 System Information Viewer

GIGABYTE System Information Viewer allows you to monitor and adjust the fan speed in the operating system. You can also display the hardware monitor information on the desktop to view the system status at any time.

CADRUS Sys	stem Information Vi		A	* = • • •
<b>O</b> System Information	Smart Fan 5 Auto	Smart Fan 5 Advanced	Asystem Alert	
Clocks cru ecu: Multiplier dor		Processor Name Code Name Socket Technology Specification Cores Threads		
C Motherboard Notel Bios Vension		Stot Stot Serial Number Type Max Bandwidth Manufacturer Manufacturer Date	Slot #0	• 00000000 DDR IV SDRAM 8122 Møjtse PC17100(1066 MH2) G Skill Intl N/A

### The System Information Viewer Interface

### **Tabs Information**

Tab	Description
<b>i</b> System Information	The <b>System Information</b> tab provides information on the installed CPU, motherboard, and the BIOS version.
Smart Fan S Auto	The Smart Fan 5 Auto tab allows you to specify a Smart Fan mode.
Smart Fan 5 Advanced	The <b>Smart Fan 5 Advance</b> tab allows you to adjust the smart fan speed. The fans will run at different speeds according to system temperatures. Using the <b>Smart Fan</b> option you can adjust the fan's workload according system temperatures or you can fix the fan speeds using the <b>RPM Fixed Mode</b> option. Click the <b>Calibrate</b> button and the fan speed will be shown in relation to overall fan workload after calibration. The <b>Reset</b> button can revert the fan settings back to the last saved values.
System Alert	The <b>System Alerts</b> tab allows you to monitor hardware temperature, voltage and fan speed, and set temperature/fan speed alarm.
<u>့က</u> ူ Record	The <b>Record</b> tab allows you to record changes in system voltages, temperatures, and fan speeds. Please note, the recording will stop if you exit the <b>Record</b> tab during the recording process.



The speed control function requires the use of a fan with fan speed control design.

# 5-2-17 USB Blocker

GIGABYTE USB Blocker provides you with an easy-to-use interface that allows you to block certain USB device types on your PC. Devices classes that are blocked will be ignored by the operating system.

### The USB Blocker Interface

<b>CADRUS</b>	A
Device List	
<ul> <li>Communication device class</li> </ul>	
O Printer	
O Mass Storage	
<ul> <li>Smart Card</li> </ul>	
<ul> <li>Vendor Specific</li> </ul>	
ОК	

### Using USB Blocker

Select the class of USB device that you would like to block or unblock. Double left-click to change the **Blocked** or **Unblocked** status and click **OK**. Then enter your password and click **OK** to complete.

### 5-2-18 USB DAC-UP 2

GIGABYTE USB DAC-UP 2 allows you to increase the output voltage of the USB 3.1 Gen 1 ports on the front or back panel to strengthen the stability of your USB device(s).

### The USB DAC-UP 2 Interface

<b>K</b> ADRUS	3
USB DAC-UP 2	
USB 3.0 DAC-UP	
Front USB 3.0_1  Voltage Compensation +0.1V	
Front USB 3.0_2	
Apply Cancel	

### Using USB DAC-UP 2

Click the drop down list on the right of the USB 3.1 Gen 1 connector you want to adjust the voltage and choose an option. Then click **Apply**. After the system restarts, the settings will be synchronized with the BIOS settings. The options are as follows:

- Normal: Keeps the original output voltage.
- Disable USB bus power: Disables the power of the USB connectors. High-end audio players may connect their own external USB power source.
- Voltage Compensation +0.1V: Adds 0.1V to the original output voltage.
- Voltage Compensation +0.2V: Adds 0.2V to the original output voltage.
- Voltage Compensation +0.3V: Adds 0.3V to the original output voltage.

(Note) Connectors available may vary by motherboard.

# 5-2-19 V-Tuner

GIGABYTE V-Tuner (Note 1) allows you to easily fine-tune your graphics card in the Windows environment. You can manually overclock the GPU and memory (Note 2) or adjust the fan speed and power settings. It also allows you to monitor your graphics card status at any time.

# The V-Tuner Interface

CADRU	JNEP		A	* = • *
Tuning Ho	otkey			
<ul> <li>1. GeForce GTX 66</li> </ul>				
980 • GPI	J Clock(MHz)			
3004 • Me	mory Clock(MHz)			
975 • Mir	n. Core Voltage(mV)			<b></b>
100 • Pov	ver Target(%)			•
35 • Far	Speed(%)			
Juin.	Manus			
Profile				
Apply	Cancel	Defau	it	Save

### **Using V-Tuner**

You can manually select the values of each item or use the sliders for adjustment and then click **Apply**. To set the fan speed you need to select **Manual** first. You can save the current settings to a profile and create up to 4 profiles. To check the graphics card status, you can click the **a** icon on the top right corner.

(Note 1) Before using V-Tuner, be sure to install the graphics card driver first. (Note 2) Items available may vary by graphics cards.


1

# Chapter 6 Appendix

# 6-1 Killer Control Center

The Killer Control Center allows you to view your network connection status and Internet bandwidth and to configure your network settings. After installing the LAN driver, click the Start menu icon and search for **Killer Networking>Killer Control Center**. Or click on the **I** con in the notification area. After setting up your network connection, perform a speed test on the **Settings** page.



### Overview

This page shows the total internet (Note) traffic received by the system in real time and application priorities.

### Apps

On this page, you can determine an application's default traffic priority over the Internet connection. In the **Priority** column, you can assign a priority level for each application, with 1 being the important and 6 being the least important.

You can change the upload and download bandwidth for each application as well. Drag the gray square on the right end of an application to change the bandwidth.

Control	Center		 		 -	• ×
	ħ					
	Network Name			Total Download	Total Lipitual	
(I)						
æ				_		
8		Oragle Owne				
		V Notes Security				
-		19 19 Process for Windows Service				
	草 4-1	🙆 Search and Cortana application				
Wei Analyzer		G cauge				
٥		Monat - 177 BR				
				_		



# Wifi Analyzer

This page shows nearby networks in 2.4 Ghz and 5 Ghz, and what channels each network is occupying.

### Settings

This page shows basic network information. You can change the speed limits for each network.

N offer Cardwell Co	Killi		ROL R		-	×
			Ne	twork Settings		
		droidAFC498		fired Network	red Network 2	
		17,74 Migs		28.43 Migs	88.70 Miles	
		53.29 Mops		24.35 Mbps	27,48 Mbps	
*						
~		Eller Ethernet		Killer Ethomet 2	Killer Dhemet 2	
		192.168.43.115		192.568.54	192,168,199,520	
					4006 w224 500 halfe.	
a –		192.168.43.1		192.168.1.1	192,168,199,1	
		255.255.2658		215.215.255.0	255,255,2550	
		9C 86 D0 00 C1 88		00.13.74.55.11.62	00 13 74 55 11 43	
	Torone speed					
	HEIGHAR SORES	inter and a second seco				
	Workey Sand	1642				
analyzer.						
				antern Pettings		
				yatan setanga		
	_					
	_					
		- BRITER				
	- 01					

(Note) Enabling the Killer Doubleshot Pro feature on the Settings page allows multiple Killer products to operate at the same time.

# 6-2 Configuring Audio Input and Output

# 6-2-1 Configuring 2/4/5.1/7.1-Channel Audio

The motherboard provides five audio jacks on the back panel which support 2/4/5.1/7.1-channel  $^{(\rm Note)}$  audio. The picture to the right shows the default audio jack assignments.



To configure 4/5.1/7.1-channel audio, you have to retask either the Line in or Mic in jack to be Side speaker out through the audio driver.

### High Definition Audio (HD Audio)

HD Audio includes multiple high quality digital-to-analog converters (DACs) and features multistreaming capabilities that allow multiple audio streams (in and out) to be simultaneously processed. For example, users can listen to MP3 music, have an Internet chat, make a telephone call over the Internet, and etc. all at the same time.

### A. Configuring Speakers

Step 1:

After installing the audio driver, restart your computer. On the Windows desktop, click the **Realtek HD Audio Manager** icon in the notification area to access the **HD Audio Manager**.



Step 2:

Connect an audio device to an audio jack. The **The current connected device is** dialog box appears. Select the device according to the type of device you connect. Then click **OK**.



(Note) 2/4/5.1/7.1-Channel Audio Configurations:

Refer to the following for multi-channel speaker configurations.

- 2-channel audio: Headphone or Line out.
- · 4-channel audio: Front speaker out and Rear speaker out.
- 5.1-channel audio: Front speaker out, Rear speaker out, and Center/Subwoofer speaker out.
- 7.1-channel audio: Front speaker out, Rear speaker out, Center/Subwoofer speaker out, and Side speaker out.

Step 3:

On the **Speakers** screen, click the **Speaker Configuration** tab. In the **Speaker Configuration** list, select **Stereo**, **Quadraphonic**, **5.1 Speaker**, or **7.1 Speaker** according to the type of speaker configuration you wish to set up. Then the speaker setup is completed.



### **B. Configuring Sound Effect**

You may configure an audio environment on the Sound Effects tab.

### C. Enabling Smart Headphone Amp

The Smart Headphone Amp feature automatically detects impedance of your head-worn audio device, whether earbuds or high-end headphones to provide optimal audio dynamics. To enable this feature, connect your head-worn audio device to the Line out jack on the front panel and then go to the HD Audio 2nd output page. Enable the Smart Headphone Amp feature. The Headphone Power list below allows you to manually set the level of headphone volume, preventing the volume from being too high or too low.



### \* Configuring the Headphone

When you connect your headphone to the Line out jack on the back panel or front panel, make sure the default playback device is configured correctly.

Step 1:

Locate the **(**) icon in the notification area and right-click on this icon. Select **Playback devices**.





Step 2:

On the **Playback** tab, make sure your headphone is set as the default playback device. For the device connected to the Line out jack on the back panel, right-click on **Speakers** and select **Set as Default Device**; for the device connected to the Line out jack on the front panel, right-click on **Realtek HD Audio 2nd output**.

yback	Recording Sounds Commun	ications	
ielect a	playback device below to mod	dify its settings:	
	Digital Audio (HDMI) 4- High Definition Audio Not plugged in	Device	
	Digital Audio (HDMI) 5- High Definition Audio Not plugged in	Device	
0	Speakers Realtek High Definition / Default Device	Audio	
6	Realtek HD Audio 2nd or Realtek High Definition A Default Communications	Audio	
-	Realtek Digital Output	Disable	
	Realter High Definition A Ready	Set as Default Device	Þ
Confi	igure	<ul> <li>Show Disabled Devices</li> <li>Show Disconnected Device</li> </ul>	es
		Properties	

# 6-2-2 Configuring S/PDIF Out

The S/PDIF Out jack can transmit audio signals to an external decoder for decoding to get the best audio quality.

### 1. Connecting a S/PDIF Out Cable:

Connect a S/PDIF optical cable to an external decoder for transmitting the S/PDIF digital audio signals.



Connects to a S/PDIF optical cable

### 2. Configuring S/PDIF Out:

On the **Digital Output** screen, click the **Default Format** tab and then select the sample rate and bit depth. Click **OK** to complete.



# 6-2-3 Configuring Microphone Recording

Step 1:

After installing the audio driver, restart your computer. On the Windows desktop, click the **Realtek HD Audio Manager** icon in the notification area to access the **HD Audio Manager**.



### Step 2:

Connect your microphone to the Mic in jack on the back panel or the Mic in jack on the front panel. Then configure the jack for microphone functionality.

Note: The microphone functions on the front panel and back panel cannot be used at the same time.



### Step 3:

Go to the **Microphone** screen. Do not mute the recording volume, or you'll not be able to record the sound. To hear the sound being recorded during the recording process, do not mute the playback volume. It is recommended that you set the volumes at a middle level.



Appendix

#### Step 4:

To raise the recording and playback volume for the microphone, you can set the Microphone Boost level on the right of the **Recording Volume** slider.



### \* Enabling Stereo Mix

If the HD Audio Manager does not display the recording device you wish to use, refer to the steps below. The following steps explain how to enable Stereo Mix (which may be needed when you want to record sound from your computer).

#### Step 1:

Locate the do icon in the notification area and right-click on this icon. Select **Recording devices**.





### Step 2:

On the **Recording** tab, right-click on **Stereo Mix** item and select **Enable**. Then set it as the default device. (if you do not see **Stereo Mix**, right-click on an empty space and select **Show Disabled Devices**.)



#### Step 3:

Now you can access the HD Audio Manager to configure Stereo Mix and use Voice Recorder to record the sound.



# 6-2-4 Using the Voice Recorder

After setting up the audio input device, to open the **Voice Recorder**, go to the Start menu and search for **Voice Recorder**.



## A. Recording Audio

- 1. To begin the recording, click the Record icon <a>.</a>
- 2. To stop the recording, click the Stop recording icon **O**.

## B. Playing the Recorded Sound

The recordings will saved in Documents>Sound Recordings. Voice Recorder records audio in MPEG-4 (.m4a) format. You can play the recording with a digital media player program that supports the audio file format.

# 6-2-5 Sound BlasterX 720°

Launch the Sound Blaster Connect 2 utility from the Start menu or click the 🚟 icon in the notification area.

#### Dashboard:

BlasterX Experience gives you a selection of professionally tuned audio profiles. The customizable audio profiles create a unique and optimal sound experience for popular game titles and most of your playback needs. Select a BlasterX Experience, view the current audio preset, and the adjust the settings based on your needs, such as enable Reality 3D to enhance immersion or enable/disable equalizer, Scout Mode, etc.

#### Sound:

Each audio preset can be further customized according to your acoustic preference for music, games and movies.

- Reality 3D Boost and enhance 3D immersion for your entertainment in music, movies and games.
- Equalizer Select from a plethora of Equalizer presets to match your audio, or enhance the bass or treble to your liking with our graphic equalizer.
- ACOUSTIC ENGINE
   Enhance and tweak your auditory experience to perfection with intelligent controls powered by BlasterX Acoustic Engine.
- SCOUT 2.0

A new and improved Scout Mode that not only lets you hear, but also visualize your enemies on the battle field. Scout Radar transforms your mobile device into a radar display that reveals your enemy's location in realtime. Now, besides hearing your enemies, you can actually visualize and pinpoint your enemy's position. (Requires an Internet connection and the Scout Radar mobile app must be installed on your mobile device.)

Please note the following when using the Scout Radar feature:



- The Scout Radar feature is not supported if you connect the output device to the Line out jack on the front panel.
- Download the Scout Radar app from App Store or Google Play and install it on your mobile device.
- Your mobile device and PC have to connect to the Internet via the same router.
- If you use a headphone as the audio output device, go to "Setup\Select Speaker Configuration" to select 4.0/5.1/7.1-channel and set Enable headphone mode for your speaker output to On.

Appendix









Environment

State-of-the-art multi-environment rendering and reverb modeling offers a realistic and immersive 3D gaming experience to add more immersion to your listening experience.

### Voice Settings:

Improve your voice quality and inject fun into your in-game chats, broadcasts to social media with voice enhancements.

Clarity

Powered by Crystal Voice, you can significantly reduce noise and feedback as you speak in real-time.

Noise Reduction enables the speaker to be heard clearly over background noise



Acoustic Echo Cancellation eliminates echoes and enables the speaker to listen to the other party clearly. Smart Volume automatically adjusts the loudness of the speaker's voice to maintain a consistent volume level.

Voice Enhancer enhances the tone of your voice to suit your usage. Select a list of presets.

VOICE MORPH

Have fun changing your voice to different characters during game play,game casting or recordings. Select one of the many Voice Morph options to enhance your tone or create interesting accents and sound like a completely different person.

### Setup:

For the best listening experience, you can optimize the audio output to work with your preferred audio device.

Speakers

Set the audio output according to your connected headphones/speakers.

Calibration

Sound Blaster Connect can help you calibrate your speakers to match the unique acoustics of your room, so you always get the best audio possible.

### Settings:

Set application language and the distance measuring unit, or check for software updates (requires an Internet connection). Or revert all of the settings to the factory defaults.





(Note) For more information on Sound BlasterX 720°, please visit the CREATIVE® website.

# 6-3 Troubleshooting

# 6-3-1 Frequently Asked Questions

To read more FAQs for your motherboard, please go to the Support\FAQ page on GIGABYTE's website.

- Q: Why is the light of my keyboard/optical mouse still on after the computer shuts down?
- A: Some motherboards provide a small amount of standby power after the computer shuts down and that's why the light is still on.
- Q: How do I clear the CMOS values?
- A: For motherboards that have a Clear CMOS button, press this button to clear the CMOS values (before doing this, please turn off the computer and unplug the power cord). For motherboards that have a Clear CMOS jumper, refer to the instructions in Chapter 1 to short the jumper to clear the CMOS values. If your board doesn't have this jumper/button, refer to the instructions on the motherboard battery in Chapter 1. You can temporarily remove the battery from the battery holder to stop supplying power to the CMOS, which will clear the CMOS values after about one minute.
- Q: Why do I still get a weak sound even though I have turned my speaker to the maximum volume?
- A: Make sure your speaker is equipped with an internal amplifier. If not, try a speaker with power/amplifier.

# 6-3-2 Troubleshooting Procedure

If you encounter any troubles during system startup, follow the troubleshooting procedure below to solve the problem.







If the procedure above is unable to solve your problem, contact the place of purchase or local dealer for help. Or go to the **Support Chrical Support** page to submit your question. Our customer service staff will reply you as soon as possible.

# 6-4 Debug LED Codes

# Regular Boot

Code	Description
10	PEI Core is started.
11	Pre-memory CPU initialization is started.
12~14	Reserved.
15	Pre-memory North-Bridge initialization is started.
16~18	Reserved.
19	Pre-memory South-Bridge initialization is started.
1A~2A	Reserved.
2B~2F	Memory initialization.
31	Memory installed.
32~36	CPU PEI initialization.
37~3A	IOH PEI initialization.
3B~3E	PCH PEI initialization.
3F~4F	Reserved.
60	DXE Core is started.
61	NVRAM initialization.
62	Installation of the PCH runtime services.
63~67	CPU DXE initialization is started.
68	PCI host bridge initialization is started.
69	IOH DXE initialization.
6A	IOH SMM initialization.
6B~6F	Reserved.
70	PCH DXE initialization.
71	PCH SMM initialization.
72	PCH devices initialization.
73~77	PCH DXE initialization (PCH module specific).
78	ACPI Core initialization.
79	CSM initialization is started.
7A~7F	Reserved for AMI use.
80~8F	Reserved for OEM use (OEM DXE initialization codes).
90	Phase transfer to BDS (Boot Device Selection) from DXE.
91	Issue event to connect drivers.

Code	Description			
92	PCI Bus initialization is started.			
93	PCI Bus hot plug initialization.			
94	PCI Bus enumeration for detecting how many resources are requested.			
95	Check PCI device requested resources.			
96	Assign PCI device resources.			
97	Console Output devices connect (ex. Monitor is lighted).			
98	Console input devices connect (ex. PS2/USB keyboard/mouse are activated).			
99	Super IO initialization.			
9A	USB initialization is started.			
9B	Issue reset during USB initialization process.			
9C	Detect and install all currently connected USB devices.			
9D	Activated all currently connected USB devices.			
9E~9F	Reserved.			
A0	IDE initialization is started.			
A1	Issue reset during IDE initialization process.			
A2	Detect and install all currently connected IDE devices.			
A3	Activated all currently connected IDE devices.			
A4	SCSI initialization is started.			
A5	Issue reset during SCSI initialization process.			
A6	Detect and install all currently connected SCSI devices.			
A7	Activated all currently connected SCSI devices.			
A8	Verify password if needed.			
A9	BIOS Setup is started.			
AA	Reserved.			
AB	Wait user command in BIOS Setup.			
AC	Reserved.			
AD	Issue Ready To Boot event for OS Boot.			
AE	Boot to Legacy OS.			
AF	Exit Boot Services.			
В0	Runtime AP installation begins.			
B1	Runtime AP installation ends.			
B2	Legacy Option ROM initialization.			
B3	System reset if needed.			

Code	Description
В4	USB device hot plug-in.
B5	PCI device hot plug.
В6	Clean-up of NVRAM.
В7	Reconfigure NVRAM settings.
B8~BF	Reserved.
C0~CF	Reserved.

### S3 Resume

Code	Description
E0	S3 Resume is started (called from DXE IPL).
E1	Fill boot script data for S3 resume.
E2	Initializes VGA for S3 resume.
E3	OS S3 wake vector call.

# Recovery

Code	Description	
F0	Recovery mode will be triggered due to invalid firmware volume detection.	
F1	Recovery mode will be triggered by user decision.	
F2	Recovery is started.	
F3	Recovery firmware image is found.	
F4	Recovery firmware image is loaded.	
F5~F7	Reserved for future AMI progress codes.	

# Error

Code	Description	
50~55	Memory initialization error occurs.	
56	Invalid CPU type or speed.	
57	CPU mismatch.	
58	CPU self test failed or possible CPU cache error.	
59	CPU micro-code is not found or micro-code update is failed.	
5A	Internal CPU error.	
5B	Reset PPI is failed.	
5C~5F	5F Reserved.	
D0	CPU initialization error.	
D1	IOH initialization error.	

Code	Description	
D2	PCH initialization error.	
D3	Some of the Architectural Protocols are not available.	
D4	PCI resource allocation error. Out of Resources.	
D5	No Space for Legacy Option ROM initialization.	
D6	No Console Output Devices are found.	
D7	No Console Input Devices are found.	
D8	It is an invalid password.	
D9~DA	P~DA Can't load Boot Option.	
DB	Flash update is failed.	
DC	Reset protocol is failed.	
DE~DF	Reserved.	
E8	S3 resume is failed.	
E9	S3 Resume PPI is not found.	
EA	S3 Resume Boot Script is invalid.	
EB	S3 OS Wake call is failed.	
EC~EF	EF Reserved.	
F8	Recovery PPI is invalid.	
F9	Recovery capsule is not found.	
FA	Invalid recovery capsule.	
FB~FF	Reserved.	

I

# **Regulatory Statements**

### Regulatory Notices

This document must not be copied without our written permission, and the contents there of must not be imparted to a third party nor be used for any unauthorized purpose. Contravention will be prosecuted. We believe that the information contained herein was accurate in all respects at the time of printing. GIGABYTE cannot, however, assume any responsibility for errors or omissions in this text. Also note that the information in this document is subject to change without notice and should not be construed as a commitment by GIGABYTE.

### Our Commitment to Preserving the Environment

In addition to high-efficiency performance, all GIGABYTE motherboards fulfill European Union regulations for RoHS (Restriction of Certain Hazardous Substances in Electrical and Electronic Equipment) and WEEE (Waste Electrical and Electronic Equipment) environmental directives, as well as most major worldwide safety requirements. To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, GIGABYTE provides the following information on how you can responsibly recycle or reuse most of the materials in your "end of life" product.

### Restriction of Hazardous Substances (RoHS) Directive Statement

GIGABYTE products have not intended to add and safe from hazardous substances (Cd, Pb, Hg, Cr+6, PBDE and PBB). The parts and components have been carefully selected to meet RoHS requirement. Moreover, we at GIGABYTE are continuing our efforts to develop products that do not use internationally banned toxic chemicals.

### Waste Electrical & Electronic Equipment (WEEE) Directive Statement

GIGABYTE will fulfill the national laws as interpreted from the 2002/96/EC WEEE (Waste Electrical and Electronic Equipment) directive. The WEEE Directive specifies the treatment, collection, recycling and disposal of electric and electronic devices and their components. Under the Directive, used equipment must be marked, collected separately, and disposed of properly.

### WEEE Symbol Statement



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling, please contact your local government office, your household waste disposal service or where you purchased the product for details of environmentally safe recycling.

- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local or regional
  waste collection administration for recycling.
- If you need further assistance in recycling, reusing in your "end of life" product, you may contact us at the Customer Care number listed in your product's user's manual and we will be glad to help you with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly. With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

### FCC Notice (U.S.A. Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult a dealer or experienced TV/radio technician for help.

### Canada, Industry Canada (IC) Notices / Canada, avis d'Industry Canada (IC)

- This Class B digital apparatus complies with Canadian ICES-003 and RSS-210.
- Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210.
- Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.




Appendix

l




Appendix



<ul> <li>GIGA-BYTE TECHNOLOGY CO., LTD.</li> </ul>
Address: No.6, Baoqiang Rd., Xindian Dist.,
New Taipei City 231, Taiwan
TEL: +886-2-8912-4000
FAX: +886-2-8912-4005
Tech. and Non-Tech. Support (Sales/Marketing) :
http://esupport.gigabyte.com
WEB address (English): http://www.gigabyte.com
WEB address (Chinese): http://www.gigabyte.tw
• G.B.T. INC U.S.A.
TEL: +1-626-854-9338
FAX: +1-626-854-9326
Tech. Support: http://esupport.gigabyte.com
Warranty Info: http://rma.gigabyte.us
Web address: http://www.gigabyte.us
G.B.T. INC (USA) - Mexico
Tel: +1-626-854-9338 x 215 (Soporte de habla hispano)
FAX: +1-626-854-9326
Correo: soporte@gigabyte-usa.com
Tech. Support: http://rma.gigabyte.us
Web address: http://latam.giga-byte.com
Giga-Byte SINGAPORE PTE. LTD Singapore
WEB address : http://www.gigabyte.sg
Thailand
WEB address : http://th.giga-byte.com
Vietnam
WEB address : http://www.gigabyte.vn

 NINGBO G.B.T. TECH. TRADING CO., LTD. - China WEB address : http://www.gigabyte.cn Shanghai TEL: +86-21-63400912 FAX: +86-21-63400682 Beijing TEL: +86-10-62102838 FAX: +86-10-62102848 Wuhan TEL: +86-27-87685981 FAX: +86-27-87579461 GuangZhou TEL: +86-20-87540700 FAX: +86-20-87544306 Chengdu TEL: +86-28-85483135 FAX: +86-28-85256822 Xian TEL: +86-29-85531943 FAX: +86-29-85510930 Shenyang TEL: +86-24-83992342 FAX: +86-24-83992102 GIGABYTE TECHNOLOGY (INDIA) LIMITED - India • WEB address : http://www.gigabyte.in Saudi Arabia WEB address : http://www.gigabyte.com.sa Gigabyte Technology Pty. Ltd. - Australia

WEB address : http://www.gigabyte.com.au

• Hungary
WEB address : http://www.giga-byte.hu
Turkey
WEB address : http://www.gigabyte.com.tr
Russia
WEB address : http://www.gigabyte.ru
Poland
WEB address : http://www.gigabyte.pl
Ukraine
WEB address : http://www.gigabyte.ua
Romania
WEB address : http://www.gigabyte.com.ro
Serbia
WEB address : http://www.gigabyte.co.rs
Kazakhstan
WEB address : http://www.gigabyte.kz

# GIGABYTE eSupport

To submit a technical or non-technical (Sales/Marketing) question, please link to: http://esupport.gigabyte.com

<b>IIGABYTE</b> "	@Support
Rewal	Downloads FAG Warrenty
f 8 🍇	Sign in with GIGABYTE Passport Email Password featurement?
All intellectual property rights, including without limitati	Login > Rot a nenter yet h