Quick Start Guide to your S1080/S1081 Accessories 快速導引S1080/S1081週邊配備

Extended Battery 擴充電池 Docking Station 擴充基座 G1/38/18/112 the extend battery is charging and will switch off when fully charged. GIGABYT 3 extra hours of battery life with 插上擴充電池後燈亮表示開始充電;當充 super light 100g battery! 電完成後燈號將自動關閉。 提供額外3 小時電力,並僅有100g重! Use the extended battery as an extra power Charge through Docking Station or through Slate PC while connected to AC power source by connecting it to the Slate PC. 利用平板電腦的連接埠來連接並提供平板電腦 透過擴充基座來充電或連接至平板電腦並透過 額外的電力。 AC電源來充電 Continuing the spirit of the successful and unique Booktop™ series, the Docking Station transforms the Slate PC and provides completely new user scenarios. The docking station is packed with I/O ports, making it easy to hook up peripheral devices, like an external monitor, printers, flash drives, cameras and Keyboard 鍵盤 Case 皮套 mobile phones. The docking station also comes with two dual-channel speakers, two sub-woofers and a built-in ODD, perfect for enjoying movies, music and other multimedia. 延續GIGABYTE Booktop™系列的精神,此款獨家研發的擴充基座將平板電腦的運用提至全新境界,提供 您更不一樣的選擇。備有完整擴充埠可外接大螢幕多工使用,無論是印表機、隨身碟或是手機傳輸線, 全都能讓您輕鬆連結;加上兩個雙聲道喇叭和兩個重低音喇叭,搭配內建的ODD,讓平板電腦搖身一變 成為生活娛樂的好夥伴,輕鬆聆聽音樂、觀賞電影,為您忙碌之餘帶來絕佳的多媒體影音娛樂饗宴 . . To use the case as a stand, place the keyboard and Slate PC as shown above. The viewing angle can be adjusted with the built-in buttons on the back of the case. 將鍵盤置於皮套鍵盤套內,並調整皮套背後鈕 Connect the keyboard to the Slate PC through 扣角度來選擇自己所喜好的使用角度。 the USB cable provided to enjoy a real Please place keyboard into the case gently. The keyboard Enhanced audio and visual experience with Greate Expandability. / 豐富的擴充埠。 Notebook experience! protector is consumable material, GIGABYTE will not be held the built-in speakers and Optical Disk Drive. 利用USB連接線來連接平板電腦,可提供您小 responsible for any damages arising from the improper using behaviors. / 請將鍵盤小心的置入皮套內。保護膜為耗材,任 确化音樂享受&光碟機配備。 筆電的操作環境。 *Images Used for Reference Only 何人為疏失或不當使用習慣造成的鍵盤保護膜損害不屬於保

* The sales of the accessories may vary according to your location. Please check with your dealer for the availability of the accessories. 配件銷售區域會依照您所在的地區而有所不同,實際配件販賣狀況請和您的經銷商詢問。

固節圍內



CE Notice (European Union) :

This symbol (€ indicates this S1080/S1081 Slate PC complies with the EMC Directive and the European Unior Voltage Directive. This symbol also indicates that \$1080/\$1081 meets the following technical standards:

- EN 55022 "Limitations and Methods of Measurement for the Radio Interferences of Information Tech Equipment."
- EN 55024 "Information technology equipment Immunity characteristics Limits and methods of measurem EN 61000-3-2 — "Electromagnetic compatibility (EMC) - Chapter 3: Limits - Section 2: Limits on the harmonic
- emissions (Equipment input current up to and including 16 A per phase).' EN 61000-3-3 — "Electromagnetic compatibility (EMC) - Chapter 3: Limits - Section 3: Limits on the voltage fluct
- and flicker in low-voltage power supply systems for equipment with rate current up to and including 16 A." NOTE: EN 55022 emissions requirements provide for two classifications
- Class A governs commercial use
- Class B is governs residential use

Federal Communications Commission Notice :

This equipment has been tested and found to comply with the limits for a Class B digital service, pursuant to Part 1 FCC rules. These limits are designed to provide reasonable protection against harmful interference in a res installation. Any changes or modifications made to this equipment may void the user's authority to operate this equ This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordan the instructions, may cause harmful interference to radio communications. However, there is no guarante interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or tel reception, which can be determined by turning the equipment off and on, the user is encouraged to try to con interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- All external cables connecting to this basic unit must be shielded.
- For cables connecting to PCMCIA cards, see the option manual or installation instructions.

Function 功能

Wireless LAN

無線區域網路

隆低亮度

調高亮度

Brightness Down

Brightness Up

Display Toggle

Touch Panel Toggle

啟用/停用觸控面板

螢幕顯示切換

Sleep

睡眠

BSMI Notice (Taiwan Only) / BSMI須知(限台灣)

Hotkev 圖示

Fn

Fn

Fn

(F2 ((*))

F3 ▼☆

F4 ▲☆

F5

F6

+

The symbol above must be attached to the product indicating compliance with the BSMI standard. 產品必須貼上以上標誌,代表符合BSMI標準的規定。

th the EMC Directive and the European Union's Low ets the following technical standards: the Radio Interferences of Information Technology		GIGABYTE		
racteristics - Limits and methods of measurement." r 3: Limits - Section 2: Limits on the harmonic current phase)." 3: Limits - Section 3: Limits on the voltage fluctuations ith rate current up to and including 16 A." classifications for a Class B digital service, pursuant to Part 15 of the tection against harmful interference in a residential value to the user's authority to operate this equipment. nergy, and if not installed and used in accordance with munications. However, there is no guarantee that it does cause harmful interference to radio or television and on, the user is encouraged to try to correct the hat to which the receiver is connected. p.	Esc F1 Z [−] Tab + Caps Lock Caps Lock Caps Lock	$\begin{bmatrix} 7 \\ 1 \\ 2 \\ 2 \\ 3 \\ 4 \\ 2 \\ 4 \\ 2 \\ 4 \\ 4 \\ 4 \\ 4 \\ 4 \\ 4$	$\begin{bmatrix} 7 \\ 8 \\ 7 \\ 5 \\ 6 \\ 7 \\ 7 \\ 6 \\ 7 \\ 7 \\ 7 \\ 7 \\ 7 \\ 7$	$F_{\text{Vil}}^{0} \xrightarrow{F_{10}} F_{12}^{11} \xrightarrow{F_{12}} \underbrace{\text{Num}(k)}_{\text{Insert}} \xrightarrow{\text{Pause}}_{\text{Break}} \underbrace{\text{Delete}}_{\text{SysRq}}$ $F_{\text{Vil}}^{*} \xrightarrow{\circ} \xrightarrow{\circ} \xrightarrow{\circ} \xrightarrow{\circ} \xrightarrow{\circ} \xrightarrow{\circ} \xrightarrow{\circ} \circ$
installation instructions. bliance with the BSMI standard. The Hotkey functions list below required Smart manager installed. 下述Hotkey功能需搭配Smart Manager方可使用。				
Description 説明		Hotkey 圖示	Function 功能	Description 説明
Enable the computer into Sleep mode. 按下此按鍵組合可讓系統進入睡眠模式。 使用此模式時,LCD面板的背景燈會關閉 內部裝置也會進入低耗電狀態。		Fn + F7	Speaker Toggle 靜音	Turns the speaker on and off. 按下此按鍵組合可開啟/關閉音訊訊號的輸出。
Enables/disables the Wireless LAN function. 啟動/停用無線區域網路。		Fn + F8	Volume Down 降低音量	Decreases the sound volume. 按下此按鍵組合可降低音訊輸出的音量。
Decrease the screen brightness. 按下此按鍵組合可降低LCD的亮度。		Fn + F9 ⊄ ▲	Volume Up 調高音量	Increases the sound volume. 按下此按鍵組合可調高音訊輸出的音量。
Increases the screen brightness. 按下此按键組合可提高LCD的亮度。		Fn + Fi0 ∀ill	3.5G 3.5G	Enables / disables the 3.5G function. 按下此按鍵組合可啟用或停用3.5G功能。(選配功能)
Switches display output between the dis external monitor (if connected) and both 在電腦螢幕以及外接式顯示器之間切換影 輸出,或者同時顯示。		Fn + F11	Bluetooth 藍牙	Enables/disables the Bluetooth function. 按下此按鍵組合可啟用或停用藍牙功能。
Turns the internal touchpad on and off. 按下此按鍵組合可啟用/停用觸控板功能。	· · · · · · · · · · · · · · · · · · ·	Fn + F12	Webcam Toggle 網路攝影機	Enables/disables the webcam. 按下此按鍵組合可啟用/停用網路攝影機。