
GS-W42G-P08R Slide Rails and Rack Installation Instructions

Preparing the Slide Rail Assembly

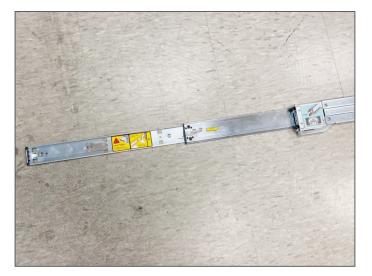


Unpack the slide rail assembly.



Pull the slide rail assembly 2 until it reaches stop.



4

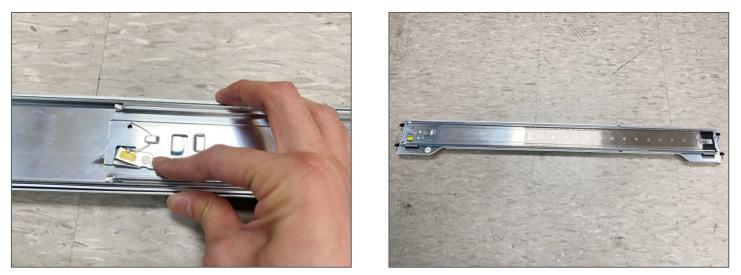

slide rail assembly.






- Installing the Front Section of the Slide **Rail onto the W42G-P08R**
- Remove the side cover. Push the blue latch and push forward the side cover to remove it.





2 locked on.) Do the same for the other slide.

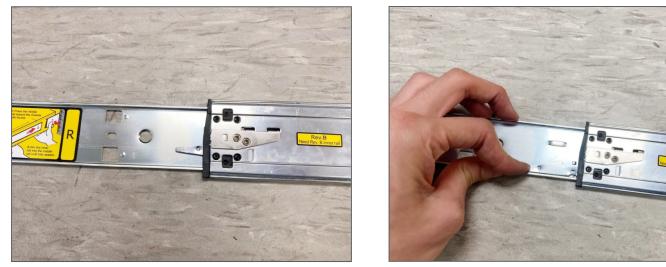

3 Push the latch between the front and middle section of the rail assembly, then simultaneously withdraw the front section from slide rail assembly.


After withdrawing the front section, push back the middle section into the slide rail assembly. Push the latch and push back the middle section into the




Position the front section against the W42G-P08R, and make sure the mounting holes on the front section are aligned with the locating pins on the side of the W42G-P08R. Assemble the front section onto the W42G-P08R and pull back to lock on. (NOTE: Make sure the below fixed bracket is

GS-W42G-P08R Slide Rails and Rack Installation Instructions



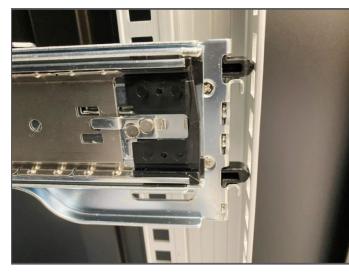

Position the slide rail assembly in your rack and attach the mounting bracket to the rack posts. Then lock on and push down.

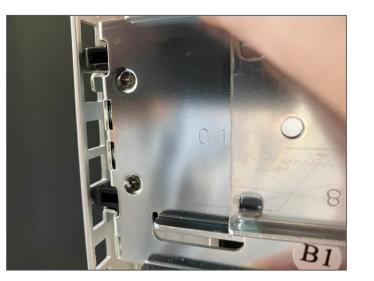



2 down. Do the same for the other slide.





1 Pull out the slide rail assembly on your rack until it stops.



2 Align the front section of the W42G-P08R with the rail assembly and insert it. and right slides simultaneously to prevent any stuck during the insert process.)





The front side and rear side assembly methods are the same. Attach the mounting bracket to the rack posts. Then lock on and push

(NOTE: You should insert the left



B Installation completed.

GS-W42G-P08R Slide Rails and Rack Installation Instructions





5 Sliding the W42G-P08R Back into the Rack



