



# King Slide® — 3A02-600

Note: Please check rack post type. The rail pre-installed type is for square hole post. If rack post is round hole post, please switch to the suitable screws.

Remove A type screws(pre-installed) and switch to B type screws.

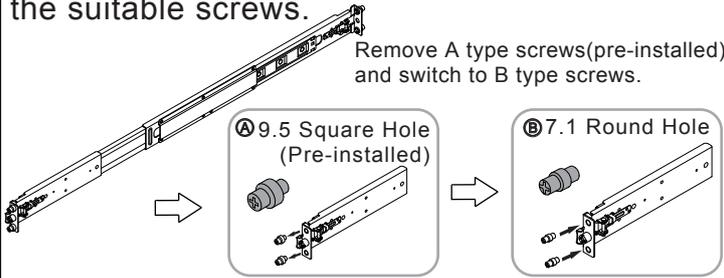


## 1) Remove the inner rail.

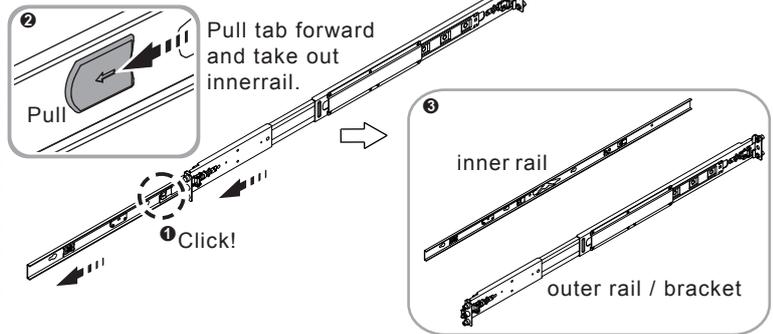


## 2) Install the inner rail onto chassis.

### Detach Front Bracket from Rack Post

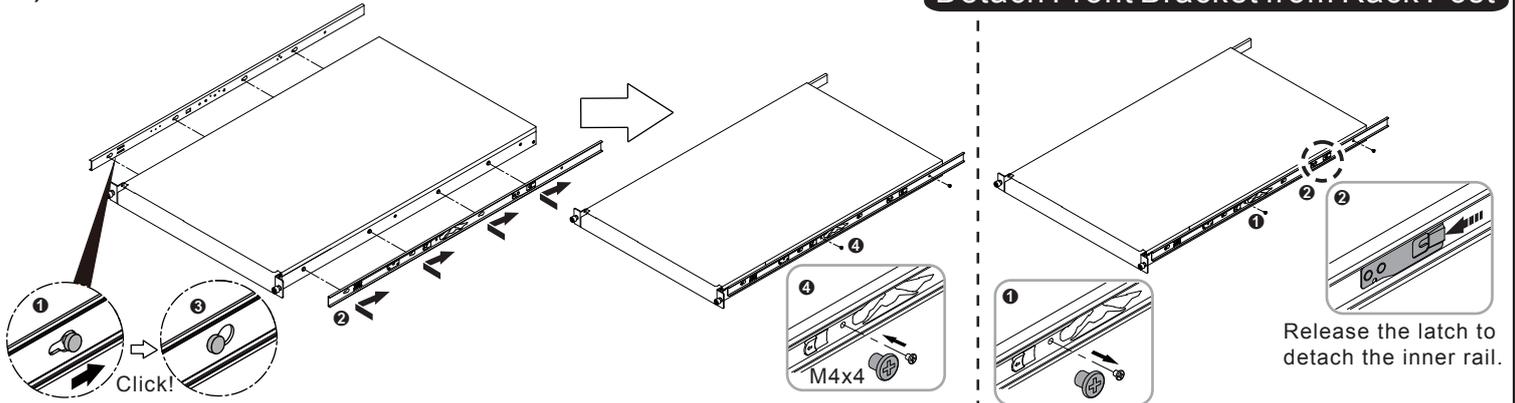

## 3) Fix the outer rail/bracket assembly to the frame.

### Detach Front Bracket from Rack Post

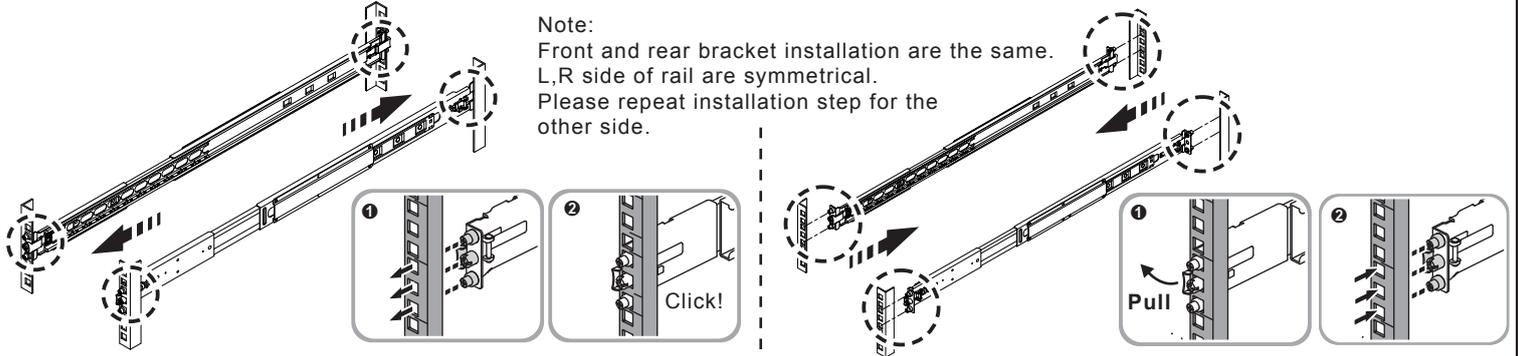

## 4) Insert chassis to complete the installation.

1. Ensure ball bearing retainer is located at the front of the rail.
2. Insert the chassis into outer rails.
3. When hit a stop, please pull / push the release tab on the inner rails.
- 4, 5. Tighten chassis with shipping screws.

### Detach Front Bracket from Rack Post

1. Loosen shipping screw to pull out chassis.
2. Press the disconnect tab forward to remove chassis.

