GIGABYTE[™] R113-C10-AA01 R113-C10-AA02

Rack Server - AMD EPYC[™] 4005/4004 / Ryzen[™] 9000 / Ryzen[™] 7000 1U UP 4-Bay SATA

Single 350W Bronze power supply (AA01) Single 400W Gold power supply (AA02)

User Manual

Rev. 1.0

Copyright

© 2025 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved. The trademarks mentioned in this manual are legally registered to their respective owners.

Disclaimer

Information in this manual is protected by copyright laws and is the property of GIGABYTE. Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice. No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

Documentation Classifications

In order to assist in the use of this product, GIGABYTE provides the following types of documentation:

- User Manual: detailed information & steps about the installation, configuration and use of this product (e.g. motherboard, server barebones), covering hardware and BIOS.
- User Guide: detailed information about the installation & use of an add-on hardware or software component (e.g. BMC firmware, rail-kit) compatible with this product.
- Quick Installation Guide: a short guide with visual diagrams that you can reference easily for installation purposes of this product (e.g. motherboard, server barebones).

Please see the support section of the online product page to check the current availability of these documents.

For More Information

For related product specifications, the latest firmware and software, and other information please visit our website at http://www.gigabyte.com

For GIGABYTE distributors and resellers, additional sales & marketing materials are available from our reseller portal: http://reseller.b2b.gigabyte.com

For further technical assistance, please contact your GIGABYTE representative or visit https://esupport.gigabyte.com/ to create a new support ticket

For any general sales or marketing enquiries, you may also message GIGABYTE server directly by email: server.grp@gigabyte.com

Conventions

The following conventions are used in this user's guide:

NOTE! Pieces of additional information related to the current topic.			
CAUTION! Precautionary measures to avoid possible hardware or software problems.			
WARNING! Alerts to any damage that might result from doing or not doing specific actions.			

Server Warnings and Cautions

Before installing a server, be sure that you understand the following warnings and cautions.



To reduce the risk of electric shock or damage to the equipment:

- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
- · Unplug the power cord from the power supply to disconnect power to the equipment.



- · Shock Hazard! Disconnect all power supply cords before servicing.
- Do not route the power cord where it can be walked on or pinched by items placed against it. Pay particular attention to the plug, electrical outlet, and the point where the cord extends from the server.
- Do not route the power cord where it can be walked on or pinched by items placed against it. Pay particular attention to the plug, electrical outlet, and the point where the cord extends from the server.



To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.



This server is equipped with high speed fans. Keep away from hazardous moving fan blades during servicing.



This equipment is intended to be used in Restrict Access Location. The access can only be gained by Skilled person. Only authorized by well trained professional person can access the restrict access location.

This equipment is not intended for use by children.



- Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.
- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- · Dispose of used batteries according to the manufacturer's instructions.

Risk of explosion if battery is replaced incorrectly or with an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Warning Stability hazard

The slide-rail may tip over causing serious personal injury

- Before extending the rack to its installation position, read the installation instructions.
- Do not put any load on the slide-rail mounted equipment in the installation position.
- · Do not leave the slide-rail mounted equipment in the installation position.



ESD CAN DAMAGE DRIVES, BOARDS, AND OTHER PARTS. WE RECOMMEND THAT YOU PERFORM ALL PROCEDURES AT AN ESD WORKSTATION. IF ONE IS NOT AVAILABLE, PROVIDE SOME ESD PROTECTION BY WEARING AN ANTI-STATIC WRIST STRAP AT-TACHED TO CHASSIS GROUND -- ANY UNPAINTED METAL SURFACE -- ON YOUR SERVER WHEN HANDLING PARTS.

Always handle boards carefully, they can be extremely sensitive to ESD. Hold boards only by their edges without touching any components or connectors. After removing a board from its protective ESD bag or from the system, place the board component side up on a grounded, static free surface. Use a conductive foam pad if available but not the ESD bag. Do not slide the board over any surface.

System power on/off: To service components within the server, please ensure the power has been disconnected.

e.g. Remove the node from the server chassis (to disconnect power) or disconnect the power from the server chassis.

Make sure the system is removed from the rack before opening the chassis, adding, or removing any non hot-plug components.

Hazardous conditions, devices and cables: Hazardous electrical conditions may be present on power, telephone, and communication cables. Turn off the system chassis and disconnect the cables attached to the system before servicing the chassis. Otherwise, personal injury or equipment damage can result.

Electrostatic discharge (ESD) and ESD protection: ESD can damage drives, boards, and other parts. We recommend that you perform all procedures in this chapter only at an ESD work-station. If one is not available, provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground (any unpainted metal surface on the server) when handling parts.

ESD and handling boards: Always handle boards carefully. They can be extremely sensi-tive to electrostatic discharge (ESD). Hold boards only by their edges. After removing a board from its protective wrapper or from the system, place the board component side up on a grounded, static free surface. Use a conductive foam pad if available but not the board wrapper. Do not slide board over any surface.

Installing or removing jumpers: A jumper is a small plastic encased conductor that slips over two jumper pins. Some jumpers have a small tab on top that can be gripped with fin-gertips or with a pair of fine needle nosed pliers. If the jumpers do not have such a tab, take care when using needle nosed pliers to remove or install a jumper; grip the narrow sides of the jumper with the pliers, never the wide sides. Gripping the wide sides can dam-age the contacts inside the jumper, causing intermittent problems with the function con-trolled by that jumper. Take care to grip with, but not squeeze, the pliers or other tool used to remove a jumper, or the pins on the board may bend or break.

Table of Contents

Chapter 1	1 Hardware Installation			
	1-1	Inst	allation Precautions	
	1-2	Pro	duct Specifications	11
	1-3	Sys	tem Block Diagram	
Chapter 2	Syste	m A	ppearance	15
	2-1	Fro	nt View	
	2-2	Rea	ar View	
	2-3	Fro	nt Panel LED and Buttons	
	2-4	Rea	ar System LAN LEDs	
	2-5	Har	d Disk Drive LEDs	
Chapter 3	Syste	m H	lardware Installation	20
	3-1	Rer	noving and Installing the Chassis Cover	
	3-2	Rer	noving and Installing the Hard Disk Drive	
	3-3	Rer	noving and Installing the CPU and Heat Sink	
	3-4	Rer	noving and Installing Memory	
	3-4	-1	Dual Channel Memory Configuration	
	3-4	-2	Removing and Installing a Memory Module	27
	3-4	-3	Memory Module Population Table	27
	3-5	Rer	noving and Installing the PCIe Card	
	3-6	Inst	alling the M.2 Device	
	3-7	Cab	ble Routing	
Chapter 4	Mothe	erbo	ard Components	
	4-1	Mot	herboard Components	
	4-2	Jun	nper Settings	
Chapter 2	BIOS	Set	up	35
	2-1	The	Main Menu	
	2-2	Adv	anced Menu	
	2-2	2-1	Trusted Computing	41
	2-2	2-2	AMD fTPM Configuration	43
	2-2	2-3	AST2600 Super IO Configuration	44
	2-2	2-4	S5 RTC Wake Settings	
	2-2	2-5	Serial Port Console Redirection	47
	2-2	2-6	CPU Configuration	51
	2-2	2-7	PCI Subsystem Settings	
	2-2	2-8	USB Contiguration	

2	2-2-9	Network Stack Configuration	57			
2	2-2-1(CSM Configuration				
2	2-2-11	Post Report Configuration	59			
2	2-2-12	2 NVMe Configuration	60			
2	2-2-13	3 SATA Configuration	61			
2	2-2-14	4 Chipset Configuration	62			
2	2-2-1	5 RAM Disk Configuration	63			
2	2-2-16	5 TIs Auth Configuration	64			
1	2-2-1	7 iSCSI Configuration	65			
2	2-2-18	Broadcom [®] BCM57502 Ethernet Network Connection	66			
2	2-2-19	Intel [®] I210 Gigabit Network Connection	69			
2	2-2-2(VLAN Configuration	71			
2	2-2-2	1 MAC IPv4 Network Configuration	72			
2	2-2-22	2 MAC IPv6 Network Configuration	73			
2	2-2-23	3 Driver Health	74			
2-3	С	hipset Setup Menu	.75			
2	2-3-1	North Bridge	76			
2-4	S	erver Management Menu	. 77			
2	2-4-1	System Event Log	79			
2	2-4-2	View FRU Information	80			
2	2-4-3	BMC VLAN Configuration	81			
2	2-4-4	BMC Network Configuration	82			
2	2-4-5	IPv6 BMC Network Configuration	83			
2-5	S	ecurity Menu	. 84			
:	2-5-1	Secure Boot	85			
2-6	В	oot Menu	. 87			
2-7	S	ave & Exit Menu	. 88			
2-8	BIOS Recovery					
		-				

Chapter 1 Hardware Installation

1-1 Installation Precautions

The motherboard/system contain numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Prior to installation, carefully read the service guide and follow these procedures:

- Prior to installation, do not remove or break motherboard S/N (Serial Number) sticker or warranty sticker provided by your dealer. These stickers are required for warranty validation.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.
- When connecting hardware components to the internal connectors on the motherboard, make sure they are connected tightly and securely.
- When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) wrist strap when handling electronic components such as a motherboard, CPU or memory. If you do not have an ESD wrist strap, keep your hands dry and first touch a metal object to eliminate static electricity.
- Prior to installing the motherboard, please have it on top of an antistatic pad or within an electrostatic shielding container.
- Before unplugging the power supply cable from the motherboard, make sure the power supply has been turned off.
- Before turning on the power, make sure the power supply voltage has been set according to the local voltage standard.
- Before using the product, please verify that all cables and power connectors of your hardware components are connected.
- To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components.
- Make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- Do not place the computer system on an uneven surface.
- Do not place the computer system in a high-temperature environment.
- Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

1-2 Product Specifications



NOTE:

We reserve the right to make any changes to the product specifications and product-related information without prior notice.

System Dimension	 1U 430 (W) × 43.5 (H) × 303.2(D) mm
CPU	 AMD EPYC™ 4005 Series Processors AMD EPYC™ 4004 Series Processors AMD Ryzen™ 9000 Series Processors AMD Ryzen™ 7000 Series Processors Single processor, TDP up to 105W Note: Overclocking not supported due to thermal limitation.
Socket	• AM5
Chipset	• AMD B650E
Memory	 4 x DIMM slots DDR5 memory supported Dual Channel memory per processor AMD EPYC™4005/Ryzen™ 9000: UDIMM: Up to 5600 MT/s (1DPC), 3600 MT/s (2DPC) AMD EPYC™ 4004 / Ryzen™ 7000: UDIMM: Up to 5200 MT/s (1DPC), 3600 MT/s (2DPC)
	Rear side: 2 x 1Gb/s LAN ports (2 x Intel® I210-AT) Support NCSI function 1 x 10/100/1000 management LAN
Video Video	 Integrated in ASPEED® AST2600 1 x VGA port
Storage	Front side: • 2 x 2.5" SATA hot-swappable bays Internal: • 2 x 2.5" SATA bays (optional) • SATA supported only
RAID	RAID 0/1/10 Support optional RAID add-in cards

Expansion Slot	Riser Card CRS101R:					
	 1 x PCIe x16 (Gen5 x16) FHHL slot, from CPU 					
	1 x M.2 slot: • M-key • PCIe Gen5 x4, from CPU • Supports 2242/2280 cards					
Internal I/O	 1 x M.2 slot 1 x TPM header 					
Front I/O	 2 x USB 3.2 Gen1 1 x Power button 1 x Reset button 1 x System status LED 1 x System power LED 2 x LAN activity LEDs 1 x HDD activity LED 					
Rear I/O	 2 x USB 3.2 Gen1 1 x COM 1 x VGA 2 x RJ45 1 x MLAN 1 x ID button with LED 					
Security Modules	 1 x TPM header with SPI interface Optional TPM2.0 kit: CTM010 					
Power Supply	R113-C10-AA01 • Single 350W 80 PLUS Bronze power supply [Note] • Please refer to GIGABYTE Website for detail power supply specification. R113-C10-AA02 • Single 400W 80 PLUS Gold power supply [Note] • Please refer to GIGABYTE Website for detail power supply					

System Management	ASPEED® AST2600 Baseboard Management Controller GIGABYTE Management Console web interface					
	Dashboard					
	HTML5 KVM					
	Sensor Monitor (Voltage RPM Temperature CPU Status etc.)					
	Sensor Reading History Data					
	FRU Information					
	SEL Log in Linear Storage / Circular Storage Policy					
	Hardware Inventory					
	Fan Profile					
	System Firewall					
	Power Consumption					
	Power Control					
	 LDAP / AD / RADIUS Support 					
	 Backup & Restore Configuration 					
	Remote BIOS/BMC/CPLD Update					
	Event Log Filter					
	User Management					
	Media Redirection Settings					
	PAM Order Settings					
	SSL Settings					
	SMTP Settings					
Operating	 Operating temperature: 10°C to 35°C 					
Properties	 Operating humidity: 8%-80% (non-condensing) 					
	 Non-operating temperature: -40°C to 60°C 					
	 Non-operating humidity: 20%-95% (non-condensing) 					

1-3 System Block Diagram



Chapter 2 System Appearance

2-1 Front View



No.	Description
1.	Front Panel LEDs and Buttons
2.	USB 3.2 Gen1 Port x 2
3.	3.5" Drive Bays

Refer to section **2-3 Front Panel LEDs and Buttons** for a detailed description of the function of the LEDs.



No.	Description
1.	VGA Port
2.	Serial Port
3.	USB 3.2 Gen1 Port x 2
4.	Server Management LAN Port
5.	1 GbE LAN Port #1
6.	1 GbE LAN Port #2
7.	ID Button with LED
8.	PCIe Card Slot

2-3 Front Panel LED and Buttons



No.	Name	Color	Status Description	
1.	Power button with LED			Press the button to power on the system.
		Green	On	System is powered on
		Green	Blink	System is in ACPI S1 state (sleep mode)
2.	Power LED			• System is not powered on or in ACPI S5 state
		N/A	Off	(power off)
				System is in ACPI S4 state (hibernate mode)
		0	On	HDD locate
		Green	Blink	HDD access
3	HDD Status	Amber	On	HDD fault
5.	LED	Green/	Blink	HDD rehuilding
		Amber		
		N/A	Off	No HDD access or no HDD fault.
4.	LAN 1/2 Active/	Green	Solid On	Link between system and network or no access.
		Green	Blink	Data trasmission or receiving is occuring
		N/A	Off	No data transmission or receiving is occuring
		Green	On	Indicates system is operating normally.
			On	Indicates a critical condition, may include:
		Auchan		- System fan failure
				- System temperature
	System	Aniber		Indicates non-critical condition, may include:
5.	Status LED		Blink	- Redundant power module failure
				- Chassis intrusion
		N/A		Indicates system is not ready, may include:
			Off	- POST error
				- NMI error
				- Processor or terminator is missing
6.	Reset Button			Press the button to reset the system.

2-4 Rear System LAN LEDs



No.	Name	Color	Status	Description
		Yellow	On	1 Gbps data rate
1.	1GbE Speed	Green	On	100 Mbps data rate
		N/A	Off	10 Mbps data rate
		Green	On	Link between system and network or no access
2. 1GbE Link /	1GbE Link / Activity LED	Green	Blink	Data transmission or reception is occurring.
		N/A	N/A Off No data transmission or reception is occurring.	

2-5 Hard Disk Drive LEDs



RAID SKU		LED #1	Locate	HDD Fault	Rebuilding	HDD Access	HDD Present (No Access)
	Disk LED (LED	Green	ON(*1)	OFF		BLINK (*2)	OFF
No RAID	on Back Panel)	Amber	OFF	OFF		OFF	OFF
configuration (via HBA)	Removed HDD Slot (LED on Back Panel)	Green	ON(*1)	OFF			
		Amber	OFF	OFF			
RAID configuration (via HW RAID Card or SW RAID Card)	Disk LED Removed HDD Slot	Green	ON	OFF		BLINK (*2)	OFF
		Amber	OFF	ON	(Low Speed: 2 Hz)	OFF	OFF
		Green	ON(*1)	OFF	(*3)		
		Amber	OFF	ON	(*3)		

LED #2	HDD Present	No HDD	
Green	ON	OFF	

NOTE:

- *1: Depends on HBA/Utility Spec.
- *2: Blink cycle depends on HDD's activity signal.
- *3: If HDD is pulled out during rebuilding, the disk status of this HDD is regarded as faulty.

Chapter 3 System Hardware Installation



Pre-installation Instructions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous. Follow the simple guidelines below to avoid damage to your computer or injury to yourself.

- Always disconnect the computer from the power outlet whenever you are working inside the computer case.
- If possible, wear a grounded wrist strap when you are working inside the computer case.
 Alternatively, discharge any static electricity by touching the bare metal system of the computer case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Do not flex or stress the circuit board.
- Leave all components inside the static-proof packaging until you are ready to use the component for the installation.

3-1 Removing and Installing the Chassis Cover



Before you remove or install the system cover

• Make sure the system is not turned on or connected to AC power.

Follow these instructions to remove the chassis cover:

- 1. Remove the two screws securing the top cover.
- Slide the cover to the rear of the system and then remove the cover in the direction indicated by the arrow.
- 3. To reinstall the chassis cover follow steps 1-4 in reverse order.



3-2 Removing and Installing the Hard Disk Drive



Read the following guidelines before you begin to install the hard disk drive:

- Take note of the HDD tray orientation before sliding it out.
- The tray will not fit back into the bay if it is inserted incorrectly.
- Make sure that the hard disk drive is connected to the connector on the backplane.

Follow these instructions to install a 2.5" hard disk drive:

- 1. Press the release button.
- 2. Extend the locking lever.
- 3. Pull the locking lever in the direction indicated to remove the HDD tray.
- 4. Align the hard disk drive with the positioning stud on the HDD tray.
- 5. Slide the hard disk drive into the HDD tray.
- 6. Reinsert the HDD tray into the slot and close the locking lever.



Follow these instructions to install one Hard disk drive:

- 1. Loosen and remove the screws securing the HDD cage.
- 2. Slide the HDD into the HDD cage.
- 3. Replace the HDD cage to system and secure it with screw.
- 4. Connect necessary cables.





3-3 Removing and Installing the CPU and Heat Sink



Read the following guidelines before you begin to install the CPU:

- Make sure that the motherboard supports the CPU.
- Always turn off the computer and unplug the power cord from the power outlet before installing the CPU to prevent hardware damage.
- Unplug all cables from the power outlets.
- Disconnect all telecommunication cables from their ports.
- Place the system unit on a flat and stable surface.
- Open the system according to the instructions.



WARNING!

Failure to properly turn off the server before you start installing components may cause serious damage. Do not attempt the procedures described in the following sections unless you are a qualified service technician.

Follow these instructions to install the CPU:

- 1. Gently press the CPU socket lever handle down and away from the socket. Lift up the CPU socket locking lever and then open the CPU cover.
- Align the CPU pin one (triangle marking) with the pin one corner of the CPU socket. Install the CPU onto the socket.
- Ensure the CPU is positioned into its socket and then close the CPU cover. Secure the CPU socket lever under its retention tab. The plastic protective cover will pop off by itself and can be removed NOTE: Always replace the plastic protective cover when the CPU is not installed to protect the CPU socket.
- 4. Align and place the heatsink onto the top of the CPU socket.
- 5. To secure the heatsink, tighten the four screws to the CPU socket.
- 6. To remove the heatsinks and CPUs, follow steps 1-5 in reverse order.







- Lock the CPU by using a Torx T20 screwdriver to tighten screw.
- When installing the heatsink to CPU, use a Torx T20 screwdriver to tighten 4 captive nuts in sequence as 1-4.
- The screw tightening torque: 13.5 ± 0.5 kgf-cm.
- To ensure the system operates properly, make sure the heatsink is seated on the processor firmly.

3-4 Removing and Installing Memory



Read the following guidelines before you begin to install the memory:

- Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.
- Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
- Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

3-4-1 Dual Channel Memory Configuration

This motherboard provides 4 DDR5 memory sockets and supports Dual Channel Technology. After the memory is installed, the BIOS will automatically detect the specifications and capacity of the memory.



3-4-2 Removing and Installing a Memory Module



Before installing a memory module, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the memory module. Be sure to install DDR5 DIMMs on to this motherboard.

Follow these instructions to install a DIMM module:

- 1. Insert the DIMM memory module vertically into the DIMM slot and push it down.
- 2. Close the plastic clip at both edges of the DIMM slots to lock the DIMM module.
- 3. Reverse the installation steps when you want to remove the DIMM module.



3-4-3 Memory Module Population Table

Memory Type	DDR5	
Voltage (V)	5V	
Connector	UDIMM ECC/Non-ECC	
Speed (MT/s) 5600 3600		3600
Channels	1,2	
DIMM Per Channel	1,2	
DIMM Capacity (GB)	2,4,8,16,32	



Note:

When only one DIMM is used, it must be populated in memory slot A1.

3-5 Removing and Installing the PCIe Card



Voltages can be present within the server whenever an AC power source is connected. This
voltage is present even when the main power switch is in the off position. Ensure that the system
is powered off and all power sources have been disconnected from the server prior to installing a
PCIe card.

• Failure to observe these warnings could result in personal injury or damage to equipment.



• The PCIe riser assembly does not include a riser card or any cabling as standard. To install a PCIe card, a riser card must be installed.

Follow these instructions to install a PCIe card:

- 1. Remove the two screws securing the riser bracket
- 2. Lift up the riser bracket out of system.
- 3. Remove the screw securing the slot cover from riser bracket.
- Orient the PCIe card with the riser guide slot and push in the direction of the arrow until the PCIe card sits in the PCIe card connector.
 NOTE: Some riser brackets allow for single or multiple PCIe cards.
 Repeat steps 3-4 as necessary.
- 5. Secure the PCIe card with the screw.
- 6. Repeat steps 1-2 to install the PCIe card into the system.



3-6 Installing the M.2 Device



CAUTION

The position of the stand-off screw will depend on the size of the M.2 device. The stand-off screw is pre-installed for 2280 cards as standard. Refer to the size of the M.2 device and change the position of the stand-off screw accordingly.

Follow these instructions to install the M.2 device:

- 1. Insert the M.2 SSD module into the slot.
- 2. Secure it with the screw, tightening as necessary to fasten the M.2 SSD module in place.



3-7 Cable Routing



A	Front Panel LEDs and Buttons Cable	Motherboard: FP_1
		Front IO Board: J2
В	Front USB Cable	Motherboard: F_U32
		Front IO Board: J1







A		Motherboard: SATA1
	SATA Cable	Front HDD Backplane Board: SATA1
В		Motherboard: SATA3
		Front HDD Backplane Board: SATA2



P	HDD Backplane Power Cable	Motherboard: ATX12V_2X4
В		Front HDD Backplane Board:

Chapter 4 Motherboard Components

4-1 Motherboard Components



Item	Description
1	2x4 Pin 12V Power Connector
2	PMBus Connector
3	2x12 Pin Main Power Connector
4	TPM Connector
5	SATAIII 6Gb/s Connector #0/#1 (SATA_0_1)
6	SATAIII 6Gb/s Connector #2/#3 (SATA_2_3)
7	USB 2.0 Type-A Connector
8	Front Panel USB 3.2 Gen1 Connector
9	Front Panel Header
10	Front Panel USB 2.0 Header
11	IPMB Connector
12	M.2 Slot (PCIe Gen5 x4, Support NGFF-2280)
13	HDD Backplane Board Connector
14	PCIe x4 Slot (Gen4 x4)
15	BMC Firmware Readiness LED
16	PCIe x16 Slot (Gen5 x16)
17	System Battery
18	NCSI Connector for add-on LAN Card (CN_NSCI)

4-2 Jumper Settings



Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) records hardware parameters of the system in the EFI on the motherboard. Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters, loading the operating system etc. The BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features. When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS.

To access the BIOS Setup program, press the key during the POST when the power is turned on.



- BIOS flashing is potentially risky, if you do not encounter any problems when using the current BIOS version, it is recommended that you don't flash the BIOS. To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction.
- It is recommended that you not alter the default settings (unless you need to) to prevent system instability or other unexpected results. Inadequately altering the settings may result in system's failure to boot. If this occurs, try to clear the CMOS values and reset the board to default values. (Refer to the Exit section in this chapter or introductions of the battery/clearing CMOS jumper in Chapter 1 for how to clear the CMOS values.)

BIOS Setup Program Function Keys

<←><→>	Move the selection bar to select the screen
<↑><↓>	Move the selection bar to select an item
<+>	Increase the numeric value or make changes
<->	Decrease the numeric value or make changes
<enter></enter>	Execute command or enter the submenu
<esc></esc>	Main Menu: Exit the BIOS Setup program
	Submenus: Exit current submenu
<f1></f1>	Show descriptions of general help
<f3></f3>	Restore the previous BIOS settings for the current submenus
<f9></f9>	Load the Optimized BIOS default settings for the current submenus
<f10></f10>	Save all the changes and exit the BIOS Setup program

Main

This setup page includes all the items of the standard compatible BIOS.

Advanced

This setup page includes all the items of AMI BIOS special enhanced features.

(ex: Auto detect fan and temperature status, automatically configure hard disk parameters.)

Chipset

This setup page includes all the submenu options for configuring the functions of the North Bridge.

Server Management

Server additional features enabled/disabled setup menus.

Security

Change, set, or disable supervisor and user password. Configuration supervisor password allows you to restrict access to the system and BIOS Setup.

A supervisor password allows you to make changes in BIOS Setup.

A user password only allows you to view the BIOS settings but not to make changes.

Boot

This setup page provides items for configuration of the boot sequence.

Save & Exit

Save all the changes made in the BIOS Setup program to the CMOS and exit BIOS Setup. (Pressing <F10> can also carry out this task.)

Abandon all changes and the previous settings remain in effect. Pressing <Y> to the confirmation message will exit BIOS Setup. (Pressing <Esc> can also carry out this task.)
2-1 The Main Menu

Once you enter the BIOS Setup program, the Main Menu (as shown below) appears on the screen. Use arrow keys to move among the items and press <Enter> to accept or enter other sub-menu.

Main Menu Help

The on-screen description of a highlighted setup option is displayed on the bottom line of the Main Menu.

Submenu Help

While in a submenu, press <F1> to display a help screen (General Help) of function keys available for the menu. Press <Esc> to exit the help screen. Help for each item is in the Item Help block on the right side of the submenu.



When the system is not stable as usual, select the **Restore Defaults** item to set your system to its defaults.

The BIOS Setup menus described in this chapter are for reference only and may differ by BIOS version.

Main Advanced Chipset	Aptio Setup – AMI Server Mgmt Security Boot Save & Exit	
Access Level Project Name Project Version Build Date and Time	Administrator ▲ MC13-LE3-000 R06 01/10/2025 09:49:15	
BMC Information BMC Firmware Version	13.06.13	
Processor Information CPU Brand String Max CPU Speed CPU Signature	AMD Ryzen 9 9900X 12-Core 5650 MHz B40F40	
Processor Core Microcode Patch	12 0840401C	++: Select Screen †4: Select Item Enter: Select
Total Memory Memory Frequency	16384 MB (DDR5) 4800 MHz	+/-: Change Opt. F1: General Help F3: Previous Values
Onboard LAN Information LAN1 MAC Address LAN2 MAC Address LAN3 MAC Address	10-FF-E0-D2-18-A6 10-FF-E0-D2-18-A7 10-FF-E0-D2-18-A8 10-FF-E0-D2-18-A8	F9: Optimized Defaults F10: Save & Exit ESC: Exit
	Version 2.22.1294 Copyright (C) 2025 AMT	

Main Advanced Chipset	Aptio Setup – AMI Server Mømt Security Boot Save & Exit	
Max CPU Speed CPU Signature Processor Core Microcode Patch	5650 MH2 B40F40 12 0840401C	 Set the Time. Use Tab to switch between Time elements.
Memory Information Total Memory Memory Frequency	16384 MB (DDR5) 4800 MHz	
Onboard LAN Information LAN1 MAC Address LAN2 MAC Address LAN3 MAC Address	10-FF-E0-D2-1B-A6 10-FF-E0-D2-1B-A7 10-FF-E0-D2-1B-A8	
LAN4 MAC Address VR Information Version	10-FF-E0-D2-18-R9 F003	<pre>++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help</pre>
CPLD Boot Information Boot Status	Single BIOS	F3: Previous Values F9: Optimized Defaults F10: Save & Exit
System Language	[English]	ESC: Exit
System Date System Time	[Wed 01/01/2025] [01:48:49]	v la
		1

Parameter	Description
Access Level	Displays the privileges level information.
Project Name	Displays the project name information.
Project Version	Displays version number of the BIOS setup utility.
Build Date and Time	Displays the date and time when the BIOS setup utility was created.
BMC Information ^(Note1)	
BMC Firmware Version ^(Note1)	Displays BMC firmware version information.
Processor Information	
CPU Brand String/ CPU Speed / Max CPU Speed / CPU Signature / Processor Core / Microcode Patch	Displays the technical specifications for the installed processor(s).
Memory Information	
Total Memory ^(Note2)	Displays the total memory size of the installed memory.
Memory Frequency ^(Note2)	Displays the frequency information of the installed memory.

(Note1) Functions available on selected models.

(Note2) This section will display capacity and frequency information of the memory that the customer has installed.

Parameter	Description
Onboard LAN Information	
LAN# MAC Address ^(Note3)	Displays LAN MAC address information.
CPLD Boot Information	
Boot Status	Displays CPLD boot information.
System Language	Default setting is English.
System Date	Sets the date following the weekday-month-day-year format.
System Time	Sets the system time following the hour-minute-second format.

(Note3) The number of LAN ports listed will depend on the motherboard / system model.

2-2 Advanced Menu

The Advanced Menu displays submenu options for configuring the function of various hardware components. Select a submenu item, then press <Enter> to access the related submenu screen.

Aptio Setup – AMI	
Main Advanced Chipset Server Mgmt Security Boot Save & Exit	
 Trusted Computing AMD fTPM configuration ASTEGO Super 10 Configuration SS RTC Wake Settings Serial Port Consule Redirection CPU Configuration PCI Subsystem Settings USB Configuration PCST Report Configuration CSM Configuration PAST Report Configuration SATA Configuration Chipset Configuration Fisauth Configuration ISOSI Configuration Broadcom BCM57502 NetXtreme E-Series 50Gb Ethernet Controlle VANC Configuration (MAC:IOFFE00218A8) MAC:IOFFE00218A8-IPV6 Network Configuration Broadcom BCM57502 NetXtreme E-Series 50Gb Ethernet Controlle VLAN Configuration (MAC:IOFFE00218A9) MAC:IOFFE00218A9-IPV4 Network Configuration 	<pre>++: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</pre>
Version 2.22.1294 Copyright (C) 2025 AM	I
Aptio Setup – AMI Main <mark>Advanced </mark> Chipset Server Mgmt Security Boot Save & Exit	
NVMe Configuration SATA Configuration Chipset Configuration RAM Disk Configuration TIS Auth Configuration	Provides Health Status for the Drivers/Controllers

- ▶ iSCSI Configuration
- ▶ Broadcom BCM57502 NetXtreme E-Series 50Gb Ethernet Controlle...
 ▶ VLAN Configuration (MAC:10FFE0D21BA8)
- VLAN Configuration (MAC:10FFE0D218A8)
 MAC:10FFE0D218A8-IPv4 Network Configuration
- MAC: 10FFE0D21BA8-IPv4 Network Configuration
 MAC:10FFE0D21BA8-IPv6 Network Configuration
- ▶ Broadcom BCM57502 NetXtreme E-Series 50Gb Ethernet Controlle...
- ▶ VLAN Configuration (MAC:10FFE0D21BA9)
- MAC:10FFE0D21BA9-IPv4 Network Configuration
 MAC:10FFE0D21BA9-IPv6 Network Configuration
- MAC:10FFE0021BA9-1PV6 Network Configuration
 Intel(R) I210 Gigabit Network Connection 10:FF:E0:D2:1B:A6
- Intel(R) 1210 Gigapit Network Connecti
 VLAN Configuration (MAC:10FFE0D21BA6)
- MAC:10FFE0D21BA6-IPv4 Network Configuration
- ▶ MAC:10FFE0D21BA6-IPv6 Network Configuration
- ▶ Intel(R) I210 Gigabit Network Connection 10:FF:E0:D2:1B:A7
- ▶ VLAN Configuration (MAC:10FFE0D21BA7)
- ▶ MAC:10FFE0D21BA7-IPv4 Network Configuration
- ▶ MAC:10FFE0D21BA7-IPv6 Network Configuration
- ▶ Driver Health
- Version 2.22.1294 Copyright (C) 2025 AMI

++: Select Screen

t↓: Select Item

+/-: Change Opt.

F1: General Help

F10: Save & Exit

F3: Previous Values

F9: Optimized Defaults

Enter: Select

BIOS Setup - 40 -

2-2-1 Trusted Computing

Advanced	Aptio Setup – AMI	
Configuration Security Device Support NO Security Device Found		Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INTIA interface will not be available.
		++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Versi	on 2.22.1294 Copyright	(C) 2025 AMI B4

Displays the firmware version information.
Displays the vendor information.
Enable/Disable BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available. Options available: Disable, Enable. Default setting is Enable .
Displays active Platform Configuration Register (PCR) banks.
Displays available PCR banks.
Enable/Disable SHA256 PCR bank. Options available: Disabled, Enabled. Default setting is Enabled .
Enable/Disable SHA-384 PCR bank. Options available: Disabled, Enabled. Default setting is Disabled .
Schedule an operation for the security device. NOTE: Your computer will reboot during restart in order to change the state of a security device. Options available: None, TPM Clear. Default setting is None .

(Note) Advanced items prompt when TPM is installed in the system.

Parameter	Description
Platform Hierarchy ^(Note)	Enable/Disable platform hierarchy. Options available: Disabled, Enabled. Default setting is Enabled .
Storage Hierarchy ^(Note)	Enable/Disable storage hierarchy. Options available: Disabled, Enabled. Default setting is Enabled .
Endorsement Hierarchy ^(Note)	Enable/Disable endorsement hierarchy. Options available: Disabled, Enabled. Default setting is Enabled .
Physical Presence Spec Version ^(Note)	Selects the physical presence spec version. Options available: 1.2, 1.3. Default setting is 1.3 .
TPM 20 InterfaceType ^(Note)	Displays the TPM 2.0 interface type.
Device Select ^(Note)	Options available: TPM 1.2, TPM 2.0, Auto. Default setting is Auto.

2-2-2 AMD fTPM Configuration

Advanced	Aptio Setup – AMI	
AMD fTPM switch Erase fTPM NV for factory reset	[AMD CPU fTPM] [Enabled]	To select.0:AMD CPU fTPM. 1:AMD CPU HSP 2:Route to SPI TPM
		++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Version 2	.22.1294 Copyright (C) 2025 AMI	B4

Parameter	Description
AMD fTPM switch	Options available: AMD CPU fTPM, AMD CPU HSP, Route to SPI TPM. Default setting is AMD CPU fTPM .
Erase fTPM NV for factory reset	Options available: Disabled, Enabled. Default setting is Enabled .

2-2-3 AST2600 Super IO Configuration



Parameter	Description	
AST2600 Super IO		
Configuration		
Super IO Chip	Displays the super IO chip information	
Serial Port 1	Drace [Enter] for configuration of educated items	
Configuration	Fress (Enter) for configuration of advanced items.	

2-2-3-1 Serial Port 1 Configuration

Advanced	Aptio Setup – AMI	
Serial Port 1 Configuration		Enable or Disable Serial
Serial Port Device Settings	[Enabled] IO=3F8h; IRQ=4;	
Change Settings	[Auto]	
		<pre>++: Select Screen t4: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</pre>
Version 2	2.22.1294 Copyright (C) 2025 AMI	

Parameter	Description
Serial Port 1 Configuration	
Serial Port ^(Note)	Enable/Disable the Serial Port (COM). When set to Enabled allows you to configure the Serial port 1 settings. When set to Disabled, displays no configuration for the serial port. Options available: Disabled, Enabled. Default setting is Enabled .
Devices Settings	Displays the Serial Port 1 device settings.
Change Settings	Select an optimal settings for Super IO Device. Options available for Serial Port 1: Auto IO=3F8h; IRQ=4; IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12; Default setting is Auto .

2-2-4 S5 RTC Wake Settings

Advanced	Aptio Setup – AMI	
Wake system from SS	[Disabled]	Enable or disable System wake on alarm event. Select FixedTime, system will wake on the hr::min::sec specified. Select DynamicTime, System will wake on the current time + Increase minute(s) ++: Select Screen Il: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
1	/ersion 2.22.1294 Copyright (C)	2025 AMI

Parameter	Description
Wake System from S5	Enable/Disable system wake on alarm event. Options available: Disabled, Fixed Time. When Fixed Time is selected, system will wake on the hr::min::sec specified. Default setting is Disabled .

2-2-5 Serial Port Console Redirection



Parameter	Description
COM Console Redirection ^(Note)	Select whether to enable console redirection for specified device. Console redirection enables the users to manage the system from a remote location. Options available: Disabled, Enabled. Default setting is Disabled .
COM Console Redirection Settings	 Press [Enter] to configure advanced items. Please note that this item is configurable when COM Console Redirection is set to Enabled. Terminal Type Selects a terminal type to be used for console redirection. Options available: VT100, VT100Plus, VT-UTF8, ANSI. Default setting is ANSI. Bits per second Selects the transfer rate for console redirection. Options available: 9600, 19200, 38400, 57600, 115200. Default setting is 115200. Data Bits Selects the number of data bits used for console redirection. Options available: 7, 8. Default setting is 8.

(Note) Advanced items prompt when this item is defined.

Parameter	Description
COM Console Redirection Settings (continued)	 Parity A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. Options available: None, Even, Odd, Mark, Space. Default setting is None. Stop Bits Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit. Options available: 1, 2. Default setting is 1. Flow Control Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals. Options available: None, Hardware RTS/CTS. Default setting is None. VT-UTF8 Combo Key Support Enable/Disable the VT-UTF8 Combo Key Support. Options available: Disabled, Enabled. Default setting is Disabled. Recorder Mode When this mode enabled, only texts will be send. This is to capture Terminal data. Options available: Disabled, Enabled. Default setting is Disabled. Resolution 100x31 Enable/Disable extended terminal resolution. Options available: Disabled, Enabled. Default setting is Disabled.

Parameter	Description
Legacy Console Redirection	
Legacy Console Redirection Settings	 Press [Enter] to configure advanced items. Redirection COM Port Selects a COM port for Legacy serial redirection. Default setting is COM1. Resolution Selects the number of rows and columns used in Console Redirection for legacy OS support. Options available: 80x24, 80x25. Default setting is 80x24. Redirect After POST When Bootloader is selected, then Legacy Console Redirection is disabled before booting to legacy OS. When Always Enable is selected, then Legacy Console Redirection is enabled for legacy OS. Options available: Always Enable, BootLoader. Default setting is Always Enable.
Serial Port for Out-of-Band Management / Windows Emergency Management Services (EMS) Console Redirection ^(Note)	EMS console redirection allows the user to configure Console Redirection Settings to support Out-of-Band Serial Port management. Options available: Disabled, Enabled. Default setting is Disabled .
Serial Port for Out-of-Band EMS Console Redirection Settings	 Press [Enter] to configure advanced items. Please note that this item is configurable when Serial Port for Out-of-Band Management EMS Console Redirection is set to Enabled. Out-of-Band Mgmt Port Microsoft Windows Emergency Management Service (EMS) allows for remote management of a Windows Server OS through a serial port. Default setting is COM1. Terminal Type EMS Selects a terminal type to be used for console redirection. Options available: VT100, VT100Plus, VT-UTF8, ANSI. Default setting is ANSI. Bits per second EMS Selects the transfer rate for console redirection. Options available: 9600, 19200, 38400, 57600, 115200. Default setting is 115200.

Advanced items prompt when this item is defined. BIOS Setup (Note)

Parameter	Description
Serial Port for Out-of-Band EMS Console Redirection Settings(continued)	 Flow Control EMS Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals. Options available: None, Hardware RTS/CTS, Software Xon/Xoff. Default setting is None.

2-2-6 CPU Configuration

Advanced	Aptio Setup – AMI	
CPU Configuration		Enable/disable the
Module Version: ComboAm5Cpu 05		_PSS, and _PCT objects.
PSS Support PPC Adjustment NX Mode ▶ Node 0 Information	(Enabled) (PState O) (Enabled)	
		<pre>++: Select Screen fl: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</pre>
Versi	on 2.22.1294 Copyright (C) 20	25 AMI

Parameter	Description
CPU Configuration	
Module Version	Displays the module version information.
PSS Support	Enable/Disable the generation of ACPI_PPC, _PSS, and _PCT objects. Options available: Disabled, Enabled. Default setting is Enabled .
PPC Adjustment	Options available: PState 0, PState 1, PState 2, PState 3. Default setting is PState 0 .
NX Mode	Enable/Disable No-execute page protection Function. Options available: Disabled, Enabled. Default setting is Enabled .
SVM Mode	Enable/Disable the CPU Virtualization. Options available: Disabled, Enabled. Default setting is Enabled .
Node 0 Information	Press [Enter] to view the information related to Node 0.

2-2-7 PCI Subsystem Settings

Advanced	Aptio Setup – AMI	
PCI Bus Driver Version PCIE_1 I/O ROM	A5.01.32 [Enabled]	Enable/Disable PCIE_1 I/O ROM
PCIE_3 I/O ROM	[Enabled]	
PCIE_3 Lanes	[Auto]	
PCIE_3 Max Link Speed	[Auto]	
Onboard LAN1 Controller Onboard LAN2 Controller Onboard LAN3 Controller Onboard LAN4 Controller Onboard LAN1 I/O ROM Onboard LAN2 I/O ROM Onboard LAN3 I/O ROM Onboard LAN4 I/O ROM PCI Devices Common Settings: Re-Size BAR Support SR-IOV Support	[Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled]	++: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Cene 0. Evit
		ESC: Exit

Parameter	Description
PCI BUS Driver Version	Displays PCI BUS driver version information.
PCIE_1 I/O ROM	When enabled, this setting will initialize the device expansion ROM for the related PCI-E slot. Options available: Disabled, Enabled. Default setting is Enabled .
LE0_M2 I/O ROM	Enable/Disable LE0_M2 device and initialize the device expansion ROM. Options available: Disabled, Enabled. Default setting is Enabled .
PCIE_3 I/O ROM	When enabled, this setting will initialize the device expansion ROM for the related PCI-E slot. Options available: Disabled, Enabled. Default setting is Enabled .
PCIE_3 Lanes	Change the PCIe lanes. Options available: Auto, x16, x8x8, x8x4x4, x4x4x8, x4x4x4x4. Default setting is Auto .
PCIE_3 Max Link Speed	Change the PCIe max link speed. Options available: Auto, Gen1, Gen2, Gen3, Gen4, Gen5. Default setting is Auto .
Onboard LAN# Controller ^(Note)	Enable/Disable the onboard LAN controller. Options available: Disabled, Enabled. Default setting is Enabled .
Onboard LAN# I/O ROM ^(Note)	Enable/Disable the onboard LAN devices, and initializes device expansion ROM. Options available: Disabled, Enabled. Default setting is Enabled .

This section is dependent on the available LAN controller. BIOS Setup (Note)

Parameter	Description
	Enable/Disable memory mapped I/O to 4GB or greater address space
Above 4G Decoding	(Above 4G Decoding).
	Options available: Disabled, Enabled. Default setting is Enabled .
Re-Size BAR Support	Options available: Disabled, Enabled. Default setting is Enabled .
	If the system has SR-IOV capable PCIe devices, this item Enable/Disable
SR-IOV Support	Single Root IO Virtualization Support.
	Options available: Disabled, Enabled. Default setting is Disabled .

2-2-8 USB Configuration

Advanced	Aptio Setup – AMI	
USB Configuration		Enables Legacy USB
USB Module Version	37	disables legacy support if
USB Controllers: 4 XHCIs		connected. DISABLE option will keep USB devices
USB Devices: 8 Drives, 2 Keyboards, 1 Mouse,	1 Hub	available only for EFI applications.
	[Enabled]	
XHCI Hand-off	[Enabled]	
USB Mass Storage Driver Support	[Enabled]	
Port 60/64 Emulation	[Enabled]	
		++: Select Screen
USB hardware delays and time-outs:	a	↑↓: Select Item
USB transfer time-out	[20 sec]	Enter: Select
Device reset time-out	[20 sec]	+/-: Change Upt.
Device power-up delay	LAUTOJ	F1: General Help
Mass Storage Devices:		E9: Ontimized Defaults
AMI Virtual CDROMO 1.00	[Auto]	F10: Save & Exit
AMI Virtual HDiskO 1.00	[Auto]	ESC: Exit
AMI Virtual CDROM1 1.00	[Auto]	
AMI Virtual CDROM2 1.00	[Auto]	
AMI Virtual CDROM3 1.00	[Auto]	

Version 2.22.1294 Copyright (C) 2025 AMI

Advanced	Aptio Setup – AMI	
USB Controllers: 4 XHCIs USB Devices: 8 Drives, 2 Keyboards, 1 Mou	se, 1 Hub	▲ Mass storage device emulation type. 'AUTO' enumerates devices according to their media
Legacy USB Support XHCI Hand-off USB Mass Storage Driver Support Port 60/64 Emulation	[Enabled] [Enabled] [Enabled] [Enabled]	emulated as 'CDROM', drives with no media will be emulated according to a drive type.
USB hardware delays and time-outs: USB transfer time-out Device reset time-out	[20 sec] [20 sec]	
Mass Storage Devices:	[Auto]	f4: Select Item Enter: Select
AMI Virtual HDiskO 1.00	[Auto]	F1: General Help
AMI Virtual CDROM1 1.00 AMI Virtual CDROM2 1.00	(Auto) (Auto)	F3: Previous Values F9: Optimized Defaults
AMI Virtual HDiski 1.00 AMI Virtual HDiski 1.00 AMI Virtual HDisk2 1.00	[Auto] [Auto]	ESC: Exit
		•
Version	2.22.1294 Copyright (C) 2025 AMI

Parameter	Description	
USB Configuration		
USB Module Version	Displays the USB module version information.	
USB Controllers	Displays the supported USB controllers.	
USB Devices:	Displays the USB devices connected to the system.	
Legacy USB Support	Enable/Disable the Legacy USB support function. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications. Options available: Enabled, Disabled, Auto. Default setting is Enabled.	
XHCI Hand-off	Enable/Disable the XHCI Hand-off support. Options available: Enabled, Disabled. Default setting is Enabled .	
USB Mass Storage Driver Support ^(Note)	Enable/Disable the USB Mass Storage Driver Support. Options available: Disabled, Enabled. Default setting is Enabled .	
USB Configuration		
USB Module Version	Displays the USB module version information.	
USB Controllers	Displays the supported USB controllers.	
USB Devices:	Displays the USB devices connected to the system.	
Legacy USB Support	Enable/Disable the Legacy USB support function. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications. Options available: Enabled, Disabled, Auto. Default setting is Enabled.	
XHCI Hand-off	Enable/Disable the XHCI Hand-off support. Options available: Enabled, Disabled. Default setting is Enabled .	
USB Mass Storage Driver Support ^(Note)	Enable/Disable the USB Mass Storage Driver Support. Options available: Disabled, Enabled. Default setting is Enabled .	

Parameter	Description
Port 60/64 Emulation	Enables the I/O port 60h/64h emulation support. This should be enabled for the complete USB Keyboard Legacy support for non- USB aware OS. Options available: Disabled, Enabled. Default setting is Enabled .
USB hardware delays and time-outs	
USB transfer time-out	Selects the time-out value for USB Control/Bulk/Interrupt transfers. Options available: 1 sec, 5 sec, 10 sec, 20 sec. Default setting is 20 sec .
Device reset time-out	Selects the time-out value during a USB mass storage device reset. Options available: 10 sec, 20 sec, 30 sec, 40 sec. Default setting is 20 sec .
Device power-up delay	Maximum time the device will take before it properly reports itself to the Host Controller. "Auto" uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor. Options available: Auto, Manual. Default setting is Auto .
Mass Storage Devices	Displays the mass storage devices available on the system.

2-2-9 Network Stack Configuration

Advanced	Aptio Setup – AMI	
Network Stack IPv4 PXE Support IPv4 HTTP Support IPv6 PXE Support IPv6 HTTP Support PXE boot wait time Media detect count	[Enabled] [Enabled] [Disabled] [Disabled] [Disabled] 0 1	Enable∕Disable UEFI Network Stack
		<pre>+*: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</pre>

Parameter	Description
Network Stack	Enable/Disable the UEFI network stack. Options available: Disabled, Enabled. Default setting is Enabled .
Ipv4 PXE Support	Enable/Disable the Ipv4 PXE feature. Options available: Disabled, Enabled. Default setting is Enabled .
Ipv4 HTTP Support	Enable/Disable the Ipv4 HTTP feature. Options available: Disabled, Enabled. Default setting is Disabled .
Ipv6 PXE Support	Enable/Disable the Ipv6 PXE feature. Options available: Disabled, Enabled. Default setting is Disabled .
Ipv6 HTTP Support	Enable/Disable the Ipv6 HTTP feature. Options available: Disabled, Enabled. Default setting is Disabled .
PXE boot wait time	Wait time in seconds to press ESC key to abort the PXE boot. Press the <+> / <-> keys to increase or decrease the desired values.
Media detect count	Number of times the presence of media will be checked. Press the <+> / <-> keys to increase or decrease the desired values.

2-2-10 CSM Configuration

Aptio Setup - AMI Advanced			
Compatibility Support Module Configuration		Enable/Disable CSM Supp	
CSM Support			
		++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F3: General Help F3: Optimized Defaults F10: Save & Exit ESC: Exit	
Version 2.22.1294 Copyright (C) 2025 AMI			

Parameter	Description
Compatibility Support Module Configuration	
CSM Support ^(Note)	Enable/Disable CSM support. Options available: Disabled, Enabled. Default setting is Disabled .
CSM16 Module Version	Displays the CSM module version information.
GateA20 Active	Options available: Upon Request, Always. Default setting is Upon Request.
INT19 Trap Response	Options available: Immediate, Postponed. Default setting is Immediate.
HDD Connection Order	Options available: Adjust, Keep. Default setting is Adjust.
Boot option filter	Options available: UEFI and Legacy, Legacy only, UEFI only. Default setting is UEFI and Legacy .
Option ROM execution	
Network/Storage/Video/ Other PCI devices	Options available: UEFI, Legacy. Default setting is UEFI.

2-2-11 Post Report Configuration



Parameter	Description
Post Report Configuration	
Error Message Report	
Post Error Message	Enable/Disable Post Error Message support. Options available: Disabled, Enabled. Default setting is Enabled .

2-2-12 NVMe Configuration

Advanced	Aptio Setup – AMI	
NVMe Configuration		BIOS Build-In is default
NVME OPROM Select No NVME Device Found		 setting. Select Device Itself, then this NVMe page will not display any NVMe device. Unless the device doesn't have OPROM, it will show. **: Select Screen 14: Select Item Enter: Select */~: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
	/ersion 2.22.1294 Copyright (C) 20	D25 AMI

Parameter	Description
NVMe Configuration	Displays the NVMe devices connected to the system.
NVME OPROM Select	Options available: BIOS Build-In, NVMe Device. Default setting is BIOS Build-In.

2-2-13 SATA Configuration

Advanced	Aptio Setup – AMI	
SATA Controller (S:00 B:00 D:00 F:0 Port 0 Port 1 Port 2 Port 3	0) Not Present Not Present Not Present	★: Select Screen 1↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Version	2.22.1294 Copyright (C) 2025 AMI	

Parameter	Description
SATA Configuration	Displays the installed HDD devices information. System will automatically detect HDD type.

2-2-14 Chipset Configuration

Advanced	Aptio Setup – AMI	
Restore AC Power Loss SMT Control ECC SATA Mode NVME RAID mode Assign resource for X16 slot CPU MAX temperature setting	[Last State] [Enabled] [Enabled] [AHCI] [Disabled] [Disabled] [Enabled]	Specify what state wher power is re-applied af: a power failure (63 sta
		++: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Versio	n 2.22.1294 Copyright (C) 2025 AM	I

Parameter	Description
Restore AC Power Loss	This option provides user to set the mode of operation if an AC / power loss occurs. Options available: Power Off, Power On, Last State, Unspecified. Default setting is Last State.

2-2-15 RAM Disk Configuration

Advanced	Aptio Setup – AMI	
Disk Memory Type: ▶ Create raw ▶ Create from file	[Boot Service Data]	Specifies type of memory to use from available memory pool in system to create a disk.
Created RAM disk list: Remove selected RAM disk(s).		
		+: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Versio	on 2.22.1294 Copyright (C) 202	25 AMI

Parameter	Description
Disk Memory Type	Specifies the type of memory to use from available memory pool in system to create a disk. Options available: Boot Service Data, Reserved. Default setting is Boot Service Data .
Create Raw	 Creates a raw RAM disk. Size (Hex) Input a valid RAM disk size that should be multiple of the RAM disk block size. Create & Exit Discard & Exit
Create from file	Creates a RAM disk from a given file.
Created RAM disk list	
Remove selected RAM disk(s)	Selects the RAM disk(s) to remove.

2-2-16 TIs Auth Configuration

Aptio Set	up – AMI
▶ Server CA Configuration	Press <enter≻ confi≨<br="" to="">Server CA.</enter≻>
▶ Client Cert Configuration	
	++: Select Screen †↓: Select Item Enter: Select
	+/-: Change Opt. F1: General Help F3: Previous Values
	F9: Optimized Defaults F10: Save & Exit
	ESU: EXIT
Version 2.22.1294 Co	pyright (C) 2025 AMI

Parameter	Description
Server CA Configuration	Press [Enter] for configuration of advanced items.
	Enroll Cert
	 Press [Enter] to enroll a certificate
	Enroll Cert Using File
	Cert GUID
	Input digit character in 1111111-2222-3333-4444-1234567890ab
	format.
	 Commit Changes and Exit
	 Discard Changes and Exit
	Delete Cert
Client Cert Configuration	Press [Enter] for configuration of advanced items.

2-2-17 iSCSI Configuration

Aptio Setup – AMI Advanced	
iSCSI Initiator Name	The worldwide unique name
▶ Add an Attempt	IQN format is accepted.
► Delete Attempts	
▶ Change Attempt Order	
	++: Select Screen
	fl: Select Item
	+/-: Change Opt.
	F3: Previous Values
	F10: Save & Exit
	LOUT ENT
Version 2.21.1279 Copyright (C) 2022	P AMT

Parameter	Description	
Attempt Priority	 Attem Cha Opti Hos Comn 	pt Priority nge the attempt priority. ons available: Host Attempt, Redfish Attempt. Default setting is t Attempt . nit Change and Exit
Host iSCSI Configuration	 iSCSI – Presacce Add a Delete Chang 	Initiator Name ss [Enter] and name iSCSI Initiator. Only IQN format is epted. Range: from 4 to 223. n Attempt e Attempts ge Attempt Order

2-2-18 Broadcom® BCM57502 Ethernet Network Connection

Advanced	Aptio Setup – AMI	
 Firmware Image Menu Device Configuration Menu MBA Configuration Blink LEDS Link Status Physical Link Speed Chip Type PCI Device ID Bus:Device:Function Permanent MAC Address Virtual MAC Address 	0 [Disconnected] None BCM57502 B2 1752 02:00:00 10:FF:E0:D2:1B:A8 10:FF:E0:D2:1B:A8	Firmware image information. ++: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Vers		

Parameter	Description	
Firmware Image Menu	Press [Enter] to view firmware image information.	
Device Configuration Menu	 Press [Enter] to configure advanced items. Multi-Function Mode Configures the NIC Hardware Mode. Options available: SF, NPAR 1.0. Default setting is SF. SR-IOV Enable/Disable Single Root I/O Virtualization. Options available: Disabled, Enabled. Default setting is Disabled. Number of MSI-X Vectors per VF Configures the number of MSI-X Vectors per VF (0-128). Default setting is 16. Maximum Number of PF MSI-X Vectors Configures the maximum number of PF MSI-X Vectors (0-512 per controller). Default setting is 74. Energy Efficient Ethernet Enable/Disable Energy Efficient Ethernet operation. Options available: Disabled, Enabled. Default setting is Disabled. Operational Link Speed Configures the link speed setting to be used as the default link speed for the selected port. Options available: AutoNeg. Default setting is AutoNeg. 	
MBA Configuration Menu (continued)	 Pre-boot Wake On LAN Configures Pre-boot Wake on LAN (WOL). Options available: Disabled, Enabled. Default setting is Enabled. VLAN Mode Configures the virtual LAN (VLAN) mode. Options available: Disabled, Enabled. Default setting is Disabled. VLAN ID Configures the VLAN ID (14094). This item is available only when VLAN Mode is Enabled. Boot Retry Count Selects the number of boot retries. Options available: No Retry, 1 Retry, 2 Retries, 3 Retries, 4 Retries, 5 Retries, 6 Retries, Indefinite Retries. Default setting is No Retry. 	
iSCSI Boot Configuration Menu	Press [Enter] to configure advanced items.	
Blink LEDs	Identifies the physical network port by blinking the associated LED. Press the numeric keys to adjust desired values.	
Link Status	Specifies the link status of the port.	
Physical Link Speed	Displays the technical specifications for the Network Interface Controller.	

Parameter	Description
Chip Type	Displays the technical specifications for the Network Interface Controller.
PCI Device ID	Displays the technical specifications for the Network Interface Controller.
Bus:Device:Function	Displays the technical specifications for the Network Interface Controller.
Permanent MAC Address	Displays the MAC address of the Ethernet controller.
Virtual MAC Address	Displays the virtual MAC address of the Ethernet controller.

2-2-19 Intel® I210 Gigabit Network Connection



Parameter	Description
NIC Configuration	 Link Speed Allows for automatic link speed adjustment. Options available: Auto Negotiated, 10 Mbps Half, 10 Mbps Full, 100 Mbps Half, 100 Mbps Full. Default setting is Auto Negotiated. Wake On LAN Enables power on of the system via LAN. Note that configuring Wake on LAN in the operating system does not change the value of this setting, but does override the behavior of Wake on LAN in OS controlled power states. Options available: Disabled, Enabled. Default setting is Enabled.
Blink LEDs	Identifies the physical network port by blinking the associated LED. Press the numeric keys to adjust desired values.
UEFI Driver	Displays the technical specifications for the Network Interface Controller.
Adapter PBA	Displays the technical specifications for the Network Interface Controller.
Device Name	Displays the technical specifications for the Network Interface Controller.
Chip Type	Displays the technical specifications for the Network Interface Controller.
PCI Device ID	Displays the technical specifications for the Network Interface Controller.
PCI Address	Displays the technical specifications for the Network Interface Controller.
Link Status	Specifies the link status of the port.
MAC Address	Displays the MAC address of the Ethernet controller.
Virtual MAC Address	Displays the virtual MAC address of the Ethernet controller.

2-2-20 VLAN Configuration

Advanced	Aptio Setup – f	MI
Create new VLAN VLAN ID Priority Add VLAN	0	VLAN ID of new VLAN or existing VLAN, valid value is 0~4094
Configured VLAN List Remove VLAN		
		<pre>+*: Select Screen 14: Select Item Enter: Select +/-: Change Opt, F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</pre>
	Version 2.22.1294 Copyrigh	nt (C) 2025 AMI

Parameter	Description
Enter Configuration Menu	 Press [Enter] to configure advanced items. Create new VLAN VLAN ID Sets VLAN ID for a new VLAN or an existing VLAN. Press the <+> / <-> keys to increase or decrease the desired values. The valid range is from 0 to 4094. Priority Sets 802.1Q Priority for a new VLAN or an existing VLAN. Press the <+> / <-> keys to increase or decrease the desired values. The valid range is from 0 to 7. Add VLAN Press [Enter] to create a new VLAN or update an existing VLAN. Configured VLAN List Remove VLAN Press [Enter] to remove an existing VLAN.

2-2-21 MAC IPv4 Network Configuration

Advanced	Aptio Setup – AMI	
Configured	[Disabled]	Indicate whether network
Save Changes and Exit		successfully or not.
		++: Select Screen
		Enter: Select
		F1: General Help
		F9: Optimized Defaults F10: Save & Exit
		ESC: Exit

Parameter	Description
Configured	Indicates whether network address is configured successfully or not.
	Options available: Enabled, Disabled. Default setting is Disabled.
Enable DHCP ^(Note)	Options available: Enabled, Disabled. Default setting is Enabled.
Local IP Address ^(Note)	Press [Enter] to configure local IP address.
Local NetMask ^(Note)	Press [Enter] to configure local NetMask.
Local Gateway ^(Note)	Press [Enter] to configure local Gateway
Local DNS Servers ^(Note)	Press [Enter] to configure local DNS servers
Save Changes and Exit	Press [Enter] to save all configurations.
2-2-22 MAC IPv6 Network Configuration



Parameter	Description	
Enter Configuration Menu	 Press [Enter] to configure advanced items. Displays the MAC Address information. Interface ID The 64 bit alternative interface ID for the device. The string is colon separated. e.g. ff:dd:88:66:cc:1:2:3. DAD Transmit Count The number of consecutive Neighbor solicitation messages sent while performing Duplicate Address Detection on a tentative address. A value of zero indicates that Duplicate Address Detection is not performed. Policy Options available: automatic, manual. Default setting is automatic. Save Changes and Exit Press [Enter] to save all configurations. 	

2-2-23 Driver Health

Advanced	Aptio Setup – AMI	- o ×
 Intel(R) PR0/1000 Broadcom NXE Gigs Broadcom NXE Gigs 	0 7.5.11 PCI-E Healthy abit Ethernet Driver Healthy abit Ethernet Driver Healthy Version 2.22.1294 Copyright (C)	Provides Health Status for the Drivers/Controllers **: Select Screen fil: Select Screen fil: Select Item Enter: Select */-: Change Opt. Fil: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
ameter	Description	
or Hoalth	Diaplaya driver boolth status of the	devices (controllers if installed

2-3 Chipset Setup Menu

Chipset Setup menu displays submenu options for configuring the function of the North Bridge. Select a submenu item, then press <Enter> to access the related submenu screen.

Aptio Setup - AMI Main Advanced <mark>Chipset</mark> Server Mgmt Security Boot Save & Exit	
▶ GFX Configuration ▶ North Bridge	North Bridge Parameters
	<pre>++: Select Screen f4: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</pre>
Version 2.22.1294 Copyright (C) 2025 AMI	

Parameter	Description
North Bridge	Press [Enter] for configuration of advanced items.

2-3-1 North Bridge

Chipset	Aptio Setup – AMI	
North Bridge Configuration Above 4GB MMIO Limit Memory Information Total Memory: 16 GB (DD)	1 [40bit (1TB)] R5)	Select Above 4GB MMIO Limit. This option works only when 'Above 4G decoding' is enabled.
▶ Socket 0 Information	Version 2.22.1294 Copyright (C)	++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit 2025 AMI
arameter	Description	
orth Bridge Configuration		
bove 4GB MMIO Limit	Selects Above 4GB MMIO Lin only when "Above 4G decoding Options available: 40bit (1TB), Default setting is 40bit (1TB) .	nit to 38~43 bits limit. This option wor " is enabled. 41bit (2TB), 42bit (4TB), 43bit (8TB).
emory Information		
otal Memory	Displays the total memory infor	mation.
ocket 0 Information	Press [Enter] to view information	on related to socket 0.

2-4 Server Management Menu

Main Advanced Chipset <mark>Se</mark>	Aptio Setup – AMI erver Mgmt Security Boot Save & B	Exit
FRB-2 Timer FRB-2 Timer timeout FRB-2 Timer Policy OS Watchdog Timer OS Witd Timer Timeout OS Witd Timer Policy Wait BMC Ready > System Event Log > View FRU information > BMC VLAN Configuration	[Enabled] 20 [Reset] [Disabled] 10 [Reset] [2 minutes]	Press <enter> to change the SEL event log configuration.</enter>
▶ IPv6 BMC Network Configurati	lon	++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit

Parameter	Description
FRB-2 Timer	Enable/Disable FRB-2 timer (POST timer). Options available: Enabled, Disabled. Default setting is Disabled .
FRB-2 Timer ^(Note1) timeout	Configures the FRB2 Timer timeout. Options available: 3 minutes, 4 minutes, 5 minutes, 6 minutes. Default setting is 6 minutes.
FRB-2 Timer Policy ^(Note1)	Configures the FRB2 Timer policy. Options available: Do Nothing, Reset, Power Down. Default setting is Do Nothing .
OS Watchdog Timer	Enable/Disable OS Watchdog Timer function. Options available: Enabled, Disabled. Default setting is Disabled .
OS Wtd Timer Timeout ^(Note2)	Configures OS Watchdog Timer. Options available: 5 minutes, 10 minutes, 15 minutes, 20 minutes. Default setting is 10 minutes .
OS Wtd Timer Policy ^(Note2)	Configure OS Watchdog Timer Policy. Options available: Reset, Do Nothing, Power Down. Default setting is Reset .

Parameter	Description
Wait BMC Ready	Post wait BMC ready and reboot system. Options available: Disabled, 2 minutes, 4 minutes, 6 minutes. Default setting is 2 minutes.
System Event Log	Press [Enter] to configure advanced items.
View FRU Information	Press [Enter] to view the FRU information.
Bmc self test log	Press [Enter] to configure advanced items.
BMC VLAN Configuration	Press [Enter] to configure advanced items.
BMC network configuration	Press [Enter] to configure advanced items.
View System Event Log	Press [Enter] to view the system event log records.
BMC User Settings	Press [Enter] to add, delete and set privilege level for users.
IPv6 BMC Network Configuration	Press [Enter] to configure advanced items.
BMC Warm Reset	Press [Enter] to do warm reset BMC.

2-4-1 System Event Log

Aptio Setup – AMI Server Hymt		
Enabling/Disabling Options		Change this to enable or
SEL Components		disable event logging for error/progress codes
Erasing Settings		during boot.
Enase SEL	[No]	
When SEL is Full	[Do Nothing]	
Queter FFT Levring Ontions		
Log EFI Status Codes	[Eppon_code]	
Log EF1 Status codes		
NOTE: All values changed here do not	take	
effect until computer is resta	rted.	
		tt. Salact Scheen
		11: Select Item
		Enter: Select
		+/-: Change Opt.
		F1: General Help
		F3: Previous Values
		F9: Optimized Defaults
		FIU: SAVE & EXIL
		COOT EAL
Version 2	22 1294 Conuright (C) 2025 AMT	

Parameter	Description
Enabling / Disabling Options	
SEL Components	Change this item to enable or disable all features of System Event Logging during boot. Options available: Disabled, Enabled. Default setting is Enabled .
Erasing Settings	
Erase SEL	Choose options for erasing SEL. Options available: No/Yes, On next reset/Yes, On every reset. Default setting is No .
When SEL is Full	Choose options for reactions to a full SEL. Options available: Do Nothing, Erase Immediately, Delete Oldest Record. Default setting is Do Nothing .
Custom EFI Logging Options	
Log EFI Status Codes	Enable/Disable the logging of EFI Status Codes (if not already converted to legacy). Options available: Disabled, Both, Error code, Progress code. Default setting is Error code .

2-4-2 View FRU Information

The FRU page is a simple display page for basic system ID information, as well as System product information. Items on this window are non-configurable.

FRU Information System Manufacturer Giga Computing System Version 0100 System Version 0100 Sustem Nersion 01234567890123 Board Manufacturer Giga Computing Board Product Name MC13-LE3-000 Board Product Name MC13-LE3-000 Board Product Name MC13-LE3-000 Board Serial Number PG2F540010 Chassis Manufacturer Giga Computing Chassis Version 01234567890123456789AB ++: Select Screen T4: Select Item T4: Select Item Entr: Select +-: Change Opt. +-: Change Opt.	Aptio Setup – AMI Server Mgmt		
F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit	FRU Information System Manufacturer System Product Name System Version Board Manufacturer Board Manufacturer Board Part Number Chassis Manufacturer Chassis Version Chassis Serial Number	Aptio Setup - AMI Server Mgmt Giga Computing MC13-LE3-000 0100 01234567890123 Giga Computing MC13-LE3-000 12345678948 P82P540010 Giga Computing 01234567 0123456789012345678948	+: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit

2-4-3 BMC VLAN Configuration

	Aptio Setup – AMI Server Mgmt	
BMC VLAN Configuration BMC VLAN ID BMC VLAN Priority	0	VLAN ID of new VLAN or existing VLAN, valid value is 0~4094, 0 is disable VLAN
		++: Select Screen T1: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit

Parameter	Description
BMC VLAN Configuration	
BMC VLAN ID	Sets VLAN ID for a new VLAN or an existing VLAN. Press the <+> / <-> keys to increase or decrease the desired values. The valid range is from 0 to 4094.
BMC VLAN Priority	Sets 802.1Q Priority for a new VLAN or an existing VLAN. Press the <+> / <-> keys to increase or decrease the desired values. The valid range is from 0 to 7.

2-4-4 BMC Network Configuration

Aptio Setup - AMI Server Mgmt		
BMC network configuration Lan channel 1 Configuration Address source Station IP address Subnet mask Router IP address Station MAC address Real-time get BMC network address	[DynamicBmcDhcp] 10.1.6.80 255.255.255.0 10.1.6.253 10-FF-E0-D2-1B-AA	Select to configure LAN channel parameters statically or dynamically(by BIDS or BMC). Unspecified option will not modify any BMC network parameters during BIDS phase ++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F3: Optimized Defaults F10: Save & Exit ESC: Exit
Version 2	.22.1294 Copyright (C) 2025 AMI	

Parameter	Description
BMC network configuration	
Lan Channel 1	
Configuration Address source	Selects to configure LAN channel parameters statically or dynamically (DHCP). Do nothing option will not modify any BMC network parameters during BIOS phase. Options available: Unspecified, Static, DynamicBmcDhcp. Default setting is DynamicBmcDhcp .
Station IP address	Displays IP Address information.
Subnet mask	Displays Subnet Mask information. Please note that the IP address must be in three digitals, for example, 192.168.000.001.
Router IP address	Displays the Router IP Address information.
Station MAC address	Displays the MAC Address information.
Real-time get BMC network address	Press [Enter] will set LAN mode and Address source and then get IP, Subnet, Gateway and MAC address.

2-4-5 IPv6 BMC Network Configuration

Server Mgm	Aptio Setup – AMI I	
IPv6 BMC Network Configuration IPv6 BMC Lan Option IPv6 BMC Lan Option IPv6 BMC Lan IP Address Source IPv6 BMC Lan IP Address/Prefix Len -> [::/0]	[Enable] [Dynamic-Obtained by BM] ::/0	Enable/Disable IPv6 BMC LAN channel function. Disable option will not modify any BMC network during BIOS Phase
		++: Select Screen ++: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F3: Optimized Defaults F10: Save & Exit ESC: Exit
Version 2.	.22.1294 Copyright (C) 2025 AMI	

Parameter	Description
IPv6 BMC network configuration	
IPv6 BMC Lan Channel 1	
IPv6 BMC Lan Option	Enable/Disable IPv6 BMC LAN channel function. When this item is disabled, the system will not modify any BMC network during BIOS phase. Options available: Unspecified, Disable, Enable. Default setting is Enable.
IPv6 BMC Lan IP Address Source	Selects to configure LAN channel parameters statically or dynamically (by BIOS or BMC). Options available: Unspecified, Static, Dynamic-Obtained by BMC running DHCP. Default setting is Enable Dynamic-Obtained by BMC running DHCP .
IPv6 BMC Lan IP Address/ Prefix Length	Check if the IPv6 BMC LAN IP address matches those displayed on the screen.

2-5 Security Menu

The Security menu allows you to safeguard and protect the system from unauthorized use by setting up access passwords.

Main Advanced Chipset	Aptio Setup – Server Mgmt <mark>Security</mark> Bo	– AMI oot Save & Exit	
Password Description		Secure Flash Update :	support
If ONLY the Administrator' then this only limits acce only asked for when enteri If ONLY the User's password is a power on password and boot or enter Setup. In Se have Administrator rights. The password length must b in the following range: Winimm Length	s password is set, ss to Setup and is ng Setup. d is set, then this must be entered to tup the User will e		
Maximum length	20	→+: Select Screen	
Administrator Password User Password		↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values	
▶ Secure Boot		F9: Optimized Defaul	ts
▶ Secure Flash Update		F10: Save & Exit ESC: Exit	
	Vancian 2 22 1204 Conumi	ight (D) 0005 ANT	

There are two types of passwords that you can set:

Administrator Password

Entering this password will allow the user to access and change all settings in the Setup Utility.

User Password

Entering this password will restrict a user's access to the Setup menus. To enable or disable this field, a Administrator Password must first be set. A user can only access and modify the System Time, System Date, and Set User Password fields.

Parameter	Description
Administrator Password	Press [Enter] to configure the administrator password.
User Password	Press [Enter] to configure the user password.
Secure Boot	Press [Enter] to configure advanced items.
Secure Flash Update	Press [Enter] to view advanced items.

2-5-1 Secure Boot

The Secure Boot feature is applicable if supported by your Operating System.

If your Operating System is not supporting Secure Boot, the system will hang when starting the Operating System.

System Mode	Setup	Secure Boot feature is Active if Secure Boot is
	(Enabled) Not Active	Enabled, Platform Key(PK) is enrolled and the System i
Secure Boot Mode	[Standard]	in User mode.
Restore Factory Keys		The mode change requires
Reset To Setup Mode		platform reset
Key Management		
		++: Select Screen
		↑↓: Select Item
		Enter: Select
		+/-: Unange Upt.
		E3: Previous Values
		F9: Optimized Defaults
		F10: Save & Exit
		ESC: Exit

Version 2.22.1294 Copyright (C) 2025 AMI

Parameter	Description
System Mode	Displays if the system is in User mode or Setup mode.
Secure Boot	Enable/ Disable the Secure Boot function. Options available: Enabled, Disabled. Default setting is Disabled .
Secure Boot Mode ^(Note)	Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates. This way, the system knows all files being loaded before Windows loads to the login screen have not been tampered with. When set to Standard, it will automatically load the Secure Boot keys form the BIOS databases. When set to Custom, you can customize the Secure Boot settings and manually load its keys from the BIOS database. Options available: Standard, Custom. Default setting is Standard .
Restore Factory Keys	Forces the system to user mode and installs factory default Secure Boot key database.
Reset to Setup Mode	Press [Enter] to reset the system to Setup mode.

(Note) Advanced items prompt when this item is set to Custom.

Parameter	Description
Key Management	 Press [Enter] to configure advanced items. Please note that this item is configurable when Secure Boot Mode is set to Custom. Factory Key Provision Allows to provision factory default Secure Boot keys when system is in Setup Mode. Options available: Enabled, Disabled. Default setting is Disabled. Restore Factory Keys Installs all factory default keys. It will force the system in User Mode. Options available: Yes, No. Enroll Efi Image Press [Enter] to enroll SHA256 hash of the binary into Authorized Signature Database (db). Secure Boot variable Displays the current status of the variables used for secure boot. Platform Key (PK) Displays the current status of the Platform Key (PK). Press [Enter] to configure a new PK. Options available: Update. Key Exchange Keys (KEK) Displays the current status of the Key Exchange Key Database (KEK). Press [Enter] to configure a new KEK or load additional KEK from storage devices. Options available: Update, Append. Authorized Signatures (DB) Displays the current status of the Authorized Signature Database. Press [Enter] to configure a new DB or load additional DB from storage devices. Options available: Update, Append. Forbidden Signatures (DBX) Displays the current status of the Forbidden Signature Database. Press [Enter] to configure a new dbx or load additional dbx from storage devices. Options available: Update, Append. Authorized TimeStamps (DBT) Displays the current status of the Authorized TimeStamps Database. Press [Enter] to configure a new DBT or load additional DBT from storage devices. Options available: Update, Append. Authorized TimeStamps (DBT) Displays the

Boot Menu 2-6

The Boot menu allows you to set the drive priority during system boot-up. BIOS setup will display an error message if the legacy drive(s) specified is not bootable.

Main Advanced Chipset Server Mgmt	Aptio Setup – AMI Security <mark>Boot</mark> Save & Exit	
Main Hovanced Chipset Server Maint Boot Configuration Setup Promot Timeout Boot NumLock State Quiet Boot Boot mode select FIXED BOOT ORDER Priorities Boot Option #2 Boot Option #3 Boot Option #4 Boot Option #5 > UEFI NETWORK Drive BBS Priorities > UEFI Application Boot Priorities	Security Hoot Save & Exit (In) [Enabled] [UEFI] [Hard Disk] [CD/DVD] [USB Device] [Network:UEFI: PXE IPv4] [UEFI AP:UEFI: Built-in]	Specifies the Boot Device Priority sequence from available UEFI Application.

Parameter	Description		
Boot Configuration			
Setup Prompt Timeout	Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting. Press the numeric keys to input the desired values.		
Bootup NumLock State	Enable/Disable the Bootup NumLock function. Options available: On, Off. Default setting is On .		
Quiet Boot	Enable/Disable showing the logo during POST. Options available: Enabled, Disabled. Default setting is Enabled .		
Boot mode select	Selects the boot mode. Options available: LEGACY, UEFI. Default setting is UEFI .		
FIXED BOOT ORDER Priorities			
Boot Option #1 / #2 / #3 / #4 / #5	 Press [Enter] to configure the boot order priority. By default, the server searches for boot devices in the following sequence: 1. Hard drive. 2. CD-COM/DVD drive. 3. USB device. 4. Network. 5. UEFI. 		
	PIOC Cotup		

2-7 Save & Exit Menu

The Save & Exit menu displays the various options to quit from the BIOS setup. Highlight any of the exit options then press <Enter>.

Aptio Setup – AM <u>I</u>	
Main Advanced Chipset Server Mgmt Security Boot Save & Exit	
Save Options Save Changes and Exit Discard Changes and Exit	Exit system setup after saving the changes.
Save Changes and Reset Discard Changes and Reset	
Save Changes Discard Changes	
Default Options Restore Defaults Save as User Defaults	
Restore User Defaults	↔+: Select Screen ↑↓: Select Item
UGFI: PXE IPv4 Broadcom Network Device - 10:FF:E0:D2:18:A8 UEFI: PXE IPv4 Broadcom Network Device - 10:FF:E0:D2:18:A9 UEFI: PXE IPv4 Intel(R) I210 Gigabit Network Connection UEFI: PXE IPv4 Intel(R) I210 Gigabit Network Connection UEFI: Built-in EFI Shell Launch EFI Shell from filesystem device	Enter: Select +/-: Change Opt. F1: General Help F3: Previous Values F3: Optimized Defaults F10: Save & Exit ESC: Exit

Parameter	Description
Save Options	
Save Changes and Exit	Saves changes made and closes the BIOS setup. Options available: Yes, No.
Discard Changes and Exit	Discards changes made and exits the BIOS setup. Options available: Yes, No.
Save Changes and Reset	Restarts the system after saving the changes made. Options available: Yes, No.
Discard Changes and Reset	Restarts the system without saving any changes. Options available: Yes, No.
Save Changes	Saves changes done so far to any of the setup options. Options available: Yes, No.
Discard Changes	Discards changes made and closes the BIOS setup. Options available: Yes, No.
Default Options	

Parameter	Description
Restore Defaults	Loads the default settings for all BIOS setup parameters. Setup Defaults are quite demanding in terms of resources consumption. If you are using low-speed memory chips or other kinds of low-performance components and you choose to load these settings, the system might not function properly. Options available: Yes, No.
Save as User Defaults	Saves the changes made as the user default settings. Options available: Yes, No.
Restore User Defaults	Loads the user default settings for all BIOS setup parameters. Options available: Yes, No.
Boot Override	Press [Enter] to configure the device as the boot-up drive.
Launch EFI Shell from filesystem device	Attempts to Launch EFI Shell application (Shell.efi) from one of the available file system devices.

2-8 BIOS Recovery

The system has an embedded recovery technique. In the event that the BIOS becomes corrupt the boot block can be used to restore the BIOS to a working state. To restore your BIOS, please follow the instructions listed below:

Recovery Instruction:

- 1. Copy the XXX.rom to USB diskette.
- 2. Setting BIOS Recovery jump to enabled status.
- 3. Boot into BIOS recovery.
- 4. Run Proceed with flash update.
- 5. BIOS updated.

