

# R180-F34 R180-F28

Dual LGA2011 sockets R3 motherboard for Intel® E5-2600 V3/V4 series processors

## Service Guide

Rev. 1.1



## **Copyright**

© 2016 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in this manual are legally registered to their respective owners.

## **Disclaimer**

Information in this manual is protected by copyright laws and is the property of GIGABYTE.

Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice. No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

## **Documentation Classifications**

In order to assist in the use of this product, GIGABYTE provides the following types of documentations:

- For detailed product information, carefully read the User's Manual.

For more information, visit our website at:

**<http://b2b.gigabyte.com>**

You are a professional?

Get an access to our complete source of sales, marketing & technical materials at:

**<http://reseller.b2b.gigabyte.com>**

Join our server forum to discuss our products and get technical assistance at:

**[forum.b2b.gigabyte.com](http://forum.b2b.gigabyte.com)**



**<https://www.facebook.com/gigabyteserver>**



## **Preface**

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for GIGABYTE's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING SPARE PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reason, if a part number change is made, it will not be noted in the printed Service Guide. For GIGABYTE-AUTHORIZED SERVICE PROVIDERS, your GIGABYTE office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional GIGABYTE office to order FRU parts for repair and service of customer machines.



# Table of Contents

|  |    |
|--|----|
| Box Contents .....                             | 7  |
| Safety, Care and Regulatory Information .....  | 8  |
| Chapter 1 Hardware Installation .....          | 11 |
| 1-1 Installation Precautions .....             | 11 |
| 1-2 Product Specifications .....               | 12 |
| 1-3 System Block Diagram .....                 | 14 |
| Chapter 2 System Hardware Installation .....   | 15 |
| 2-1 Removing Chassis Cover .....               | 16 |
| 2-2 Removing and Installing the Fan Duct ..... | 17 |
| 2-3 Installing the CPU .....                   | 18 |
| 2-4 Installing the Heat Sink .....             | 19 |
| 2-5 Installing the Memory .....                | 20 |
| 2-5-1 Four Channel Memory Configuration .....  | 20 |
| 2-5-2 Installing a Memory .....                | 21 |
| 2-5-3 DIMM Population Table .....              | 21 |
| 2-6 Installing the PCI Expansion Card .....    | 22 |
| 2-6-1 Installing Add-on Card (Optional) .....  | 24 |
| 2-7 Installing the Hard Disk Drive .....       | 25 |
| 2-8 Replacing the FAN Assembly .....           | 26 |
| 2-9 Replacing the Power Supply .....           | 27 |
| 2-10 Installing Rail Into A Rack .....         | 28 |
| Chapter 3 System Appearance .....              | 29 |
| 3-1 Front View .....                           | 29 |
| 3-2 Rear View .....                            | 30 |
| 3-3 Front Panel LED and Buttons .....          | 31 |
| 3-4 Rear System LAN LEDs .....                 | 34 |
| 3-5 Hard Disk Drive LEDs .....                 | 35 |
| 3-6 Cable Routing .....                        | 36 |
| Chapter 4 Motherboard Components .....         | 37 |
| 4-1 MD90-FS0 Motherboard Components .....      | 37 |
| 4-2 Jumper Setting .....                       | 40 |
| Chapter 5 BIOS Setup .....                     | 41 |



|           |   |     |
|-----------|---|-----|
| 5-1       | The Main Menu .....                           | 43  |
| 5-2       | Advanced Menu .....                           | 46  |
| 5-2-1     | Serial Port Console Redirection .....         | 47  |
| 5-2-2     | PCI Subsystem Settings.....                   | 50  |
| 5-2-2-1   | PCI Express Settings.....                     | 52  |
| 5-2-3     | Network Stack .....                           | 54  |
| 5-2-4     | CSM Configuration .....                       | 55  |
| 5-2-5     | Post Report Configuration .....               | 57  |
| 5-2-6     | Trusted Computing .....                       | 58  |
| 5-2-7     | USB Configuration .....                       | 59  |
| 5-2-8     | Chipset Configuration .....                   | 60  |
| 5-9       | SIO Configuration .....                       | 61  |
| 5-2-10    | iSCSI Configuration .....                     | 63  |
| 5-3       | Intel RC Setup Menu .....                     | 64  |
| 5-3-1     | Processor Configuration .....                 | 65  |
| 5-3-1-1   | Pre-Socket Configuration .....                | 68  |
| 5-3-2     | Advanced Power Management Configuration ..... | 70  |
| 5-3-2-1   | CPU P State Control.....                      | 71  |
| 5-3-2-2   | CPU C State Control .....                     | 72  |
| 5-3-2-3   | CPU T State Control .....                     | 73  |
| 5-3-3     | Common RefCode Configuration .....            | 74  |
| 5-3-4     | QPI Configuration .....                       | 75  |
| 5-3-5     | Memory Configuration .....                    | 77  |
| 5-3-5-1   | Memory Topology .....                         | 79  |
| 5-3-5-2   | Memory Thermal .....                          | 80  |
| 5-3-5-3   | Memory Map.....                               | 81  |
| 5-3-5-4   | Memory RAS Configuration.....                 | 82  |
| 5-3-6     | IIO Configuration .....                       | 83  |
| 5-3-6-1   | IOAT Configuration .....                      | 84  |
| 5-3-6-2   | Intel VT for Directed I/O (VT-d) .....        | 85  |
| 5-3-7     | PCH Configuration .....                       | 86  |
| 5-3-7-1   | PCH Devices .....                             | 87  |
| 5-3-7-2   | PCH sSATA Configuration .....                 | 88  |
| 5-3-7-2-1 | SATA Mode Options.....                        | 91  |
| 5-3-7-3   | PCH SATA Configuration .....                  | 93  |
| 5-3-7-3-1 | SATA Mode Options.....                        | 96  |
| 5-3-7-4   | USB Configuration .....                       | 98  |
| 5-3-8     | Miscellaneous Configuration .....             | 99  |
| 5-3-9     | Server ME Configuration .....                 | 100 |
| 5-3-10    | Runtime Error Logging .....                   | 101 |
| 5-3-10-1  | Whea Setting.....                             | 102 |
| 5-3-10-2  | Memory Error Enabling.....                    | 103 |



|                                       |     |
|---------------------------------------|-----|
| 5-3-10-3 PCI/PCI Error Enabling.....  | 104 |
| 5-4 Server Management Menu.....       | 105 |
| 5-4-1 System Event Log .....          | 107 |
| 5-4-2 View FRU Information .....      | 108 |
| 5-4-3 BMC network configuration ..... | 109 |
| 5-5 Security Menu .....               | 110 |
| 5-5-1 Secure Boot menu .....          | 111 |
| 5-5-1-1 Key Management .....          | 112 |
| 5-6 Boot Menu.....                    | 114 |
| 5-7 Save & Exit Menu.....             | 116 |
| 5-8 BIOS POST Codes .....             | 118 |
| 5-9 BIOS POST Beep code.....          | 122 |
| 5-9-1 PEI Beep Codes.....             | 122 |
| 5-9-2 DEX Beep Codes .....            | 122 |
| 5-10 BIOS Recovery Instruction.....   | 123 |



## Box Contents

- ☒ R180-F34/R180-F28 System
- ☒ Driver CD
- ☒ Two CPU Heat Sink
- ☒ Rail Kit

- The box contents above are for reference only and the actual items shall depend on the product package you obtain. The box contents are subject to change without notice.
- The motherboard image is for reference only.



# Safety, Care and Regulatory Information

## Important safety information

Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.

- The product should be operated only from the type of power source indicated on the rating label.\* If your computer has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.
- All product shipped with a three-wire electrical grounding-type plug only fits into a grounding-type power outlet. This is a safety feature. The equipment grounding should be in accordance with local and national electrical codes. The equipment operates safely when it is used in accordance with its marked electrical ratings and product usage instructions.
- Do not use this product near water or a heat source.\* Set up the product on a stable work surface or so as to ensure stability of the system.
- Openings in the case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space around the system for ventilation when you set up your work area. Never insert objects of any kind into the ventilation openings.
- To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before removing covers.
- Allow the product to cool before removing covers or touching internal components.

## Precaution for Product with Laser Devices

Observe the following precautions for laser devices:

- Do not open the CD-ROM drive, make adjustments, or perform procedures on a laser device other than those specified in the product's documentation.
- Only authorized service technicians should repair laser devices.

## Precaution for Product with Modems, Telecommunications, or Local Area Network Options

Observe the following precautions for laser devices:

- Do not connect or use a modem or telephone during a lightning storm. There may be a risk of electrical shock from lightning.
- To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.
- Do not plug a modem or telephone cable into the network interface controller (NIC) receptacle.
- Disconnect the modem cable before opening a product enclosure, touching or installing internal components, or touching an uninsulated modem cable or jack.
- Do not use a telephone line to report a gas leak while you are in the vicinity of the leak.



## **Federal Communications Commission (FCC) Statement**

### **Warning**

**This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Neither the provider nor the manufacturer are responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Canadian Department of Communications Compliance Statement**

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada. Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe A prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

### **Class A equipment**

This device has been tested and found to comply with the limits for a class A digital device pursuant Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at personal expense.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by tuning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the device and receiver
- Connect the device into an outlet on a circuit different from that to which the receiver is connected' Consult the dealer or an experienced radio/television technician for help.



## California Proposition 65

### Warning:

This product contains a chemical, including lead, known to the State of California to cause cancer

<http://www.p65warnings.ca.gov/>

### Warning:

This product contains a chemical, including lead, known to the State of California to cause birth defects or other reproductive harm.

<http://www.p65warnings.ca.gov/>

## WEEE Symbol Statement



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local government office, your household waste disposal service or where you purchased the product for details of environmentally safe recycling.

- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local or regional waste collection administration for recycling.
- If you need further assistance in recycling, reusing in your "end of life" product, you may contact us at the Customer Care number listed in your product's user's manual and we will be glad to help you with your effort.



**Battery Warning: Incorrectly installing a battery or using incompatible battery may increase the risk of fire explosion. Replace the battery only with the same or equivalent type.**

- Do not disassemble, crush, puncture batteries.
- Do not store or place your battery pack next to or in a heat source such as a fire, heat-generating appliance, can or exhaust vent. Heating battery cells to temperatures above 65°C (149°F) can cause explosion or fire.
- Do not attempt to open or service batteries. Do not dispose of batteries in a fire or with household waste.



# Chapter 1 Hardware Installation











## 1-1 Installation Precautions

The motherboard/system contain numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Prior to installation, carefully read the service guide and follow these procedures:









- Prior to installation, do not remove or break motherboard S/N (Serial Number) sticker or warranty sticker provided by your dealer. These stickers are required for warranty validation.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.
- When connecting hardware components to the internal connectors on the motherboard, make sure they are connected tightly and securely.
- When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) wrist strap when handling electronic components such as a motherboard, CPU or memory. If you do not have an ESD wrist strap, keep your hands dry and first touch a metal object to eliminate static electricity.
- Prior to installing the motherboard, please have it on top of an antistatic pad or within an electrostatic shielding container.
- Before unplugging the power supply cable from the motherboard, make sure the power supply has been turned off.
- Before turning on the power, make sure the power supply voltage has been set according to the local voltage standard.
- Before using the product, please verify that all cables and power connectors of your hardware components are connected.
- To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components.
- Make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- Do not place the computer system on an uneven surface.
- Do not place the computer system in a high-temperature environment.
- Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.



## 1-2 Product Specifications


|   |  |
|---|--|
|  CPU                 | <ul style="list-style-type: none"> <li>• Support for Intel® Xeon® E5-2600 V3/V4 series processors in the LGA2011 package</li> <li>• L3 cache varies with CPU</li> <li>• Supports Dual QuickPath Interconnect up to 9.6GT/s</li> <li>• Enhanced Intel SpeedStep Technology (EIST)</li> <li>• Support Intel Virtualization Technology (VT)</li> </ul>  |
|  Chipset             | <ul style="list-style-type: none"> <li>• Intel® C612 Express (Wellsburg) Chipset</li> </ul>  |
|  Memory              | <ul style="list-style-type: none"> <li>• 24 x DIMM slots</li> <li>• DDR4 memory supported only</li> <li>• Quad channel memory architecture</li> <li>• ECC RDIMM / LRDIMM modules supported</li> <li>• Single and dual rank RDIMM modules up to 32GB supported</li> <li>• 3DS LRDIMM modules up to 128GB supported</li> <li>• 1.2V modules: 1600/1866/2133/2400 MHz</li> </ul>  |
|  LAN                 | <ul style="list-style-type: none"> <li>• Intel® I350 supports dual GbE LAN ports</li> </ul>  |
|  Expansion Slot      | <ul style="list-style-type: none"> <li>• 2 x PCIe x16 slots (Gen3 x16 bus)</li> <li>• 1 x PCIe x8 slot (Gen3 x8 bus)</li> <li>• 1 x PCIe mezzanine type T (Gen3 x8 bus) slot</li> </ul>  |
|  Onboard Graphics    | <ul style="list-style-type: none"> <li>• ASPEED® AST2400 supports 16MB DDR3 VRAM</li> </ul>  |
|  Mass Storage        | <ul style="list-style-type: none"> <li>• 4 x 3.5" Hot-Swap HDDs (R180-F34)</li> <li>• 8 x 2.5" Hot-Swap HDDs (R180-F28)</li> </ul>   |
|  System Fans         | <ul style="list-style-type: none"> <li>• 4 x 40x40x28mm /18000rpm</li> <li>• 4 x 40x40x56mm/23000rpm</li> </ul>  |
|  USB                 | <ul style="list-style-type: none"> <li>• 2 x USB 3.0 ports</li> <li>• 2 x USB 2.0 ports</li> </ul>   |
|  Internal Connectors | <ul style="list-style-type: none"> <li>• 1 x 14-pin ATX main power connector</li> <li>• 3 x 8-pin ATX power connectors</li> <li>• 3 x 4-pin ATX 12V power connectors</li> <li>• 2 x hot-plug power supply connectors</li> <li>• 2 x Mini-SAS connectors (SATA3 6Gb/s signal)</li> <li>• 2 x SATA3 6Gb/s connectors</li> <li>• 2 x CPU fan headers</li> <li>• 5 x System fan headers</li> <li>• 1 x Front panel header</li> <li>• 1 x HDD Back plane board header</li> <li>• 1 x TPM module connector</li> <li>• 1 x Software RAID key connector</li> <li>• 1 x IPMB connector</li> </ul> |



|   |  |
|---|--|
|  Rear Panel I/O                                      | <ul style="list-style-type: none"> <li>♦ 2 x USB 3.0 ports</li> <li>♦ 2 x USB 2.0 ports</li> <li>♦ RJ45 COM port</li> <li>♦ 3 x RJ-45 ports (1 x 10/100/1000 dedicated management LAN port)</li> <li>♦ 1 x VGA port</li> <li>♦ 1 x ID button</li> </ul>  |
|  Front Panel LED/Buttons                             | <ul style="list-style-type: none"> <li>♦ 1 x Power button/LED</li> <li>♦ 1 x NMI button</li> <li>♦ 1 x ID Switch button/LED</li> <li>♦ 1 x Reset button</li> <li>♦ 2 x LAN LED</li> <li>♦ 1 x System status LED</li> <li>♦ 1 x HDD status LED</li> </ul>   |
|  I/O Controller                                      | <ul style="list-style-type: none"> <li>♦ ASPEED® AST2400 BMC chip</li> </ul>   |
|  Hardware Monitor                                    | <ul style="list-style-type: none"> <li>♦ System voltage detection</li> <li>♦ CPU/System temperature detection</li> <li>♦ CPU/System fan speed detection</li> <li>♦ CPU/System fan speed control</li> </ul> <p>* Whether the CPU/system fan speed control function is supported will depend on the CPU/system cooler you install.</p> |
|  BIOS  | <ul style="list-style-type: none"> <li>♦ 1 x 128 Mbit flash</li> <li>♦ AMI BIOS</li> </ul>   |
|  Environment Ambient Temperature                     | <ul style="list-style-type: none"> <li>♦ Operating temperature: 10°C to 35°C</li> <li>♦ Non-operating temperature: -40°C to 60°C</li> </ul>  |
| Relative Humidity   | <ul style="list-style-type: none"> <li>♦ Operating humidity: 8-80% (non-condensing)</li> <li>♦ Non-operating humidity: 20%-95% (non-condensing)</li> </ul>   |
|  System Dimension                                    | <ul style="list-style-type: none"> <li>♦ 430Wx43Hx710D (mm)</li> </ul>   |
|  Electrical Power Supply                           | <ul style="list-style-type: none"> <li>♦ Hot-swap 800W 200-240VAC at 80 plus platinum</li> <li>♦ Support redundancy function</li> </ul>  |
| * GIGABYTE reserves the right to make any changes to the product specifications and product-related information without prior notice. |  |



# 1-3 System Block Diagram

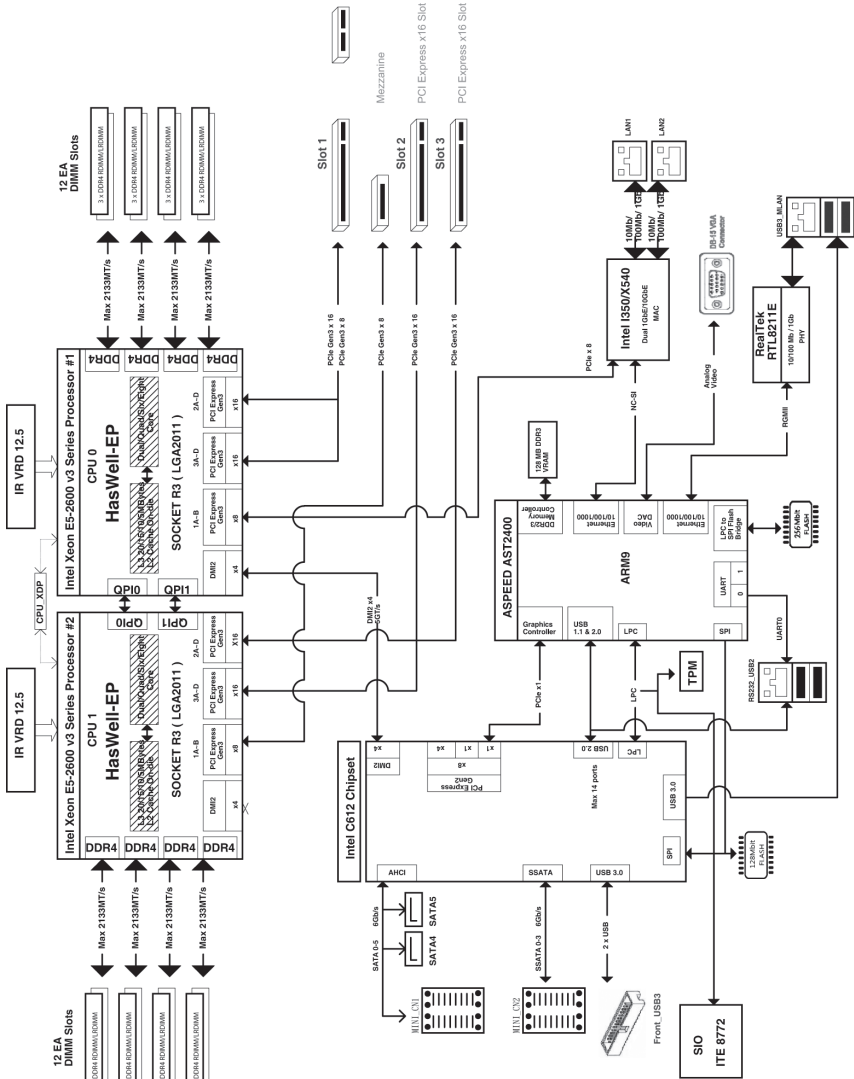



## Chapter 2 System Hardware Installation



### Pre-installation Instructions

Perform the steps below before you open the server or before you remove or replace any component.

- Back up all important system and data files before performing any hardware configuration.
- Turn off the system and all the peripherals connected to it.
- Locate the pin one of the CPU. The CPU cannot be inserted if oriented incorrectly. (Or you may locate the notches on both sides of the CPU and alignment keys on the CPU socket.)
- Apply an even and thin layer of thermal grease on the surface of the CPU.
- Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage of the CPU may occur.
- Set the CPU host frequency in accordance with the CPU specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the standard requirements for the peripherals. If you wish to set the frequency beyond the standard specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.



## 2-1 Removing Chassis Cover




Before you remove or install the system cover

- Make sure the system is not turned on or connected to AC power.

Follow these instructions to remove the system cover:

1. Loosen and remove the screws securing the back cover.
2. Push down the indentation located at the side of the back chassis
3. Loosen and remove the thumbscrews.
4. Slide the cover horizontally to the back and remove the cover in the direction of the arrow.
5. Loosen and remove the screws securing the front top cover.
6. Remove the front top cover from the system.

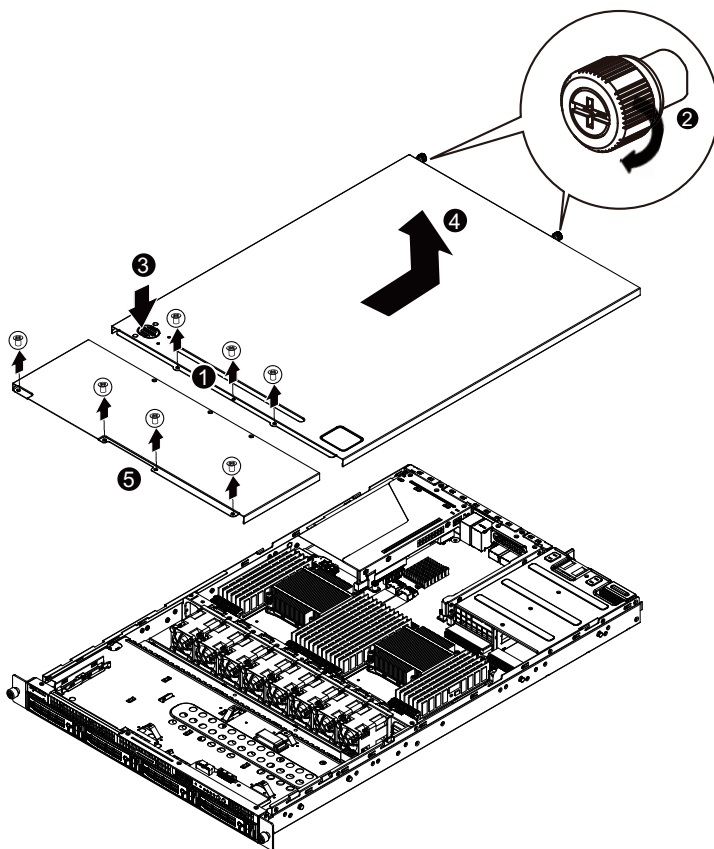




## 2-2 Removing and Installing the Fan Duct

Follow these instructions to remove/install the fan duct:

1. Lift up to remove the fan duct
2. To install the fan duct, align the fan duct with the guiding groove. Push down the fan duct into chassis until its firmly seats

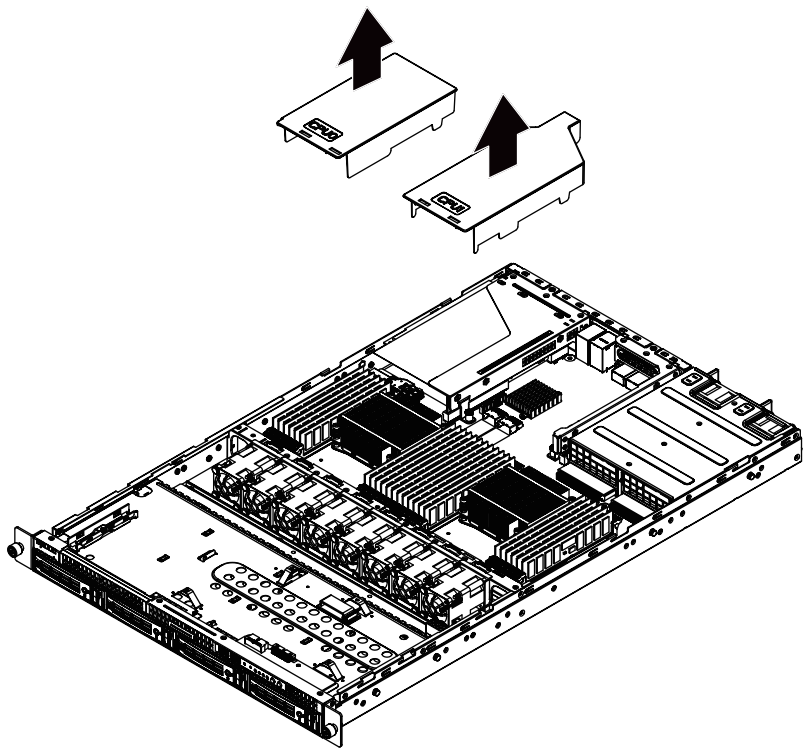



## 2-3 Installing the CPU



Read the following guidelines before you begin to install the CPU:


- Make sure that the motherboard supports the CPU.
- Always turn off the computer and unplug the power cord from the power outlet before installing the CPU to prevent hardware damage.
- Unplug all cables from the power outlets.
- Disconnect all telecommunication cables from their ports.
- Place the system unit on a flat and stable surface.
- Open the system according to the instructions.

### **WARNING!**

Failure to properly turn off the server before you start installing components may cause serious damage. Do not attempt the procedures described in the following sections unless you are a qualified service technician.

**Follow these instructions to install the CPU:**

1. Raise the metal locking lever on the socket.
2. Remove the plastic covering on the CPU socket. Insert the CPU with the correct orientation. The CPU only fits in one orientation.
3. Replace the metal cover.
4. Push the metal lever back into locked position.

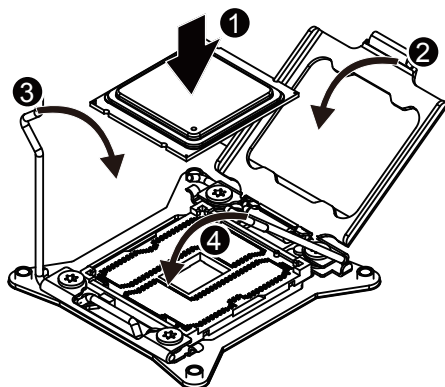




## 2-4 Installing the Heat Sink

Follow these instructions to install the heat sinks:

1. Apply thermal compound evenly on the top of the CPU. Remove the protective cover from the underside of the heat sink.
2. Place the heat sink(s) on top of the CPU.
3. Tighten the four positioning screws.

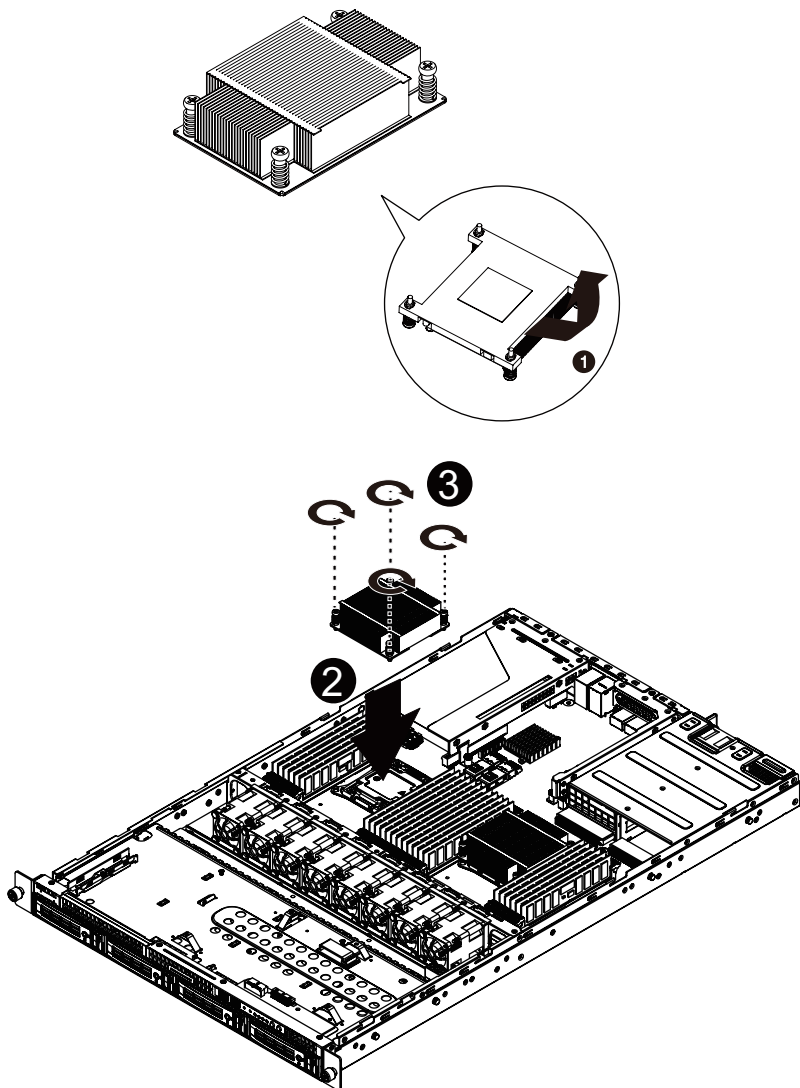



## 2-5 Installing the Memory



Read the following guidelines before you begin to install the memory:

- Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.
- Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
- Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

### 2-5-1 Four Channel Memory Configuration

This motherboard provides 24 DDR4 memory sockets and supports Four Channel Technology. After the memory is installed, the BIOS will automatically detect the specifications and capacity of the memory. Enabling Four Channel memory mode will be four times of the original memory bandwidth.


The four DDR4 memory sockets are divided into four channels each channel has two memory sockets as following:

Channel 1: DIMM\_P0\_A0/DIMM\_P0\_A1/DIMM\_P0\_A2 (For primary CPU);  
DIMM\_P1\_E0/DIMM\_P1\_E1/DIMM\_P1\_E2 (For secondary CPU)

Channel 2: DIMM\_P0\_B0/DIMM\_P0\_B1/DIMM\_P0\_B2 (For primary CPU);  
DIMM\_P1\_F0/DIMM\_P1\_F1/DIMM\_P1\_F (For secondary CPU)

Channel 3: DIMM\_P0\_C0/DIMM\_P0\_C1/DIMM\_P0\_C2 (For primary CPU);  
DIMM\_P1\_G0/DIMM\_P1\_G1/DIMM\_P1\_G2 (For secondary CPU)

Channel 4: DIMM\_P0\_D0/DIMM\_P0\_D1/DIMM\_P0\_D2 (For primary CPU);  
DIMM\_P1\_H0/DIMM\_P1\_H1/DIMM\_P1\_H2 (For secondary CPU)

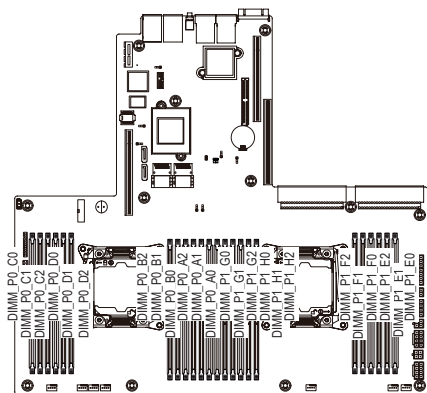



## 2-5-2 Installing a Memory




Before installing a memory module, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the memory module.

Be sure to install DDR4 DIMMs on this motherboard.

Follow these instructions to install the Memory:

1. Insert the DIMM memory module vertically into the DIMM slot, and push it down.
2. Close the plastic clip at both edges of the DIMM slots to lock the DIMM module.
3. Reverse the installation steps when you want to remove the DIMM module.

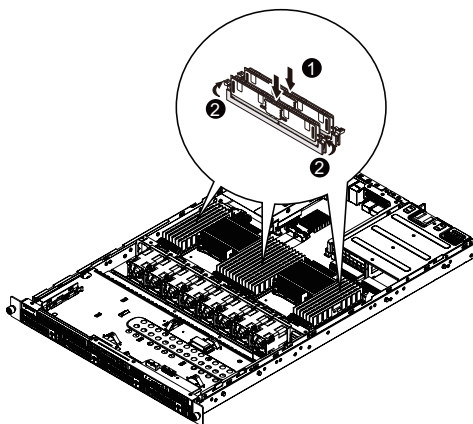

## 2-5-3 DIMM Population Table

| Type       | Ranks Per DIMM and Data Width | Speed (MT/s);<br>Slot Per Channel (SPC) and DIMM Per Channel (DPC) |                    |      |                    |      |      |
|------------|-------------------------------|--|--------------------|------|--------------------|------|------|
|            |                               | 1 Slot Per Channel   | 2 Slot Per Channel |      | 3 Slot Per Channel |      |      |
|            |                               | 1DPC   | 1DPC               | 2DPC | 1DPC               | 2DPC | 3DPC |
| RDIMM      | SRx4                          | 2400   | 2400               | 2133 | 2400               | 2133 | 1600 |
| RDIMM      | SRx8                          | 2400   | 2400               | 2133 | 2400               | 2133 | 1600 |
| RDIMM      | DRx8                          | 2400   | 2400               | 2133 | 2400               | 2133 | 1600 |
| RDIMM      | DRx4                          | 2400   | 2400               | 2133 | 2400               | 2133 | 1600 |
| LRDIMM     | QRx4                          | 2400   | 2400               | 2400 | 2400               | 2400 | 1866 |
| LRDIMM 3DS | 8Rx4                          | 2400   | 2400               | 2400 | 2400               | 2400 | 1866 |



### NOTE!

DDR4 2400MHz is only available on Intel Xeon® E5-2600 V4 processor.



When only one DIMM is used, it must be populated in memory slot0 first.

Memory populated sequence must be followed with slot0/slot1/slot2.

System will not boot normally with incorrect populated sequence.



## 2-6 Installing the PCI Expansion Card



- Voltages can be present within the server whenever an AC power source is connected. This voltage is present even when the main power switch is in the off position. Ensure that the system is powered-down and all power sources have been disconnected from the server prior to installing a PCI card.


Failure to observe these warnings could result in personal injury or damage to equipment.






- The PCI riser assembly does not include a riser card or any cabling as standard. To install a PCI card, a riser card must be installed.

### Follow these instructions to PCI Expansion card:

1. Remove the securing screw on the riser bracket.
2. Remove the securing special screw on the riser bracket.
3. Lift up the riser bracket out of system.
4. Loosen and remove the bracket securing screw.
5. Orient the PCI-E card with the riser guide slot and push in the direction of the arrow until the PCI-E card sits in the PCI card connector.
6. Secure the PCI-E card with the screw.
7. Reverse the previous steps to install the riser bracket.

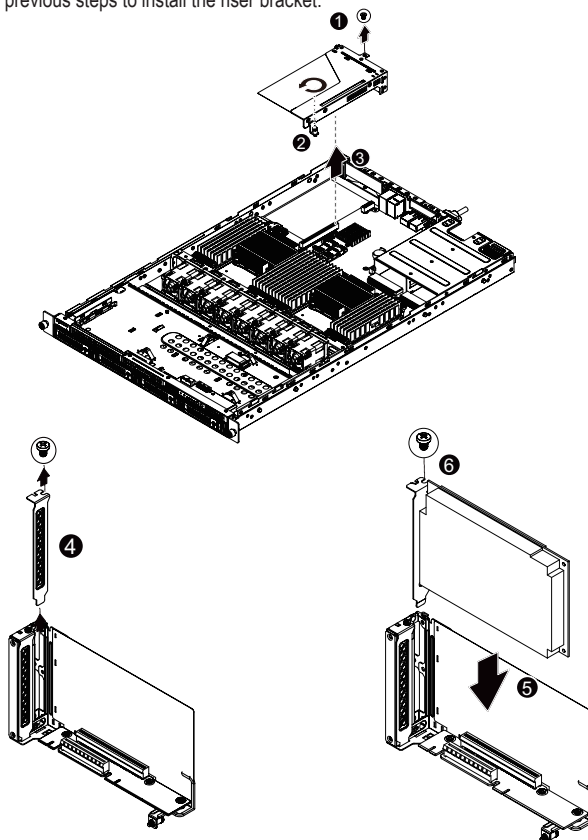



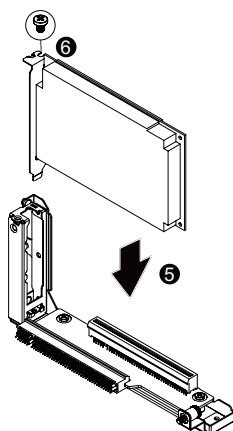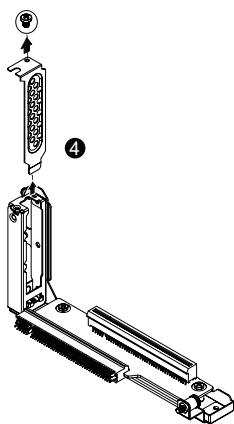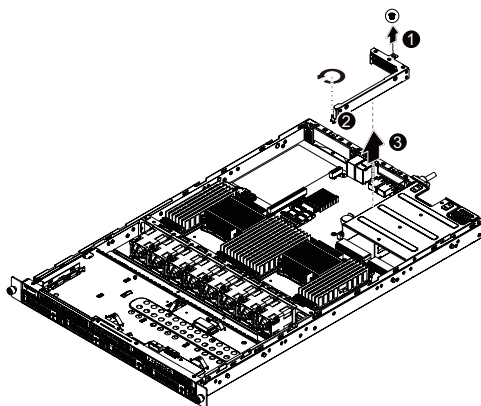




## 2-6-1 Installing Add-on Card (Optional)

Follow these instructions to install Add-on card:

1. Remove the riser bracket from the system following the steps outlined in **2-6 Installing the PCI Expansion Card**.
2. Remove the PCI bracket and mini PCI card.
3. Insert the dedicated rear bracket and secure with screw.
4. Engage the support bracket with mezzanine card and secure with screws.
5. Attach the interposer card to the selected slot (PCIE\_4).
6. Insert the add-on card into the interposer card. Make sure that the card is properly seated.
7. Tighten the thumbscrew.

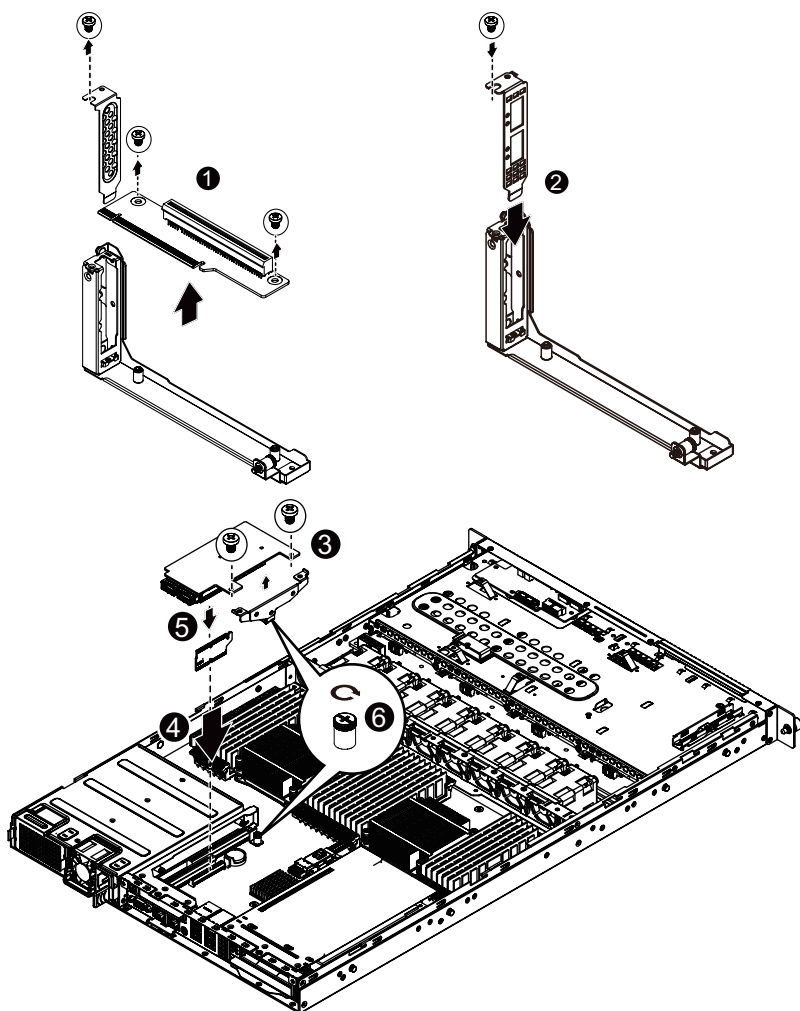



# 2-7 Installing the Hard Disk Drive



Read the following guidelines before you begin to install the Hard disk drive:

- Take note of the drive tray orientation before sliding it out.
- The tray will not fit back into the bay if inserted incorrectly.
- Make sure that the HDD is connected to the HDD connector on the backplane.

Follow these instructions to install the Hard disk drive:


1. Press the release button.
2. Pull the locking lever to remove the HDD tray. Remove the HDD dummy cover.
3. Slide hard disk into blank.
4. Secure the hard drive to the tray with four (4) screws as shown. Do not over tighten the screws.
5. Slide the blank into the bay until it locks into place.




## CAUTION!

We strongly recommend using enterprise level hard disk drive in Gigabyte server system. For more information of recommended HDDs, please visit Gigabyte website: <https://www.gigabyte.com> and search for the specific product QVL from **Support & Downloads**.

**R180-F34 (3.5" HDDs):**

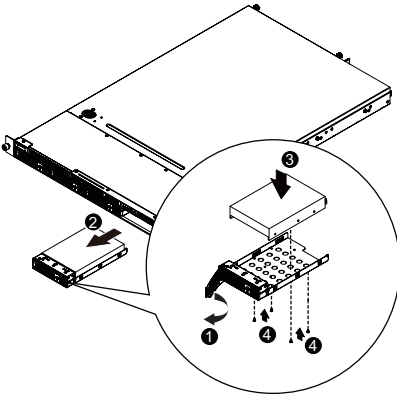

**R180-F28 (2.5" HDDs):**

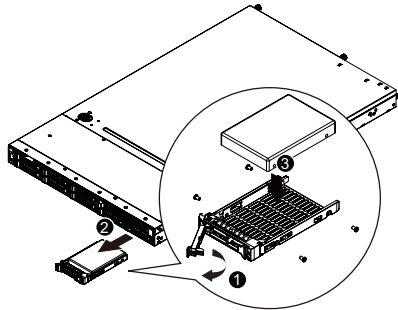

## CAUTION!

On Motherboard PCB rev 1.1, all SATA ports supply built-in power at pin 7. PCB rev 1.0 requires an external power cable, you can purchase from Gigabyte with the part no. **25CRI-400001-B0R**.




| Pin No. | Definition |
|---------|------------|
| 1       | GND        |
| 2       | TXP        |
| 3       | TXN        |
| 4       | GND        |
| 5       | RXN        |
| 6       | RXP        |
| 7       | P5V        |



## 2-8 Replacing the FAN Assembly

Follow these instructions to replace the fan assembly:

1. Remove the fan duct from the system following the steps outlined in **2-2 Removing and Installing the Fan Duct**.
2. Remove the fan assemble pulling the rear edge in the direction of the arrow.
3. Lift up the fan assembly from the chassis.
4. Reverse the previous steps to install the replacement fan assembly.


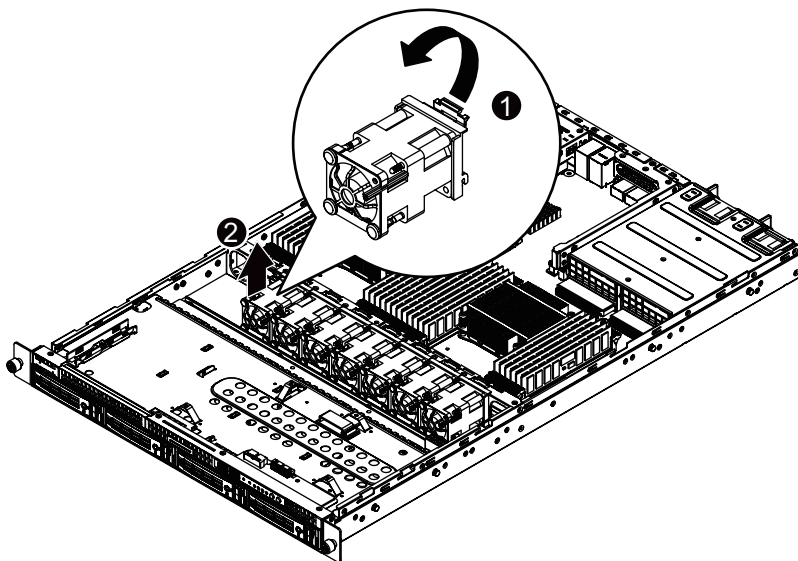




## 2-9 Replacing the Power Supply

Follow these instructions to replace the power supply:

1. Disconnect the three power cables.
2. Remove the four screws securing on the power supply.
3. Lift the power supply out of the chassis in the direction of the arrow.
4. Insert the replacement power supply firmly into the chassis. Connect the AC power cord to the replacement power supply.

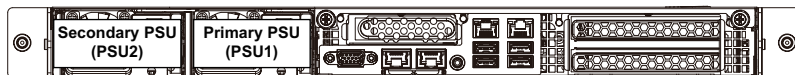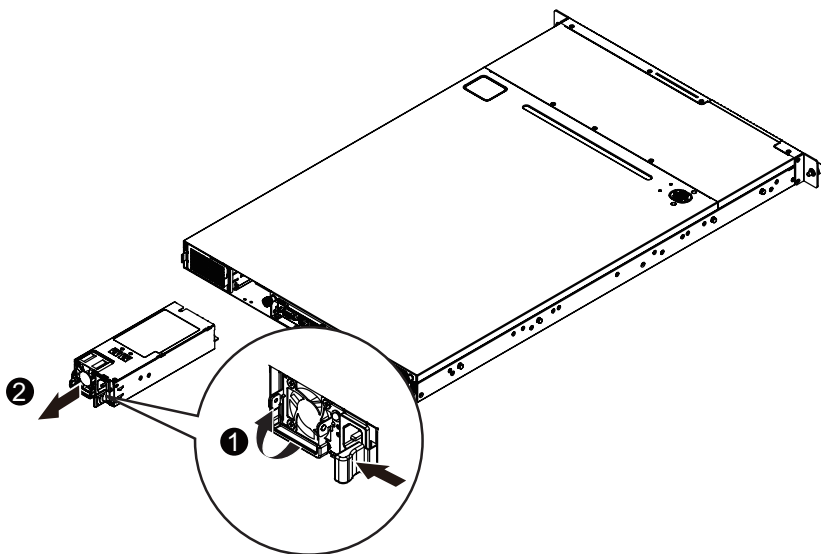

### CAUTION!





- Please see the illustrated for installtion sequence.



## 2-10 Installing Rail Into A Rack

Follow these instructions to install the rail into a rack:

1. Release and detach the inner rail from the slide.
2. Attach the unit to the inner rail.
3. Fix the outer rail/bracket assembly to the frame.
4. Insert the unit to complete the installation.

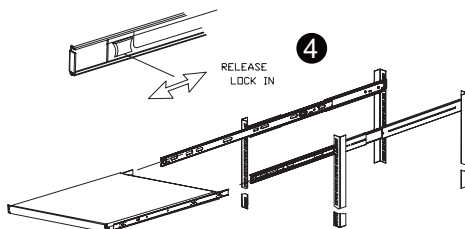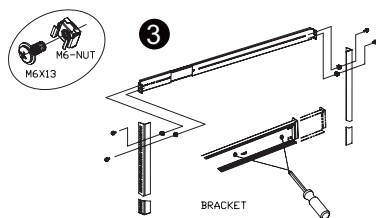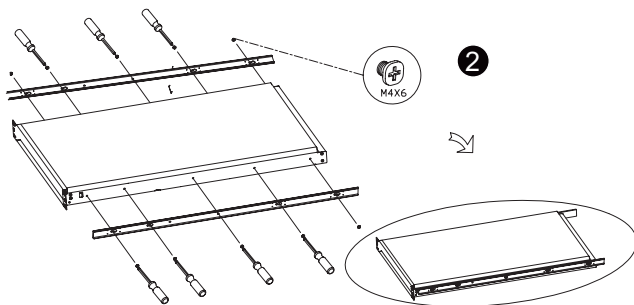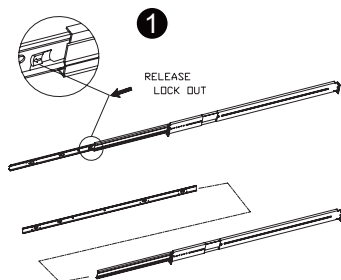




## Chapter 3 System Appearance


### 3-1 Front View

R180-F34:

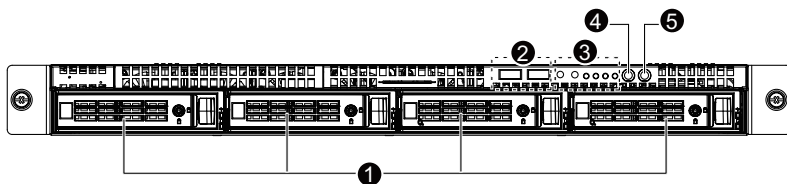

| No. | Decription                   |
|-----|------------------------------|
| 1.  | HDD bays                     |
| 2.  | Front USB 3.0 ports          |
| 3.  | Front Panel LEDs and buttons |
| 4.  | ID button and LED            |
| 5.  | Power button and LED         |

R180-F28:

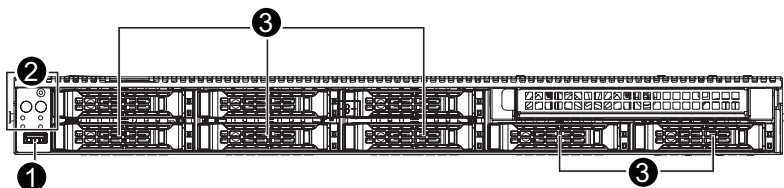


| No. | Decription                   |
|-----|------------------------------|
| 1.  | Front USB 3.0 ports          |
| 2.  | Front Panel LEDs and buttons |
| 3.  | HDD bays                     |



• Please Go to Chapter 3-3 Front Panel LED and Buttons for detail description of function LEDs.



## 3-2 Rear View

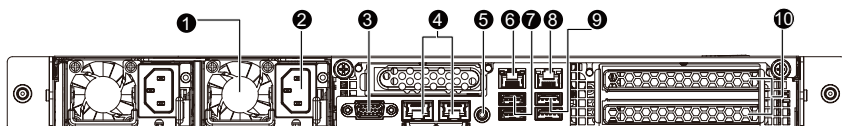


| No. | Decription                             |
|-----|--|
| 1.  | Power supply fan                       |
| 2.  | Power supply module cord socket        |
| 3.  | VGA port                               |
| 4.  | RJ-45 LAN ports                        |
| 5.  | ID switch button                       |
| 6.  | RJ-45 COM port                         |
| 7.  | USB 2.0 ports                          |
| 8.  | 10/100/1000 Server management LAN port |
| 9.  | USB 3.0 ports                          |
| 10. | Low-profile riser card bay             |



### 3-3 Front Panel LED and Buttons

R180-F34:

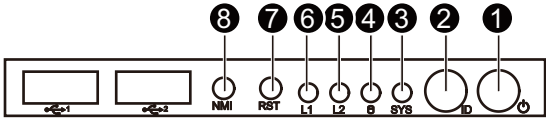


| No. | Name                 | Color | Status   | Critical Event | Description   |
|-----|----------------------|-------|----------|----------------|---|
| 1.  | Power button and LED | Green | Solid On | N/A            | System is powered on  |
|     |                      | Green | Blink    | N/A            | System is in ACPI S1 state (sleep mode)   |
|     |                      | N/A   | Off      | N/A            | <ul style="list-style-type: none"> <li>System is not powered on or in ACPI S5 state (power off)</li> <li>System is in ACPI S4 state (hibernate mode)</li> </ul>   |
|     |                      |       |          |                |   |
| 2.  | ID Button and LED    | Blue  | Solid On | N/A            | System identification is active.  |
|     |                      | N/A   | Off      | N/A            | System identification is disabled.  |
| 3.  | System Status LED    | Green | Solid On | N/A            | System is operating normally.   |
|     |                      | Amber | Solid On | Yes            | Critical condition, may indicate the following: <ul style="list-style-type: none"> <li>Power module failure</li> <li>System fan failure</li> <li>Power supply voltage issue</li> <li>System temperature/voltage issue</li> <li>Current error/Processor error/Critical memory error</li> </ul> |
|     |                      |       | Blink    | N/A            | Non-critical condition, may indicate the following: <ul style="list-style-type: none"> <li>Redundant power module failure (AC lost)</li> <li>Temperature and voltage issue</li> <li>Current error</li> <li>Chassis intrusion</li> <li>Event Logs almost full</li> </ul>                       |
|     |                      | N/A   | Off      | N/A            | System is not ready.<br>May indicate the following: <ul style="list-style-type: none"> <li>POST error</li> <li>NMI error</li> <li>Processor or terminator missing</li> </ul>  |



|    |                          |                 |          |     |   |
|----|--------------------------|-----------------|----------|-----|---|
| 4. | HDD Status LED           | Green           | On       | N/A | HDD locate  |
|    |                          |                 | Blink    | N/A | HDD access  |
|    |                          | Amber           | On       | N/A | HDD fault   |
|    |                          | Green/<br>Amber | Blink    | N/A | HDD rebuilding  |
|    |                          | N/A             | Off      | N/A | <ul style="list-style-type: none"> <li>No HDD access</li> <li>No HDD fault</li> </ul>   |
| 5. | LA2 Active/<br>Link LED  | Green           | Solid On | N/A | Link between system and network or no access  |
|    |                          | Green           | Blink    | N/A | Data transmission or receiving is occurring   |
|    |                          | N/A             | Off      | N/A | No data transmission or receiving is occurring  |
| 6. | LAN1 Active/<br>Link LED | Green           | Solid On | N/A | Link between system and network or no access  |
|    |                          | Green           | Blink    | N/A | Data transmission or receiving is occurring   |
|    |                          | N/A             | Off      | N/A | No data transmission or receiving is occurring  |
| 7. | Reset Button             |                 |          |     | Press the button to reset the system.   |
| 8. | NMI button               |                 |          |     | Press the button server generates a NMI to the processor if the multiple-bit ECC errors occur, which effectively halt the server. |




**R180-F28:**

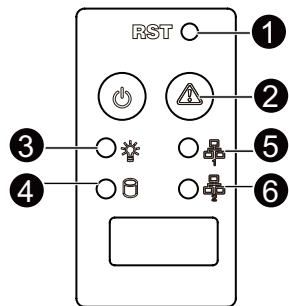

| No. | Name                 | Color       | Status   | Critical Event | Description   |
|-----|----------------------|-------------|----------|----------------|---|
| 1.  | Reset Button         |             |          |                | Press the button to reset the system.   |
| 2.  | ID Button            |             |          |                | Press the button to activate system identification.   |
| 3.  | Power LED            | Green       | Solid On | N/A            | System is powered on  |
|     |                      | Green       | Blink    | N/A            | System is in ACPI S1 state (sleep mode)   |
|     |                      | N/A         | Off      | N/A            | • System is not powered on or in ACPI S5 state (power off)<br>• System is in ACPI S4 state (hibernate mode) |
|     |                      |             |          |                |   |
| 4.  | HDD Status LED       | Green       | On       | N/A            | HDD locate  |
|     |                      |             | Blink    | N/A            | HDD access  |
|     |                      | Amber       | On       | N/A            | HDD fault   |
|     |                      | Green/Amber | Blink    | N/A            | HDD rebuilding  |
|     |                      | N/A         | Off      | N/A            | • No HDD access<br>• No HDD fault   |
|     |                      |             |          |                |   |
| 5.  | LAN1 Active/Link LED | Green       | Solid On | N/A            | Link between system and network or no access  |
|     |                      | Green       | Blink    | N/A            | Data transmission or receiving is occurring   |
|     |                      | N/A         | Off      | N/A            | No data transmission or receiving is occurring  |
| 6.  | LAN2 Active/Link LED | Green       | Solid On | N/A            | Link between system and network or no access  |
|     |                      | Green       | Blink    | N/A            | Data transmission or receiving is occurring   |
|     |                      | N/A         | Off      | N/A            | No data transmission or receiving is occurring  |




3-4 Rear System LAN LEDs

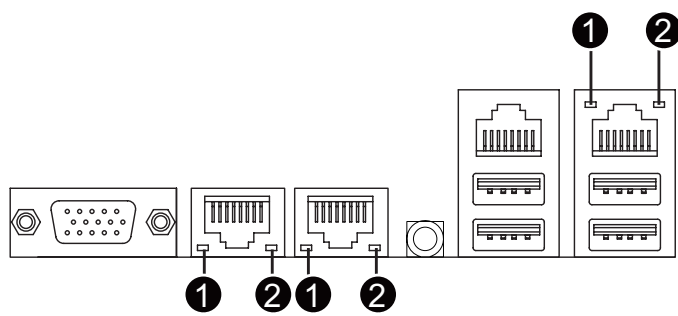

| No. | Name                   | Color  | Status | Description                                    |
|-----|------------------------|--------|--------|--|
| 1.  | 1GbE Speed LED         | Yellow | On     | 1 Gbps data rate                               |
|     |                        | Green  | On     | 100 Mbps data rate                             |
|     |                        | N/A    | Off    | 10 Mbps data rate                              |
| 2.  | 1GbE Link/Activity LED | Green  | On     | Link between system and network or no access   |
|     |                        |        | Blink  | Data transmission or receiving is occurring    |
|     |                        | N/A    | Off    | No data transmission or receiving is occurring |




### 3-5 Hard Disk Drive LEDs

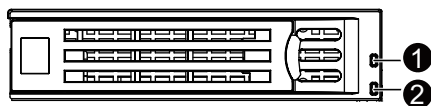

| No | Description                       | Multi Color LEDs |                        |
|----|-----------------------------------|------------------|------------------------|
|    |                                   | LED Active Green | LED Active Amber       |
| 1  | HDD Access                        | Blink            | Off                    |
|    | HDD Locate                        | On               | Off                    |
|    | HDD Failure                       | Off              | On                     |
|    | HDD connected and rebuilding data | Blink            | Blink<br>(Alternative) |
| 2  | Reserve                           |                  |                        |



3-6 Cable Routing

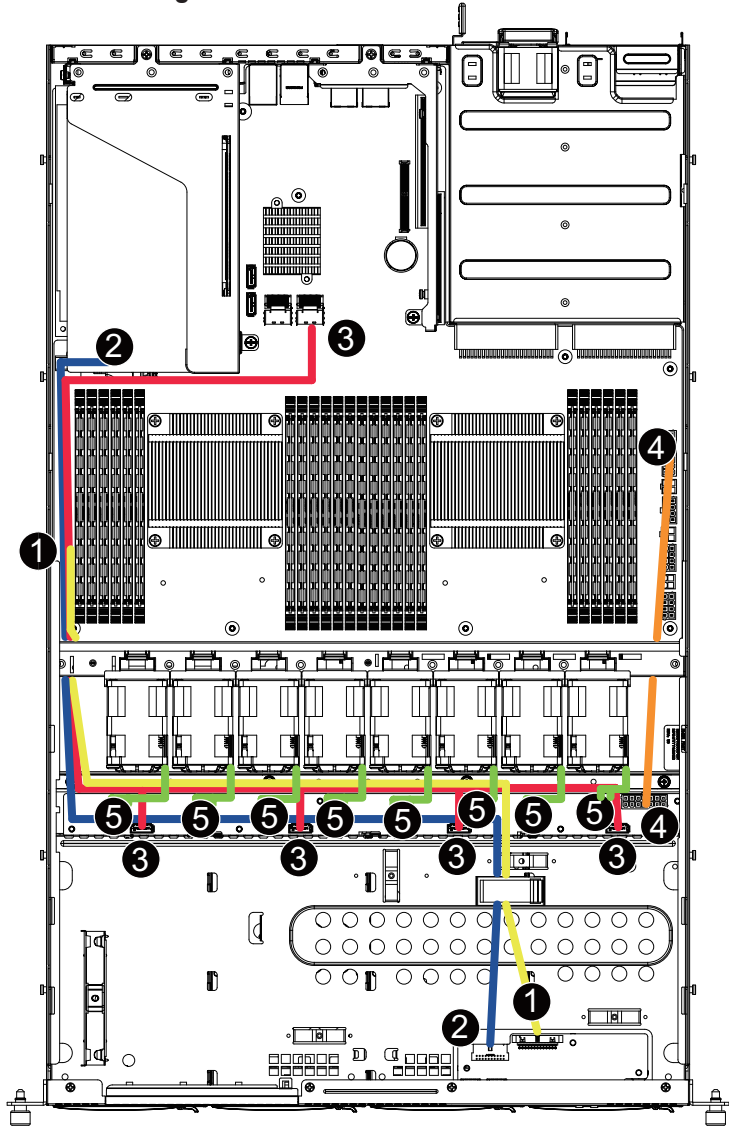


| No. | Suggest Cable                      | No. | Suggest Cable                    |
|-----|------------------------------------|-----|----------------------------------|
| 1.  | Front switch cable/Front LED cable | 2.  | Front panel USB 3.0 cable        |
| 3.  | Mini SAS cable                     | 4.  | HDD back plane board power cable |
| 5.  | System fan power cable             | 6.  | System fan power cable           |



# Chapter 4 Motherboard Components

## 4-1 MD90-FS0 Motherboard Components

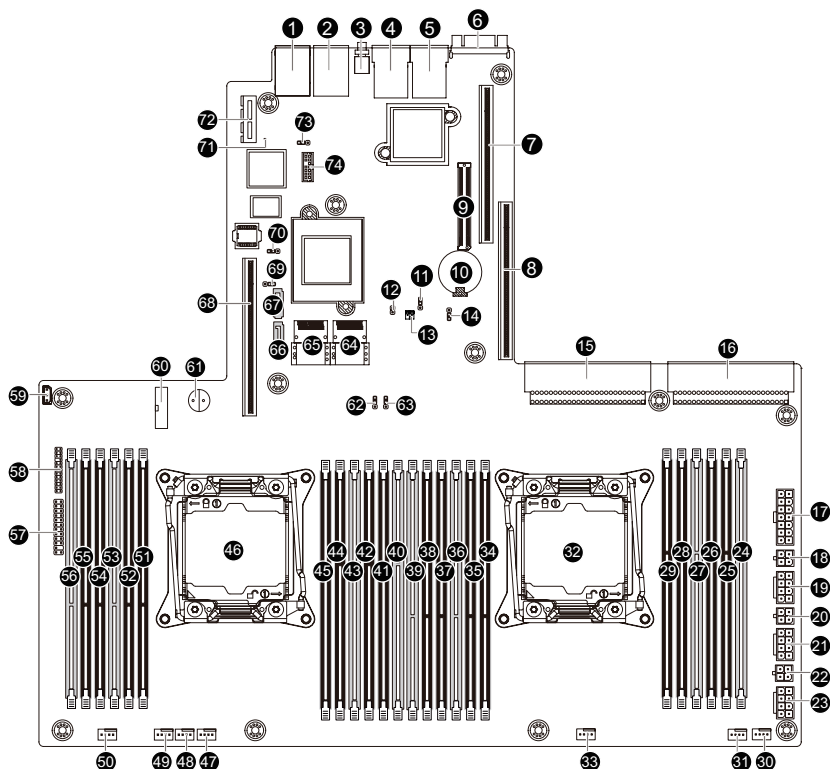

| Item | Code        | Description  |
|------|-------------|--|
| 1    | USB3_MLAN   | BMC Management LAN port (top) / USB 3.0 ports (bottom) |
| 2    | COM1_USB2   | RJ45 COM port (top) / USB 2.0 ports (bottom)/          |
| 3    | SW_ID       | ID switch button                                       |
| 4    | LAN1        | LAN1 port  |
| 5    | LAN2        | LAN2 port  |
| 6    | VGA         | VGA port   |
| 7    | RISER_SLOT3 | PCI Express x16 slot                                   |
| 8    | RISER_SLOT2 | PCI Express x16  |
| 9    | PCIE_4      | PCI Express x16 slot (Proprietary slot)                |
| 10   | BAT         | Battery socket   |
| 11   | S3_MASK     | S3 Power On Select jumper                              |
| 12   | CASE_OPEN   | Case open intrusion alert header                       |




|    |            |   |
|----|------------|---|
| 13 | SW_RAID    | Intel/LSI Software RAID Key jumper      |
| 14 | CLR_CMOS   | Clear CMOS jumper                       |
| 15 | PSU1       | Hot-plug PSU module connector#1         |
| 16 | PSU2       | Hot-plug PSU module connector#1         |
| 17 | ATX1       | 14 pin main power connector             |
| 18 | 12V_GPU3_2 | 4 pin 12V power connector               |
| 19 | 12V_GPU3_1 | 8 pin power connector                   |
| 20 | 12V_GPU2_2 | 4 pin 12V power connector               |
| 21 | 12V_GPU2_1 | 8 pin power connector                   |
| 22 | 12V_GPU1_2 | 4 pin 12V power connector               |
| 23 | 12V_GPU1_1 | 8 pin power connector                   |
| 24 | DIMM_P1_E0 | Channel 1 slot 0 (for secondary CPU)    |
| 25 | DIMM_P1_E1 | Channel 1 slot 1 (for secondary CPU)    |
| 26 | DIMM_P1_E2 | Channel 1 slot 2 (for secondary CPU)    |
| 27 | DIMM_P1_F0 | Channel 2 slot 0 (for secondary CPU)    |
| 28 | DIMM_P1_F1 | Channel 2 slot 1 (for secondary CPU)    |
| 29 | DIMM_P1_F2 | Channel 2 slot 2 (for secondary CPU)    |
| 30 | SYS_FAN5   | System fan connector#5                  |
| 31 | SYS_FAN4   | System fan connector#4                  |
| 32 | CPU1       | Intel LGA2011 Socket R3 (Secondary CPU) |
| 33 | CPU1_FAN   | CPU1 fan connector (for Secondary CPU)  |
| 34 | DIMM_P1_H2 | Channel 3 slot 2 (for secondary CPU)    |
| 35 | DIMM_P1_H1 | Channel 3 slot 1 (for secondary CPU)    |
| 36 | DIMM_P1_H0 | Channel 3 slot 0 (for secondary CPU)    |
| 37 | DIMM_P1_G2 | Channel 4 slot 2 (for secondary CPU)    |
| 38 | DIMM_P1_G1 | Channel 4 slot 1 (for secondary CPU)    |
| 39 | DIMM_P1_G0 | Channel 4 slot 0 (for secondary CPU)    |
| 40 | DIMM_P0_A0 | Channel 4 slot 0 (for primary CPU)      |
| 41 | DIMM_P0_A1 | Channel 1 slot 1 (for primary CPU)      |
| 42 | DIMM_P0_A2 | Channel 1 slot 2 (for primary CPU)      |
| 43 | DIMM_P0_B0 | Channel 2 slot 0 (for primary CPU)      |
| 44 | DIMM_P0_B1 | Channel 2 slot 1 (for primary CPU)      |
| 45 | DIMM_P0_B2 | Channel 2 slot 2 (for primary CPU)      |
| 46 | CPU0       | Intel LGA2011 Socket R3 (Primary CPU)   |
| 47 | CPU0_FAN   | CPU0 fan connector (for Primary CPU)    |
| 48 | SYS_FAN3   | System fan connector#3                  |
| 49 | SYS_FAN2   | System fan connector#2                  |
| 50 | SYS_FAN1   | System fan connector#1                  |
| 51 | DIMM_P0_D2 | Channel 4 slot 2 (for primary CPU)      |
| 52 | DIMM_P0_D1 | Channel 4 slot 1 (for primary CPU)      |
| 53 | DIMM_P0_D0 | Channel 4 slot 0 (for primary CPU)      |
| 54 | DIMM_P0_C2 | Channel 3 slot 2 (for primary CPU)      |
| 55 | DIMM_P0_C1 | Channel 3 slot 1 (for primary CPU)      |
| 56 | DIMM_P0_C0 | Channel 3 slot 0 (for primary CPU)      |



|    |           |   |
|----|-----------|---|
| 57 | FP_1      | Front panel header                              |
| 58 | BP_1      | HDD back plane board header                     |
| 59 | IPMB      | IPMB connector                                  |
| 60 | F_USB3    | USB 3.0 header                                  |
| 61 | BUZZER1   | Buzzer  |
| 62 | PCH_ME    | ME recovery jumper                              |
| 63 | ME_UPDATE | ME update jumper                                |
| 64 | MINI_CN1  | Mini-SAS cable connector#1 supports SATA3 6Gb/s |
| 65 | MINI_CN2  | Mini-SAS cable connector#2 supports SATA3 6Gb/s |
| 66 | SATA5     | SATA3 6Gb/s connector                           |
| 67 | SATA4     | SATA3 6Gb/s connector                           |
| 68 | RISER_1_2 | PCI Express x16 slot (Gigabyte extension slot)  |
| 69 | BIOS_PWD  | Clearing Supervisor Password jumper             |
| 70 | BIOS_RCVR | BIOS recovery jumper                            |
| 71 | LED_BMC   | BMC firmware readiness LED                      |
| 72 | RISER_1_1 | PCI Express x4 slot (Gigabyte extension slot)   |
| 73 | BMC_FRB   | Force to Stop FRB Timer jumper                  |
| 74 | TPM       | TPM module connector                            |



## 4-2 Jumper Setting

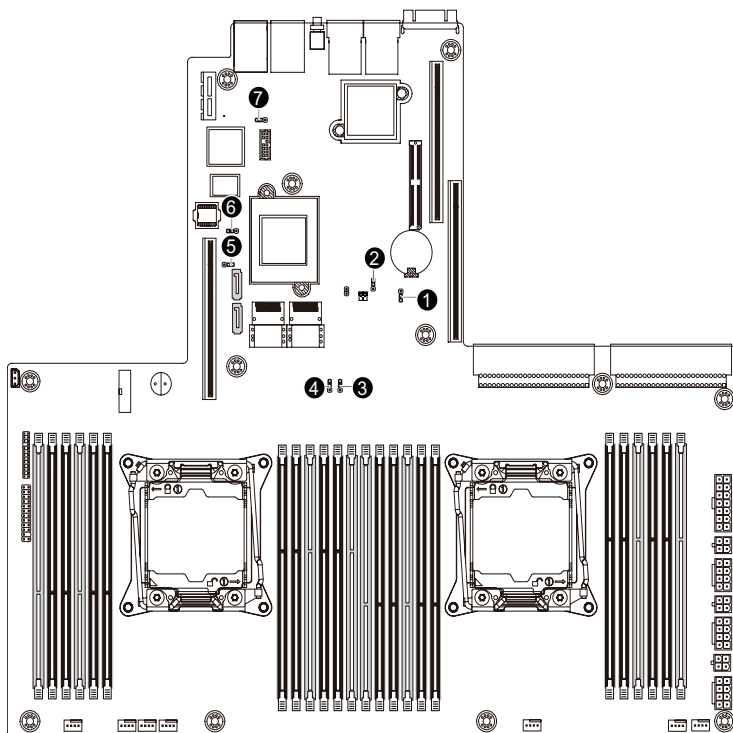

| No. | Jumper Code  | Jumper Setting   |
|-----|--|--|
| 1.  | CLR_CMOS<br>(Clearing CMOS Jumper)                   | 1-2 Close: Normal operation (Default setting)              |
|     |  | 2-3 Close: Clear CMOS data                                 |
| 2.  | S3_MASK (S3 Power<br>On Select Jumper)               | 1-2 Close: Stop an initial power on when BMC is not ready. |
|     |  | 2-3 Close: Keep initial power on. (Default setting)        |
| 3.  | ME_UPDATE<br>(ME Update Jumper)                      | 1-2 Close: Normal operation (Default setting)              |
|     |  | 2-3 Close: ME recovery mode.                               |
| 4.  | PCH_ME<br>(ME Recovery Jumper)                       | 1-2 Close: Normal operation (Default setting)              |
|     |  | 2-3 Close: ME recovery mode.                               |
| 5.  | BIOS_PWD<br>(Clearing Supervisor<br>Password Jumper) | 1-2 Close: Normal operation. (Default setting)             |
|     |  | 2-3 Close: Skip supervisor password.                       |
| 6.  | BIOS_RCVR<br>(BIOS Recovery Jumper)                  | 1-2 Close: Normal operation (Default setting)              |
|     |  | 2-3 Close: BIOS recovery mode.                             |
| 7.  | BMC_FRB<br>(Force to Stop FRB<br>Timer Jumper)       | 1-2 Close: Normal operation (Default setting)              |
|     |  | 2-3 Close: Force to Stop FRB Timer                         |



## Chapter 5 BIOS Setup

BIOS (Basic Input and Output System) records hardware parameters of the system in the EFI on the motherboard. Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters and loading operating system, etc. BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features. When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS.

To access the BIOS Setup program, press the <F2> key during the POST when the power is turned on.



- BIOS flashing is potentially risky, if you do not encounter problems of using the current BIOS version, it is recommended that you don't flash the BIOS. To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction.
- It is recommended that you not alter the default settings (unless you need to) to prevent system instability or other unexpected results. Inadequately altering the settings may result in system's failure to boot. If this occurs, try to clear the CMOS values and reset the board to default values. (Refer to the **Exit** section in this chapter or introductions of the battery/clearing CMOS jumper in Chapter 1 for how to clear the CMOS values.)

### BIOS Setup Program Function Keys

|          |  |
|----------|--|
| <<-><->> | Move the selection bar to select the screen                              |
| <↑><↓>   | Move the selection bar to select an item                                 |
| <+>      | Increase the numeric value or make changes                               |
| <->      | Decrease the numeric value or make changes                               |
| <Enter>  | Execute command or enter the submenu                                     |
| <Esc>    | Main Menu: Exit the BIOS Setup program<br>Submenus: Exit current submenu |
| <F1>     | Show descriptions of general help  |
| <F3>     | Restore the previous BIOS settings for the current submenus              |
| <F9>     | Load the Optimized BIOS default settings for the current submenus        |
| <F10>    | Save all the changes and exit the BIOS Setup program                     |



■ **Main**

This setup page includes all the items in standard compatible BIOS.

■ **Advanced**

This setup page includes all the items of AMI BIOS special enhanced features.

(ex: Auto detect fan and temperature status, automatically configure hard disk parameters.)

■ **Intel RC Setup**

This setup page includes all the submenu options for configuring the function of processor, network, North Bridge, South Bridge, and System event logs.

■ **Server Management**

Server additional features enabled/disabled setup menus.

■ **Security**

Change, set, or disable supervisor and user password. Configuration supervisor password allows you to restrict access to the system and BIOS Setup.

A supervisor password allows you to make changes in BIOS Setup.

A user password only allows you to view the BIOS settings but not to make changes.

■ **Boot**

This setup page provides items for configuration of boot sequence.

■ **Exit**

Save all the changes made in the BIOS Setup program to the CMOS and exit BIOS Setup. (Pressing <F10> can also carry out this task.)

Abandon all changes and the previous settings remain in effect. Pressing <Y> to the confirmation message will exit BIOS Setup. (Pressing <Esc> can also carry out this task.)



## 5-1 The Main Menu

Once you enter the BIOS Setup program, the Main Menu (as shown below) appears on the screen. Use arrow keys to move among the items and press <Enter> to accept or enter other sub-menu.

### Main Menu Help


The on-screen description of a highlighted setup option is displayed on the bottom line of the Main Menu.

### Submenu Help


While in a submenu, press <F1> to display a help screen (General Help) of function keys available for the menu. Press <Esc> to exit the help screen. Help for each item is in the Item Help block on the right side of the submenu.



- When the system is not stable as usual, select the **Restore Defaults** item to set your system to its defaults.
- The BIOS Setup menus described in this chapter are for reference only and may differ by BIOS version.

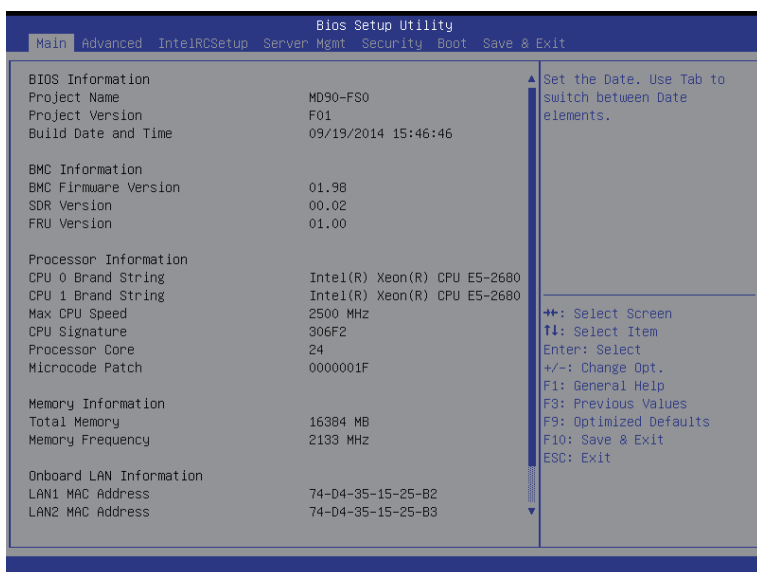



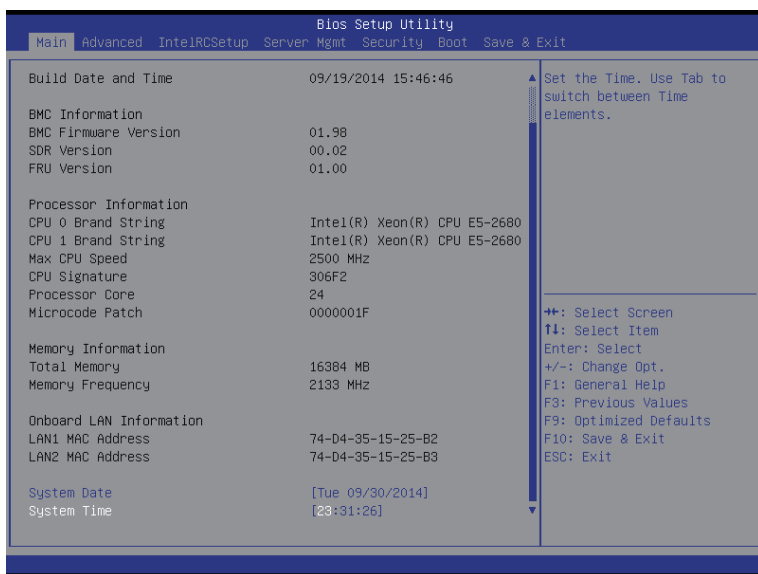

## 🔑 BIOS Information

### 🔑 Project Name

Display the project name information.

### 🔑 Project Version

Display version number of the BIOS setup utility.

### 🔑 BIOS Build Date and Time

Displays the date and time when the BIOS setup utility was created.

### 🔑 BMC Information

### 🔑 BMC Firmware Version

Display BMC firmware version information.

### 🔑 SDR Version

Display the SDR version information.

### 🔑 FRU Version

Display the FRU version information.

### 🔑 Processor Information

### 🔑 CPU Brand String/Max CPU Speed/CPU Signature/Processors Core/Microcode Patch

Displays the technical specifications for the installed processor.

### 🔑 Memory Information

### 🔑 Total Memory

Display the total memory size of the installed memory.

### 🔑 Memory Frequency

Display the frequency information of the installed memory.



☞ **Onboard LAN Information**

☞ **LAN1/LAN2/LAN3/LAN4 MAC Address**

Display LAN1/LAN2/LAN3/LAN4 MAC address information.

☞ **System Date**

Set the date following the weekday-month-day- year format.


☞ **System Time**

Set the system time following the hour-minute- second format.



## 5-2 Advanced Menu

The Advanced menu display submenu options for configuring the function of various hardware components. Select a submenu item, then press Enter to access the related submenu screen.

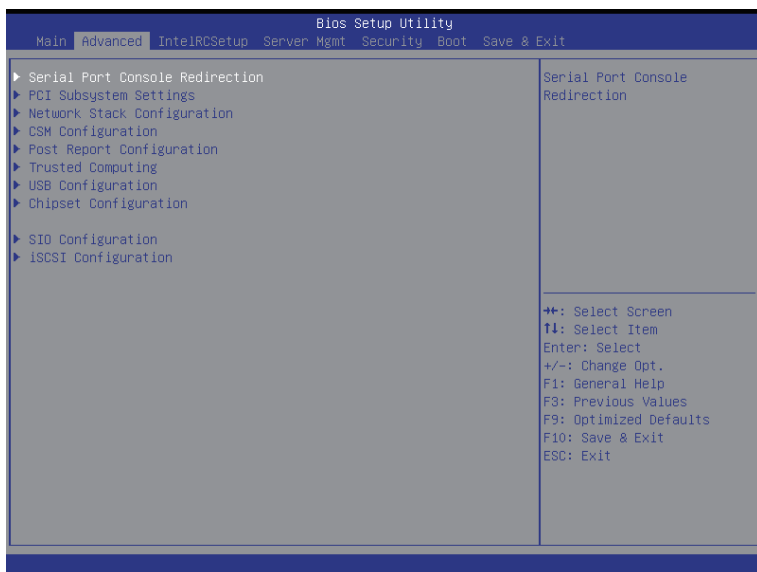




## 5-2-1 Serial Port Console Redirection

| Bios Setup Utility   |  |
|--|--|
| Advanced   |  |
| COM1<br>Console Redirection [Enabled]<br>▶ Console Redirection Settings<br><br>Serial Port for Out-of-Band Management/<br>Windows Emergency Management Services (EMS)<br>Console Redirection [Enabled]<br>▶ Console Redirection Settings | Console Redirection Enable<br>or Disable.<br><br><br><br><br><br><br><br><br>++: Select Screen<br>↑↓: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |

| Bios Setup Utility  |   |
|---|---|
| Advanced  |   |
| COM1<br>Console Redirection Settings<br><br>Terminal Type [ANSI]<br>Bits per second [115200]<br>Data Bits [8]<br>Parity [None]<br>Stop Bits [1]<br>Flow Control [None]<br>VT-UTF8 Combo Key Support [Enabled]<br>Recorder Mode [Disabled]<br>Resolution 100x31 [Enabled]<br>Legacy OS Redirection Resolution [80x24]<br>Putty KeyPad [VT100]<br>Redirection After BIOS POST [Always Enable] | Emulation: ANSI: Extended<br>ASCII char set. VT100:<br>ASCII char set. VT100+:<br>Extends VT100 to support<br>color, function keys, etc.<br>VT-UTF8: Uses UTF8<br>encoding to map Unicode<br>chars onto 1 or more bytes.<br><br><br><br><br><br><br><br><br>++: Select Screen<br>↑↓: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |



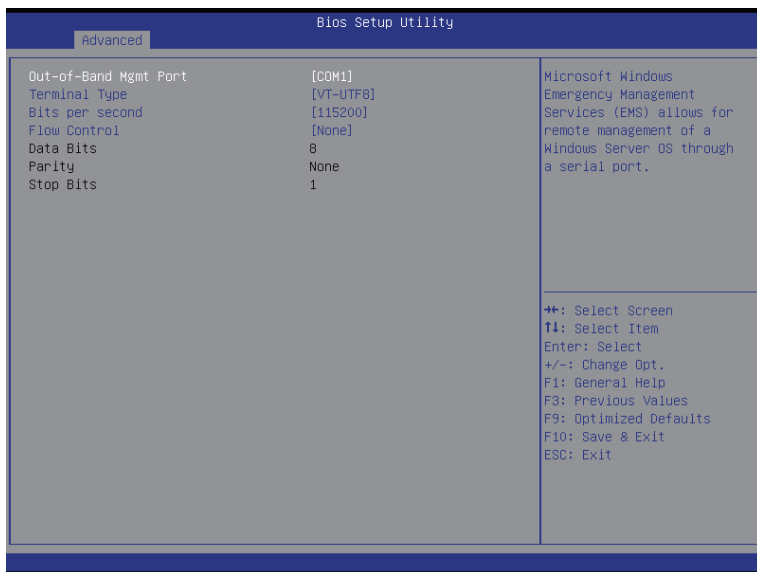

## 🔑 COM1/Serial Port for Out-of-Band Management EMS Console Redirection Settings

### 🔑 Console Redirection <sup>(Note)</sup>

Select whether to enable console redirection for specified device. Console redirection enables users to manage the system from a remote location.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### 🔑 Console Redirection Settings

#### 🔑 Terminal Type

Select a terminal type to be used for console redirection.

Options available: VT100/VT100+/ANSI /VT-UTF8. Default setting is **ANSI**.

#### 🔑 Bits per second

Select the baud rate for console redirection.

Options available: 9600/19200/38400/57600/115200. Default setting is **115200**.

#### 🔑 Data Bits

Select the data bits for console redirection.

Options available: 7/8. Default setting is **8**.

#### 🔑 Parity

A parity bit can be sent with the data bits to detect some transmission errors.

Even: parity bit is 0 if the num of 1's in the data bits is even.

Odd: parity bit is 0 if num of 1's in the data bits is odd.

Mark: parity bit is always 1. Space: Parity bit is always 0.

Mark and Space Parity do not allow for error detection.

(Note) Advanced items prompt when this item is defined.



Options available: None/Even/Odd/Mark/Space. Default setting is **None**.

#### ☞ **Stop Bits**

Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.

Options available: 1/2. Default setting is **1**.

#### ☞ **Flow Control**

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

Options available: None/Hardware RTS/CTS. Default setting is **None**.

#### ☞ **VT-UTF8 Combo Key Support** (Note)

Enable/Disable VT-UTF8 Combo Key Support.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ **Recorder Mode** (Note)

When this mode enabled, only text will be send. This is to capture Terminal data.

Options available: Enabled/Disabled.

Default setting is **Disabled**.

#### ☞ **Resolution 100x31** (Note)

Enables or disables extended terminal resolution. Default setting is **Enabled**.

Options available: Enabled/Disabled.

#### ☞ **Legacy OS Redirection Resolution** (Note)

On Legacy OS, the number of Rows and Columns supported redirection.

Options available: 80x24/80X25. Default setting is **80x24**.

#### ☞ **Putty KeyPad** (Note)

Select function FunctionKey and KeyPad on Putty.

Options available: VT100/LINUX/XTERMR6/SCO/ESCN/VT400. Default setting is **VT100**.

#### ☞ **Redirection After BIOS POST** (Note)

This option allows user to enable console redirection after O.S has loaded.

Options available: Always Enable/Boot Loader. Default setting is **Always Enable**.

#### ☞ **Out-of-Bnad Mgmt Port**


Microsoft Windows Emergency Management Service (EMS) allows for remote management of a Windows Server OS through a serial port.

Options available: COM1/COM2. Default setting is **COM1**.

(Note) Advanced items prompt when this item is defined.



## 5-2-2 PCI Subsystem Settings

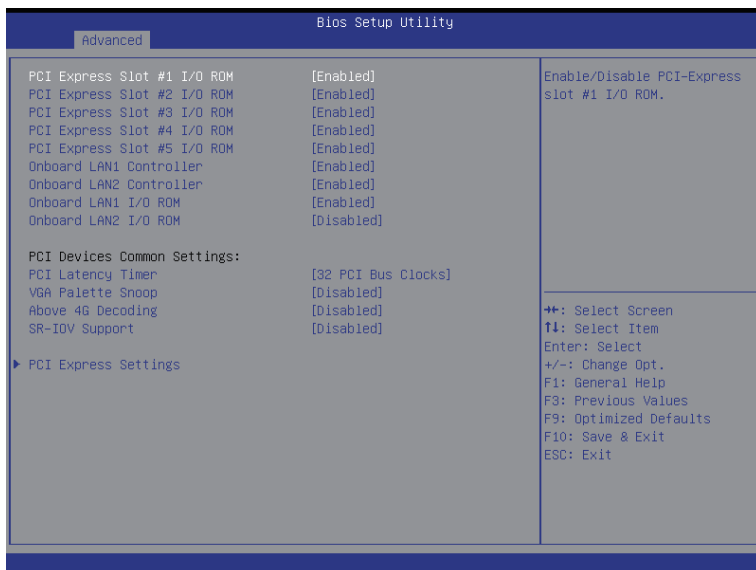

### ☞ PCI Express Slot #1/#2/#3/#4/#5 I/O ROM

When enabled, This setting will initialize the device expansion ROM for the related PCI-E slot.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Onboard LAN#1/#2Controller

Enable/Disable onboard LAN devices.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Onboard LAN #1/#2 I/O ROM

Enable/Disable onboard LAN devices and initialize device expansion ROM.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ PCI Devices Common Settings

#### ☞ PCI Latency Timer

Value to be programmed into PCI Latency Timer Register.

Options available: 32 PCI Bus Clocks/64 PCI Bus Clocks/96 PCI Bus Clocks/128 PCI Bus Clocks/160 PCI Bus Clocks/192 PCI Bus Clocks/224 PCI Bus Clocks/248 PCI Bus Clocks/.

Default setting is **32 PCI Bus Clocks**.

#### ☞ VGA Palette Snoop

Enable/Disable VGA Palette Registers Snooping.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ Above 4G Decoding

Enable/Disable Above 4G Decoding.

Options available: Enabled/Disabled. Default setting is **Disabled**.



### **SR-IOV Support**

If system has SR-IOV capable PCIe Devices, this option enables or disables Single Root IO Virtualization Support.


Options available: Enabled/Disabled. Default setting is **Disabled**.

### **PCI Express Settings**

Press [Enter] for configuration of advanced items.



## 5-2-2-1 PCI Express Settings

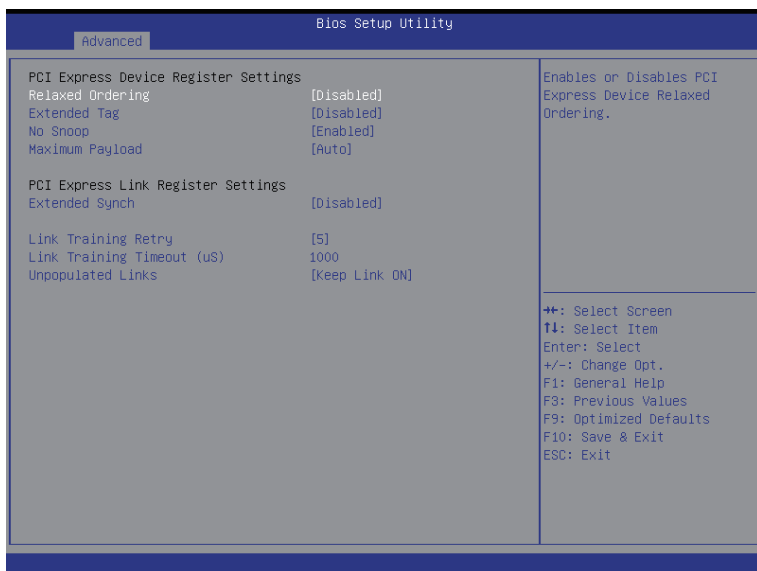

### ☞ PCI Express Device Register Settings

#### ☞ Relaxed Ordering

Enable/Disable PCI Express Device Relaxed Ordering feature.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ Extended Tag

When this feature is enabled, the system will allow device to use 8-bit Tag field as a requester.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ No Snoop

Enable/Disable PCI Express Device No Snoop option.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Maximum Payload

Set maximum payload for PCI Express Device or allow system BIOS to select the value.

Options available: Auto/128 Bytes/256 Bytes/512 Bytes/1024 Bytes/2048 Bytes/4096 Bytes.

Default setting is **Auto**.

### ☞ PCI Express Link Register Settings

#### ☞ Extended Synch

When this feature is enabled, the system will allow generation of Extended Synchronization patterns.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ Link Training Retry

Define the number of Retry Attempts software will take to retrain the link if previous training attempt was unsuccessful.

Options available: Disabled/2/3/5. Default setting is **5**.



### **Link Training Timeout (us)**

Define the number of Microseconds software will wait before polling 'Link Training' bit in Link Status register. Press <+> / <-> keys to increase or decrease the desired values. Value range is from 10 to 10000 us.

### **Unpopulated Links**

When this item is set to 'Disable Link', the system will operate power save feature for those unpopulated PCI Express links.

Options available: Keep Link ON/ Disable Link. Default setting is **Keep Link ON**.



## 5-2-3 Network Stack



### ☞ Network stack

Enable/Disable UEFI network stack.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### ☞ Ipv4 PXE Support<sup>(Note)</sup>

Enable/Disable Ipv4 PXE feature.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Ipv6 PXE Support<sup>(Note)</sup>

Enable/Disable Ipv6 PXE feature.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ PXE boot wait time<sup>(Note)</sup>

Press <+> / <-> keys to increase or decrease the desired values.


### ☞ Media detect time<sup>(Note)</sup>

Press <+> / <-> keys to increase or decrease the desired values.

(Note) This item appears when **Network Stack** is set to **Enabled**.



## 5-2-4 CSM Configuration

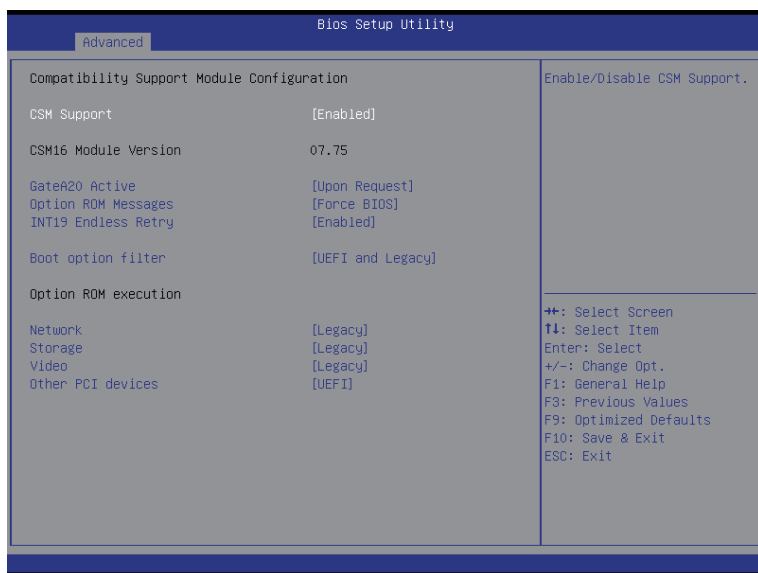

### ☞ Compatibility Support Module Configuration

#### ☞ CSM Support

Enable/Disable Compatibility Support Module (CSM) support.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ CSM16 Module Version

Display CSM Module version information.

#### ☞ Gate20 Active

Upon Request: GA20 can be disabled using BIOS services.

Always: Do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

Options available: Upon Request/Always. Default setting is **Upon Request**.

#### ☞ Option ROM Messages

Option ROM Messages.

Options available: Force BIOS/Keep Current. Default setting is **Force BIOS**.

#### ☞ INT19 Endless Retry

Enabled: Allowed headless retry boot

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Boot option filter

Determines which devices system will boot to.

Options available: UEFI and Legacy/Legacy only/UEFI only. Default setting is **UEFI and Legacy**.



☞ **Option ROM execution**

☞ **Network**

Controls the execution UEFI and Legacy PXE OpROM.

Options available: Do not launch/UEFI/Legacy. Default setting is **Legacy**.

☞ **Storage**

Controls the execution UEFI and Legacy Storage OpROM.

Options available: Do not launch/UEFI/Legacy. Default setting is **Legacy**.

☞ **Video**

Controls the execution UEFI and Legacy Video OpROM.

Options available: Do not launch/UEFI/Legacy. Default setting is **Legacy**.

☞ **Other PCI devices**

Determines OpROM execution policy for devices other than network, Storage, or Video.

Options available: UEFI/Legacy. Default setting is **UEFI**.



# 5-2-5 Post Report Configuration



## 🔑 Post Report Configuration

## 🔑 Error Message Report


## 🔑 Post Error Message

Enable/Disable Info Error Message support.

Options available: Enabled/Disabled. Default setting is **Enabled**.



# 5-2-6 Trusted Computing

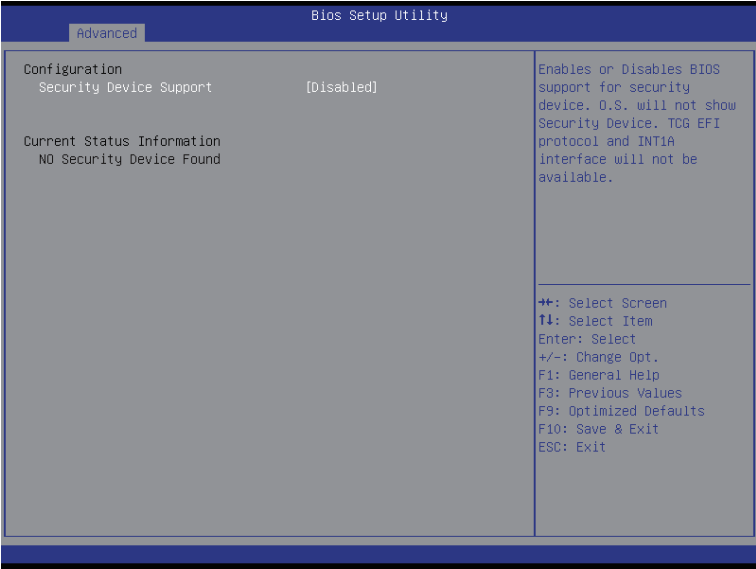

## Configuration

### Security Device Support

Select Enabled to activate TPM support feature.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### Current Status Information

Display current TPM status information.



## 5-2-7 USB Configuration



### ☞ USB Configuration

#### ☞ USB Devices:

Display the USB devices connected to the system.

#### ☞ XHCI Hand-off

Enable/Disable XHCI (USB 3.0) Hand-off support.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ EHCI Hand-off

Enable/Disable EHCI (USB 2.0) Hand-off function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ USB Mass Storage Driver Support<sup>(Note)</sup>

Enable/Disable USB Mass Storage Driver Support.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Port 60/64 Emulation


Enable I/O port 60h/64h emulation support. This should be enabled for the complete USB Keyboard Legacy support for non-USB aware OS.

Options available: Enabled/Disabled. Default setting is **Enabled**.

(Note) This item is present only if you attach USB types of device.



## 5-2-8 Chipset Configuration

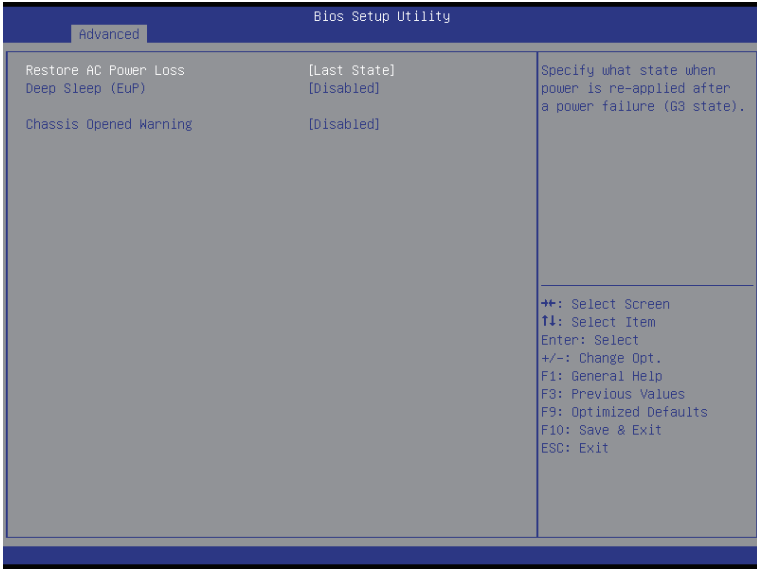

### ☞ Restore on AC Power Loss <sup>(Note)</sup>

Defines the power state to resume to after a system shutdown that is due to an interruption in AC power. When set to Last State, the system will return to the active power state prior to shutdown. When set to Stay Off, the system remains off after power shutdown.

Options available: Last State/Stay Off/Power On. The default setting depends on the BMC setting.

### ☞ Deep Sleep (EuP)

Enable/Disable Deep Sleep mode.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### ☞ Fan Curve Mode

Configure system fan curve mode

Options available: Full Dpeed Mode/Performance ModeBalanced mode/Energy Saving Mode.

Default setting is **Performance Mode**.

### ☞ Chassis Opened Warning


Enable/Disable Chassis intrusion alter funtion.

Options available: Enabled/Disabled. Default setting is **Disabled**.

(Note) When the power policy is controlled by BMC, please wait for 15-20 seconds for BMC to save the last power state.



## 5-9 SIO Configuration

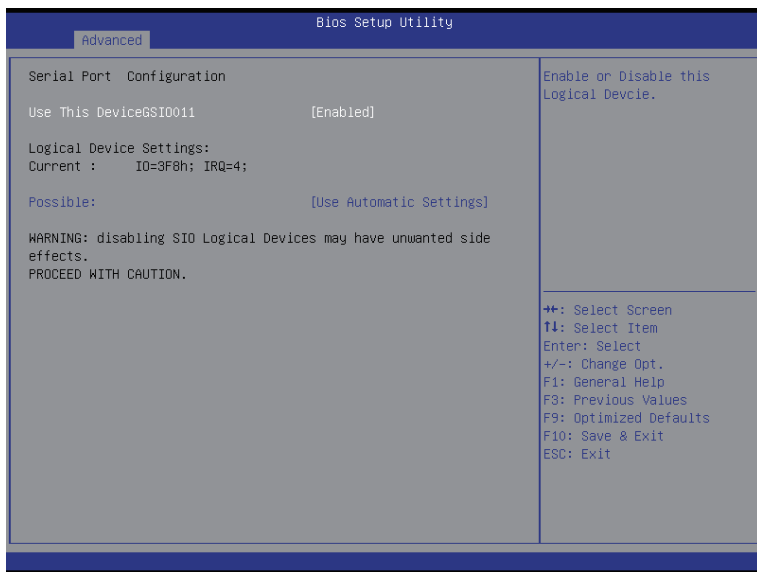



☞ **AMI SIO Driver Version**

Display the AMI SIO driver version information.

☞ **Super IO Chip Logical Device(s) Configuration**

☞ **[\*Active\*] Serial Port 1**

Press [Enter] for configuration of advanced items.

☞ **Serial Port 1 Configuration**

☞ **Use This Device**

When enabled allows you to configure the serial port 1 settings. When set to Disabled, displays no configuration for the serial port.

Options available: Enabled/Disabled. Default setting is **Enabled**.

☞ **Logical Device Settings:**

☞ **Current:**

Display the Serial Port 1 base I/O address and IRQ.

☞ **Possible:**

Configure Serial Port 1 base I/O address and IRQ.

Option available:

Use Automatic Settings

IO=3F8h; IRQ=4; DMA;/

IO=3F8h; IRQ=3,4,5,7,9,10,11,12; DMA;/

IO=2F8h; IRQ=3,4,5,7,9,10,11,12; DMA;/


IO=3E8h; IRQ=3,4,5,7,9,10,11,12; DMA;/

IO=2E8h; IRQ=3,4,5,7,9,10,11,12; DMA;

Default setting is **Use Automatic Settings**.



## 5-2-10 iSCSI Configuration

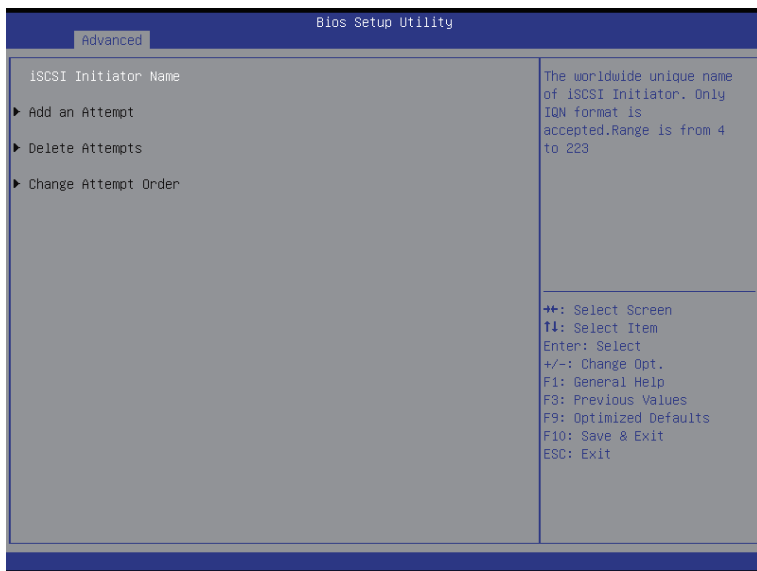

### ⏏ iSCSI Initiator Name

#### ⏏ Add an Attempts

Press [Enter] for configuration of advanced items.

#### ⏏ Delete Attempts

Press [Enter] for configuration of advanced items.


#### ⏏ Change Attempt Order

Press [Enter] for configuration of advanced items.



## 5-3 Intel RC Setup Menu

Intel RC Setup menu displays submenu options for configuring the function of North Bridge and South Bridge. Select a submenu item, then press Enter to access the related submenu screen.

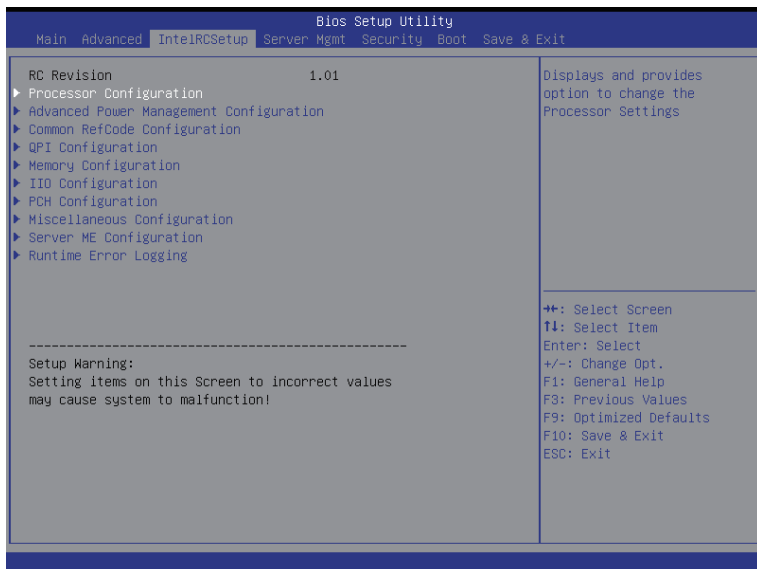

### RC Revision

Display Intel RC version information.



## 5-3-1 Processor Configuration

| Bios Setup Utility         |   |   |
|----------------------------|---|---|
| IntelRCSetup               |   |   |
| Processor Configuration    |   | ▲ Change Per-Socket Settings  |
| ▶ Per-Socket Configuration |   |   |
| Processor Socket           | Socket 0                                      | Socket 1  |
| Processor ID               | 000306F2*                                     | 000306F2  |
| Processor Frequency        | 2.500GHz                                      | 2.500GHz  |
| Processor Max Ratio        | 19H   | 19H   |
| Processor Min Ratio        | 0CH   | 0CH   |
| Microcode Revision         | 0000001F                                      | 0000001F  |
| L1 Cache RAM               | 768KB   | 768KB   |
| L2 Cache RAM               | 3072KB  | 3072KB  |
| L3 Cache RAM               | 30720KB                                       | 30720KB   |
| Processor 0 Version        | Intel(R) Xeon(R) CPU E5<br>-2680 v3 @ 2.50GHz |   |
| Processor 1 Version        | Intel(R) Xeon(R) CPU E5<br>-2680 v3 @ 2.50GHz |   |
| Hyper-Threading [ALL]      | [Enable]                                      |   |
| Execute Disable Bit        | [Enable]                                      |   |
| Enable Intel TXT Support   | [Disable]                                     |   |
| VMX                        | [Enable]                                      |   |
| Enable SMX                 | [Disable]                                     |   |
| Hardware Prefetcher        | [Enable]                                      |   |
| Adjacent Cache Prefetch    | [Enable]                                      |   |
| DCU Streamer Prefetcher    | [Enable]                                      |   |
|                            |   | ++: Select Screen<br>T1: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |

| Bios Setup Utility        |   |   |
|---------------------------|---|---|
| IntelRCSetup              |   |   |
| Processor Max Ratio       | 19H   | 19H   |
| Processor Min Ratio       | 0CH   | 0CH   |
| Microcode Revision        | 0000001F                                      | 0000001F  |
| L1 Cache RAM              | 768KB   | 768KB   |
| L2 Cache RAM              | 3072KB  | 3072KB  |
| L3 Cache RAM              | 30720KB                                       | 30720KB   |
| Processor 0 Version       | Intel(R) Xeon(R) CPU E5<br>-2680 v3 @ 2.50GHz |   |
| Processor 1 Version       | Intel(R) Xeon(R) CPU E5<br>-2680 v3 @ 2.50GHz |   |
| Hyper-Threading [ALL]     | [Enable]                                      |   |
| Execute Disable Bit       | [Enable]                                      |   |
| Enable Intel TXT Support  | [Disable]                                     |   |
| VMX                       | [Enable]                                      |   |
| Enable SMX                | [Disable]                                     |   |
| Hardware Prefetcher       | [Enable]                                      |   |
| Adjacent Cache Prefetch   | [Enable]                                      |   |
| DCU Streamer Prefetcher   | [Enable]                                      |   |
| DCU IP Prefetcher         | [Enable]                                      |   |
| DCU Mode                  | [32KB 8Way Without ECC]                       |   |
| Direct Cache Access (DCA) | [Auto]  |   |
| DCA Prefetch Delay        | [32]  |   |
| X2APIC                    | [Disable]                                     |   |
| AES-NI                    | [Enable]                                      |   |
|                           |   | ++: Select Screen<br>T1: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |



## ⌄ Processor Configuration

## ⌄ Pre-Socket Configuration

Press [Enter] for configuration of advanced items.

## ⌄ Processor Socket/Processor ID/Processor Frequency/Processor Max Ratio/ Processor Min Ratio/Microcode Revision/L1 Cache RAM/L2 Cache RAM/L3 Cache RAM/ Processor 0/1Version

Displays the technical specifications for the installed processor.

## ⌄ Hyper-Threading [All]

The Hyper Threading Technology allows a single processor to execute two or more separate threads concurrently. When hyper-threading is enabled, multi-threaded software applications can execute their threads, thereby improving performance.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ Execute Disable Bit

When enabled, the processor prevents the execution of code in data-only memory pages. This provides some protection against buffer overflow attacks.

When disabled, the processor will not restrict code execution in any memory area. This makes the processor more vulnerable to buffer overflow attacks.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ Enable Intel TXT Support

Enable/Disable Intel Trusted Execution Technology support function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

## ⌄ VMX (Vanderpool Technology)

Enable/Disable Vanderpool Technology. This will take effect after rebooting the system.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ Enable SMX (Intel Safer Mode Extensions Technology)

Enable/Disable Intel Safer Mode Extensions (SMX) support function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

## ⌄ Hardware Prefetcher

Select whether to enable the speculative prefetch unit of the processor.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ Adjacent Cache Line Prefetch

When enabled, cache lines are fetched in pairs. When disabled, only the required cache line is fetched.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ DCU Streamer Prefetch

Enable prefetch of next L1 Data line based upon multiple loads in same cache line.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ DCU IP Prefetch

Enable prefetch of next L1 Data line based upon sequential load history.

Options available: Enabled/Disabled. Default setting is **Enabled**.

## ⌄ DCU Mode

Configure DCU mode.

Options available: 32KB 8Way Without ECC/16KB 4Way With ECC. Default setting is **32KB 8Way Without ECC**.



☞ **Direct Cache Access (DCA)**

Options available: Auto/Enabled/Disabled. Default setting is **Auto**.

☞ **DCA Prefetch Delay**

Options available: Disabled/8/16/24/32/40/48/56/64/72/80/88/96/104/112. Default setting is **32**.

☞ **X2APIC**

Options available: Enabled/Disabled. Default setting is **Disabled**.


☞ **AES-NI**

Enable/Disable AES-NI (Intel Advanced Encryption Standard New Instructions) support function.


Options available: Enabled/Disabled. Default setting is **Enabled**.



### 5-3-1-1 Pre-Socket Configuration

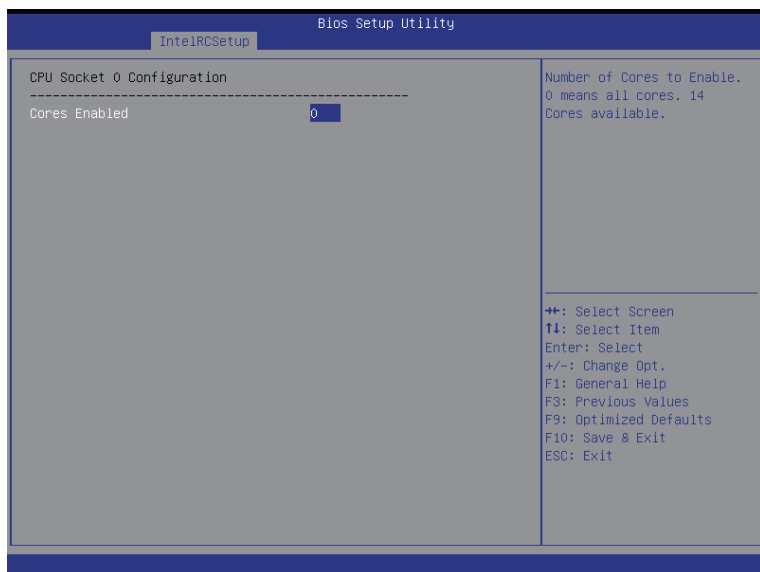



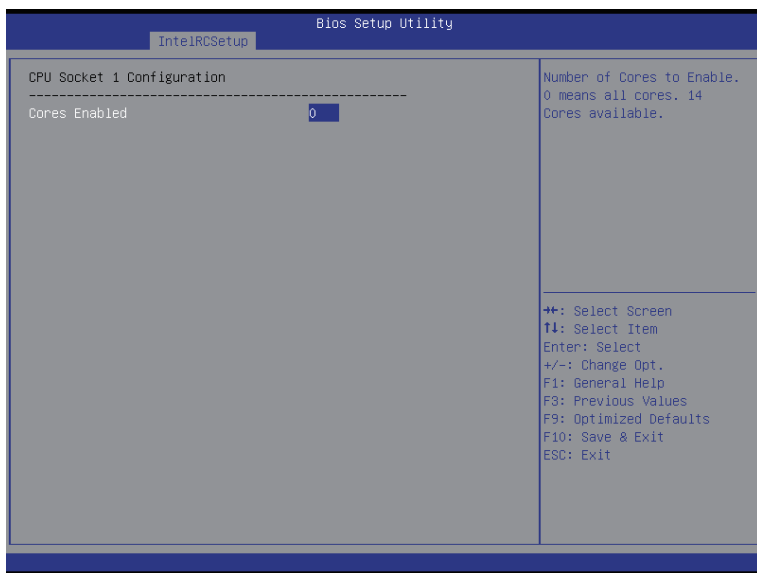

#### 🔑 CPU Socket 0/1 Configuration


Press [Enter] for configuration of advanced items.

#### 🔑 Cores Enabled (for CPU socket 0/1)

Number of Cores to enable. 0 means all cores. 14 Cores is available. Press the numeric keys to adjust desired values.



## 5-3-2 Advanced Power Management Configuration

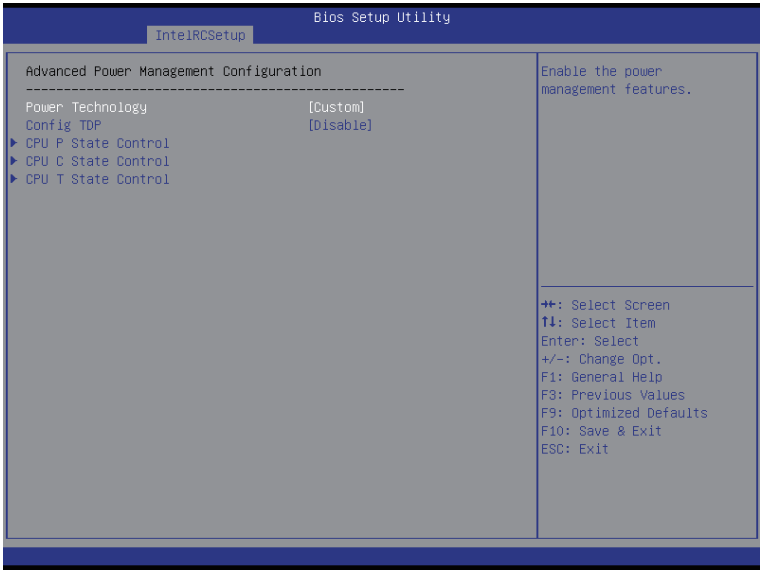

### ☞ Advanced Power Management Configuration

#### ☞ Power Technology

Option available: Disable/Energy Efficient/Custom. Default setting is **Energy Efficient**.

#### ☞ Config TDP

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ CPU P State Control

Press [Enter] for configuration of advanced items.

#### ☞ CPU C State Control


Press [Enter] for configuration of advanced items.

#### ☞ CPU T State Control

Press [Enter] for configuration of advanced items.



## 5-3-2-1 CPU P State Control

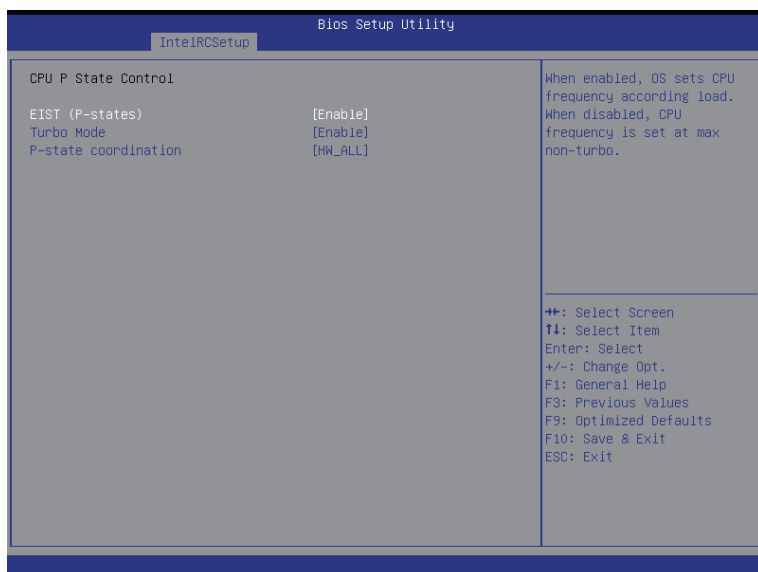

### ☞ EIST (P-State)

Conventional Intel SpeedStep Technology switches both voltage and frequency in tandem between high and low levels in response to processor load.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Turbo Mode

When this item is enabled, the processor will automatically ramp up the clock speed of 1-2 of its processing cores to improve its performance.

When this item is disabled, the processor will not overclock any of its core.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ P-state coordination

In HW\_ALL mode, the processor hardware is responsible for coordinating the P-state among logical processors dependencies. The OS is responsible for keeping the P-state request up to date on all logical processors.


In SW\_ALL mode, the OS Power Manager is responsible for coordinating the P-state among logical processors with dependencies and must initiate the transition on all of those Logical Processors.

In SW\_ANY mode, the OS Power Manager is responsible for coordinating the P-state among logical processors with dependencies and may initiate the transition on any of those Logical Processors.

Options available: HW\_ALL/SW\_ALL/SW\_ANY. Default setting is **HW\_ALL**.



## 5-3-2-2 CPU C State Control

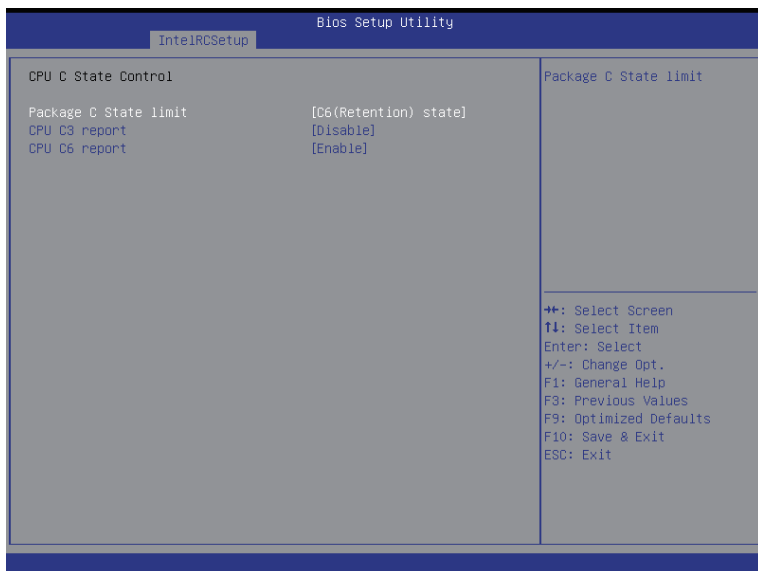

### 🔑 Package C State Limit

Configure state for the C-State package limit.

Options available: C0/C1 state/C2 state/C6(non Retention) state/C6(Retention) state.

Default setting is **C6(non Retention) state**.

### 🔑 CPU C3/C6 Report

Allows you to determine whether to let the CPU enter C3/C6 mode in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. The C3/C6 state is a more enhanced power-saving state than C1.

Options available: Enabled/Disabled.

Default setting for C3 is **Disabled**; default setting for C6 is **Enabled**.



### 5-3-2-3 CPU T State Control



#### ACPI T-States

Enable/Disable CPU throttling by OS. Throttling reduces power consumption.

Options available: Enabled/Disabled. Default setting is **Enabled**.



### 5-3-3 Common RefCode Configuration



#### ☞ Common RefCode Configuration

#### ☞ Isoc Mode


Options available: Auto/Enabled/Disabled. Default setting is **Auto**.

#### ☞ Numa (Non-Uniform Memory Access)

Options available: Enabled/Disabled. Default setting is **Enabled**.



## 5-3-4 QPI Configuration

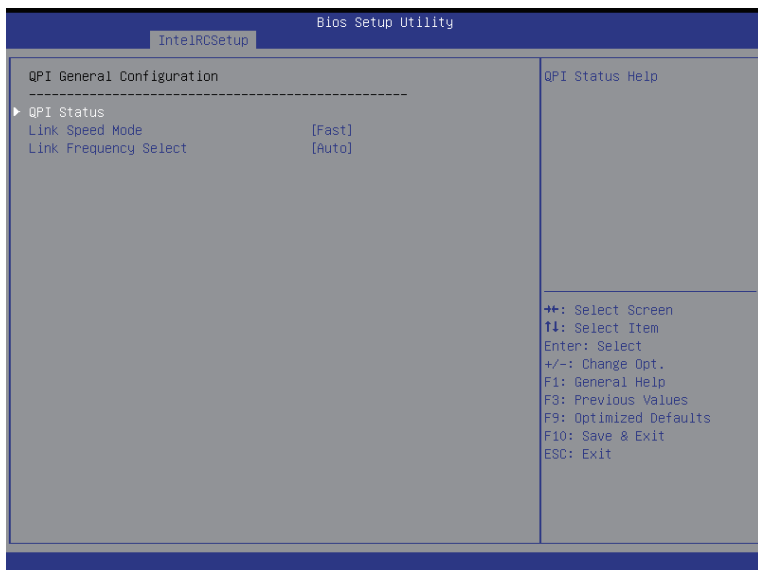





### 🔑 QPI General Configuration

Press [Enter] for configuration of advanced items.

### 🔑 QPI Status

Press [Enter] to view QPI status.

### 🔑 Link Speed Mode


Options available: Slow/Fast. Default setting is **Fast**.

### 🔑 Link Frequency Select

Options available: 6.4GB/s/8.0GB/s/9.6GB/s/Auto/Auto Limited. Default setting is **Auto**.



## 5-3-5 Memory Configuration

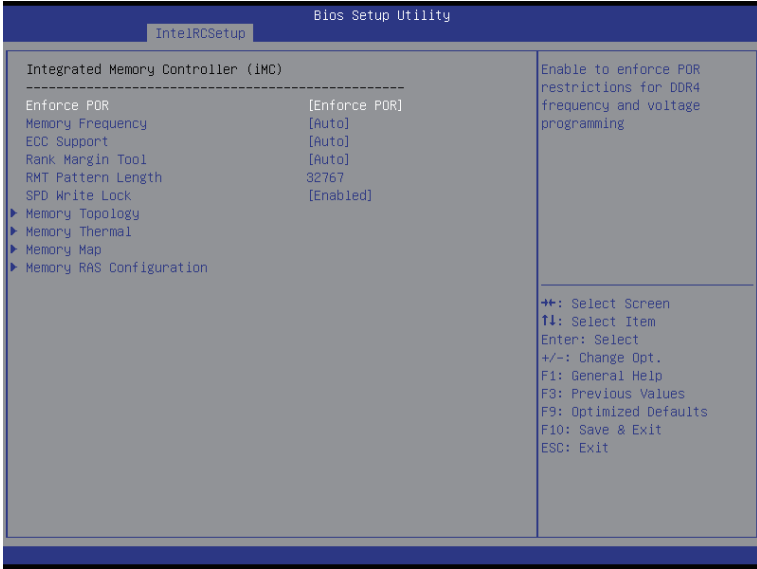

### ☞ Integrated Memory Controller (iMC)

#### ☞ Enforce POR

Enable to enforce POR restrictions for DDR4 frequency and voltage programming.

Options available: Enforce POR/Disabled/Enforce Stretch Goals. Default setting is **Enforce POR**.

#### ☞ Memory Frequency

Configure memory frequency.

Options available: Auto/1333/1400/1600/1800/1867/2000/2133.

Default setting is **Auto**.

#### ☞ ECC Support

Options available: Auto/Disabled/Enabled. Default setting is **Auto**.

#### ☞ Rank Margin Tool

Options available: Auto/Disabled/Enabled. Default setting is **Auto**.

#### ☞ RMT Pattern Length

Display RMT Pattern Length.

#### ☞ SPD Write Lock

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Memory Topology

Press [Enter] for configuration of advanced items.

#### ☞ Memory Thermal

Press [Enter] for configuration of advanced items.



☞ **Memory Map**


Press [Enter] for configuration of advanced items.

☞ **Memory RAS Configuration**

Press [Enter] for configuration of advanced items.




### 5-3-5-1 Memory Topology

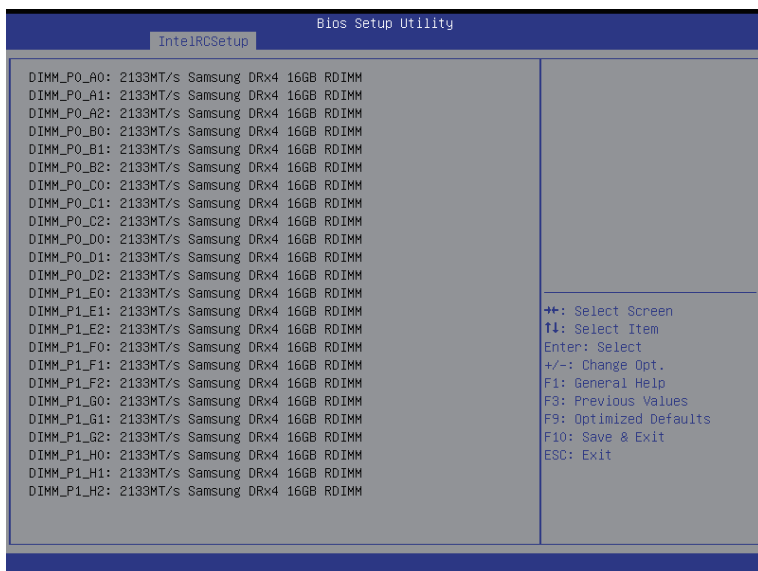



## 5-3-5-2 Memory Thermal

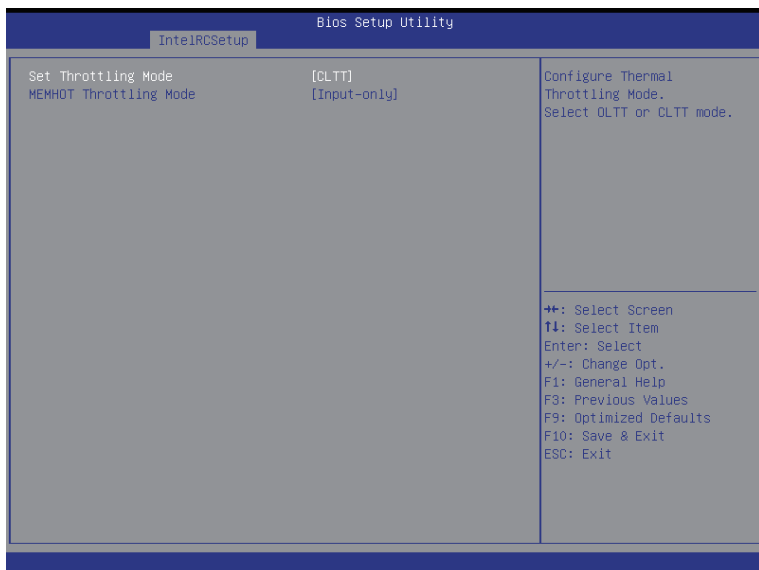

### ☞ Set Throttling Mode

Configure Thermal Throttling Mode. Select OLTT or CLTT mode.


Options available: Disabled/CLTT Mode. Default setting is **CLTT Mode**.

### ☞ MEMHOT Throttling Mode

Options available: Disabled/Output-only/Input-only. Default setting is **Input-only**.



### 5-3-5-3 Memory Map

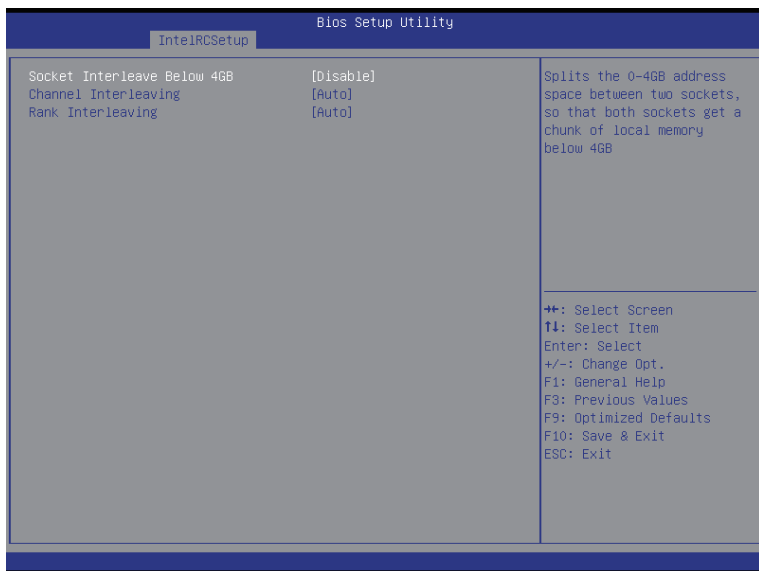

#### ☞ **Socket Interleave Below 4GB**

Splits the 0-4GB address space between two sockets, so that both sockets get a chunk of local memory below 4GB.

Options available: Disabled/Enabled. Default setting is **Disabled**.

#### ☞ **Channel Interleaving**

Options available: Auto/1-way Interleave/2-way Interleave/3-way Interleave/4-way Interleave.

Default setting is **Auto**.


#### ☞ **Rank Interleaving**

Options available: Auto/1-way Interleave/2-way Interleave/4-way Interleave/8-way Interleave.

Default setting is **Auto**.



### 5-3-5-4 Memory RAS Configuration

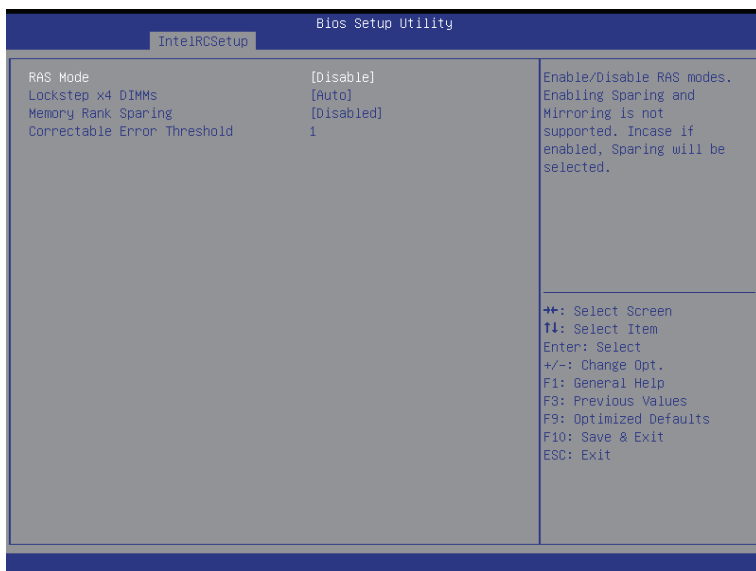

#### ☞ RAS Mode

Enable/Disable RAS modes. Enabling Sparing and Mirroring is not supported. When this item is set to enabled, Sparing will be selected.

Options available: Disable/Mirror/Lockstep Mode. Default setting is **Disabled**.

#### ☞ Lockstep x4 DIMMs

Options available: Auto/Disabled/Enabled. Default setting is **Auto**.

#### ☞ Memory Rank Sparing

Options available: Disabled/Enabled. Default setting is **Disabled**.

#### ☞ Correctable Error Threshold

Press <+> / <-> keys to increase or decrease the desired values.



## 5-3-6 IIO Configuration



### 🔑 IIO Configuration

#### 🔑 EV DFX Features

Set this option to allow DFX Lock Bits to remain clear.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### 🔑 IOAT Configuration

Press [Enter] for configuration of advanced items.

#### 🔑 Intel VT for Directed I/O (VT-d)

Press [Enter] for configuration of advanced items.



## 5-3-6-1 IOAT Configuration



### IOAT Configuration

#### Enable IOAT

Control to enable/disable IOAT (Intel I/O Acceleration Technology) device.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### No Snoop

Enable/Disable PCI Express Device No Snoop option.

Options available: Enabled/Disabled. Default setting is **Disabled**.



## 5-3-6-2 Intel VT for Directed I/O (VT-d)



### ☞ Intel VT for Directed I/O (VT-d)

### ☞ VT-d Azalea VcP Optimizations

Enable/Disable Azalea VcP optimizations.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### ☞ Intel VT for Directed I/O (VT-d)

Enable/Disable Intel VT for Directed I/O (VT-d) support function.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Interrupt Remapping

Enable/Disable interrupt remapping support function.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Coherency Suuport (Non-Isch)

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Coherency Suuport (Isch)

Options available: Enabled/Disabled. Default setting is **Enabled**.



## 5-3-7 PCH Configuration



### ☞ PCH Configuration

### ☞ PCH Devices

Press [Enter] for configuration of advanced items.

### ☞ PCH sSATA Configuration

Press [Enter] for configuration of advanced items.

### ☞ PCH SATA Configuration

Press [Enter] for configuration of advanced items.

### ☞ USB Configuration

Press [Enter] for configuration of advanced items.



### 5-3-7-1 PCH Devices




#### **PCH CRID**

Enable/Disable Intel Compatible Revision ID.

Options available: Enabled/Disabled. Default setting is **Disabled**.



## 5-3-7-2 PCH sATA Configuration

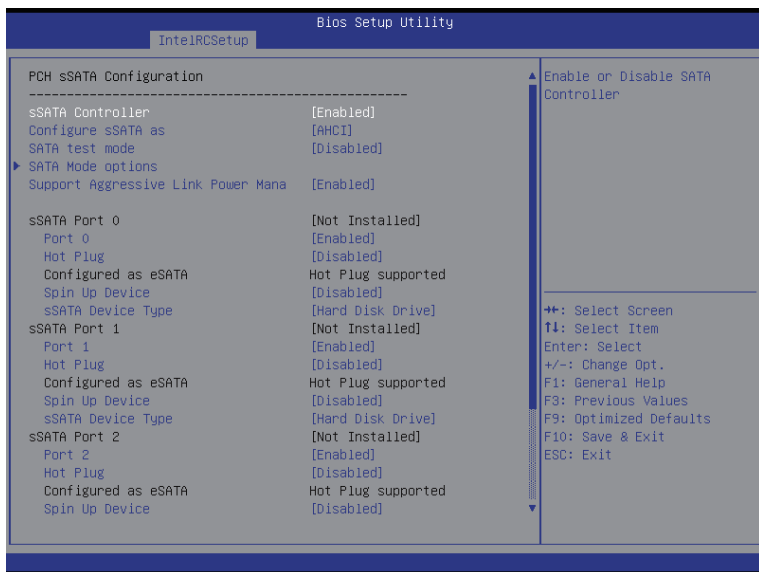



## When SATA Type is set to IDE



### ☞ PCH sSATA Configuration

#### ☞ sSATA Controller(s)

Enable/Disable sSATA controller.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Configure sSATA as

Configure on chip SATA type.

IDE Mode: When set to IDE, the SATA controller disables its RAID and AHCI functions and runs in the IDE emulation mode. This is not allowed to access RAID setup utility.

RAID Mode: When set to RAID, the SATA controller enables both its RAID and AHCI functions. You will be able to access the RAID setup utility at boot time.

AHCI Mode: When set to AHCI, the SATA controller enables its AHCI functionality. Then the RAID function is disabled and cannot access the RAID setup utility at boot time.

Options available: IDE/RAID/AHCI/Disabled. Default setting is **AHCI**.

#### ☞ SATA Test Mode

Enable/Disable SATA Test Mode.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ SATA Mode options<sup>(Note)</sup>

Press [Enter] for configuration of advanced items.

#### ☞ Support Aggressive Link Power Management<sup>(Note)</sup>

Enable PCH to aggressively enter link power state.

Options available: Enabled/Disabled. Default setting is **Enabled**.

(Note) Only Supported When HDD is in **AHCI** or **RAID** Mode.



### ☞ **Alternate Device ID on RAID**

Enable /Disable Alternate Device ID on RAID mode.

Options available: Enabled/Disabled. Default setting is **Disabled**.

**Please note that this option appears when HDD is in RAID Mode.**

### ☞ **sSATA Port 0/1/2/3**

The category identifies sSATA type of hard disk that are installed in the computer.

System will automatically detect HDD type.

### ☞ **Port 0/1/2/3**

Enable/Disable Port 0/1/2/3 device.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ **Hot Plug (for Port 0/1/2/3)<sup>(Note)</sup>**

Enable/Disable HDD Hot-Plug function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### ☞ **Configured as eSATA<sup>(Note)</sup>**

Display Hot-Plug supported information.

### ☞ **Spin Up Device (for Port 0/1/2/3)<sup>(Note)</sup>**

On an edge detect from 0 to 1, the PCH starts a COM reset initialization to the device.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### ☞ **sSATA Device Type**

Select sSATA device type.

Options available: Hard Disk Drive/Solid State Drive. Default setting is **Hard Disk Drive**.

(Note) Only Supported When HDD is in **AHCI** or **RAID** Mode.



# 5-3-7-2-1 SATA Mode Options

## When SATA Type is set to IDE/AHCI Mode




### SATA LED locate

When this option is enabled, LED/SGPIO hardware is attached.  
Options available: Enabled/Disabled. Default setting is **Enabled**.



## When SATA Type is set to RAID Mode

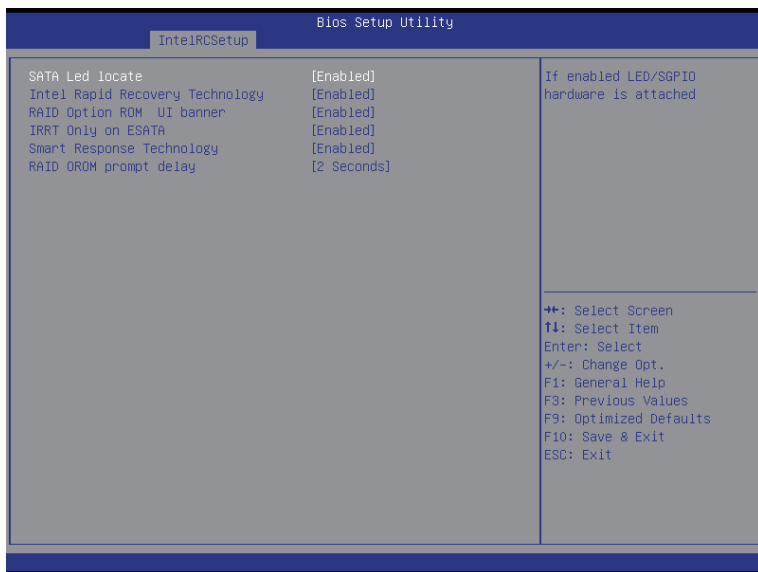

### ☞ SATA LED locate

When this option is enabled, LED/SGPIO hardware is attached.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Intel Rapid Recovery Technology

Enable/Disable Intel Rapid Recovery Technology support function.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ RAID Option ROM UI banner

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ IRRT Only on ESATA

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Smart Response Technology

Enable/Disable Intel Smart Response Technology support function.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ RAID OROM prompt delay

Options available: 2 Seconds/4 Seconds/6 Seconds/8 Seconds. Default setting is **2 Seconds**.



## 5-3-7-3 PCH SATA Configuration

| Bios Setup Utility   |                    |
|--|--------------------|
| InteIRCSSetup  |                    |
| PCH SATA Configuration   |                    |
| SATA Controller  | [Enabled]          |
| Configure SATA as  | [RAID]             |
| SATA test mode   | [Disabled]         |
| SATA RSTe Boot Info  | [Enabled]          |
| ▶ SATA Mode options  |                    |
| Support Aggressive Link Power Mana   | [Enabled]          |
| Alternate Device ID on RAID  | [Disabled]         |
| SATA Port 0  | [Not Installed]    |
| Port 0   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| Configured as eSATA  | Hot Plug supported |
| Spin Up Device   | [Disabled]         |
| SATA Device Type   | [Hard Disk Drive]  |
| SATA Port 1  | [Not Installed]    |
| Port 1   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| Configured as eSATA  | Hot Plug supported |
| Spin Up Device   | [Disabled]         |
| SATA Device Type   | [Hard Disk Drive]  |
| SATA Port 2  | [Not Installed]    |
| Port 2   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| ▲ Identify the SATA port is connected to Solid State Drive or Hard Disk Drive<br>++: Select Screen<br>T1: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |                    |

| Bios Setup Utility   |                    |
|--|--------------------|
| InteIRCSSetup  |                    |
| SATA Device Type   | [Hard Disk Drive]  |
| SATA Port 2  | [Not Installed]    |
| Port 2   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| Configured as eSATA  | Hot Plug supported |
| Spin Up Device   | [Disabled]         |
| SATA Device Type   | [Hard Disk Drive]  |
| SATA Port 3  | [Not Installed]    |
| Port 3   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| Configured as eSATA  | Hot Plug supported |
| Spin Up Device   | [Disabled]         |
| SATA Device Type   | [Hard Disk Drive]  |
| SATA Port 4  | [Not Installed]    |
| Port 4   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| Configured as eSATA  | Hot Plug supported |
| Spin Up Device   | [Disabled]         |
| SATA Device Type   | [Hard Disk Drive]  |
| SATA Port 5  | [Not Installed]    |
| Port 5   | [Enabled]          |
| Hot Plug   | [Disabled]         |
| Configured as eSATA  | Hot Plug supported |
| Spin Up Device   | [Disabled]         |
| SATA Device Type   | [Hard Disk Drive]  |
| ▲ Identify the SATA port is connected to Solid State Drive or Hard Disk Drive<br>++: Select Screen<br>T1: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |                    |



## When SATA Type is set to IDE



### ☞ PCH SATA Configuration

#### ☞ SATA Controller(s)

Enable/Disable sSATA controller.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Configure sSATA as

Configure on chip SATA type.

**IDE Mode:** When set to IDE, the SATA controller disables its RAID and AHCI functions and runs in the IDE emulation mode. This is not allowed to access RAID setup utility.

**RAID Mode:** When set to RAID, the SATA controller enables both its RAID and AHCI functions. You will be allowed access to the RAID setup utility at boot time.

**AHCI Mode:** When set to AHCI, the SATA controller enables its AHCI functionality. Then the RAID function is disabled and cannot be accessed in the RAID setup utility at boot time.

Options available: IDE/RAID/AHCI/Disabled. Default setting is **AHCI**.

#### ☞ SATA Test Mode

Enable/Disable SATA Test Mode.

Options available: Enabled/Disabled. Default setting is **Disabled**.

#### ☞ SATA RSTe Boot Info<sup>(Note 1)</sup>

Enable/Disable SATA RSTe Boot Information.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ SATA Mode options<sup>(Note 2)</sup>

Press [Enter] for configuration of advanced items.

(Note 1) Only Supported When HDD is in **RAID** Mode.

(Note 2) Only Supported When HDD is in **AHCI** or **RAID** Mode.



☞ **Support Aggressive Link Power Mana<sup>(Note)</sup>**

Enable PCH to aggressively enter link power state.

Options available: Enabled/Disabled. Default setting is **Enabled**.

☞ **Alternate Device ID on RAID**

Enable /Disable Alternate Device ID on RAID mode.

Options available: Enabled/Disabled. Default setting is **Disabled**.

**Please note that this option appears when HDD is in RAID Mode.**

☞ **sSATA Port 0/1/2/3/4/5**

The category identifies sSATA type of hard disk that are installed in the computer.

System will automatically detect HDD type.

☞ **Port 0/1/2/3/4/5**

Enable/Disable Port 0/1/2/3 device.

Options available: Enabled/Disabled. Default setting is **Enabled**.

☞ **Hot Plug (for Port 0/1/2/3/4/5)<sup>(Note)</sup>**

Enable/Disable HDD Hot-Plug function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

☞ **Configured as eSATA<sup>(Note)</sup>**

Display Hot-Plug supported information.

☞ **Spin Up Device (for Port 0/1/2/3/4/5)<sup>(Note)</sup>**

On an edge detect from 0 to 1, the PCH starts a COM reset initialization to the device.

Options available: Enabled/Disabled. Default setting is **Disabled**.

☞ **sSATA Device Type**

Select sSATA device type.

Options available: Hard Disk Drive/Solid State Drive. Default setting is **Hard Disk Drive**.

---

(Note) Only Supported When HDD is in **AHCI** or **RAID** Mode.



# 5-3-7-3-1 SATA Mode Options

## When SATA Type is set to IDE/AHCI Mode




### SATA LED locate

When this option is enabled, LED/SGPIO hardware is attached.  
Options available: Enabled/Disabled. Default setting is **Enabled**.



## When SATA Type is set to RAID Mode

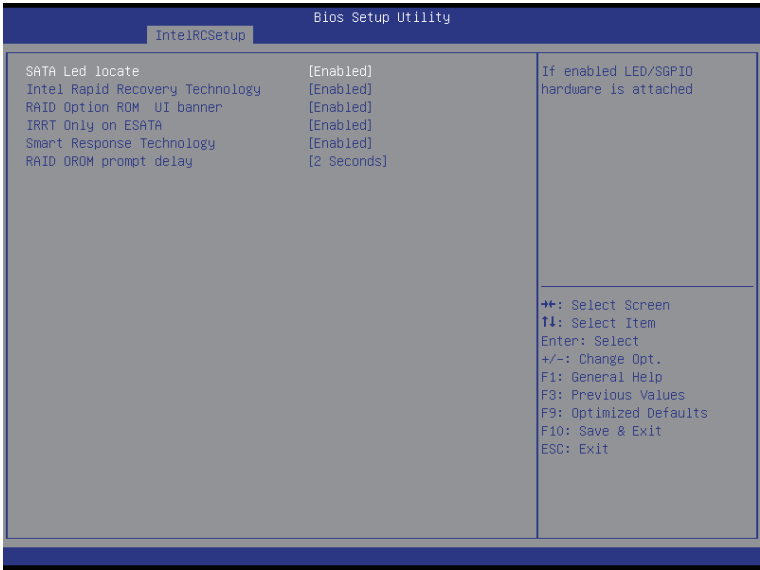

### ☞ SATA LED locate

When this option is enabled, LED/SGPIO hardware is attached.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Intel Rapid Recovery Technology

Enable/Disable Intel Rapid Recovery Technology support function.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ RAID Option ROM UI banner

Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ Smart Response Technology

Enable/Disable Intel Smart Response Technology support function.


Options available: Enabled/Disabled. Default setting is **Enabled**.

### ☞ RAID OROM prompt delay

Options available: 2 Seconds/4 Seconds/6 Seconds/8 Seconds. Default setting is **2 Seconds**.



## 5-3-7-4 USB Configuration

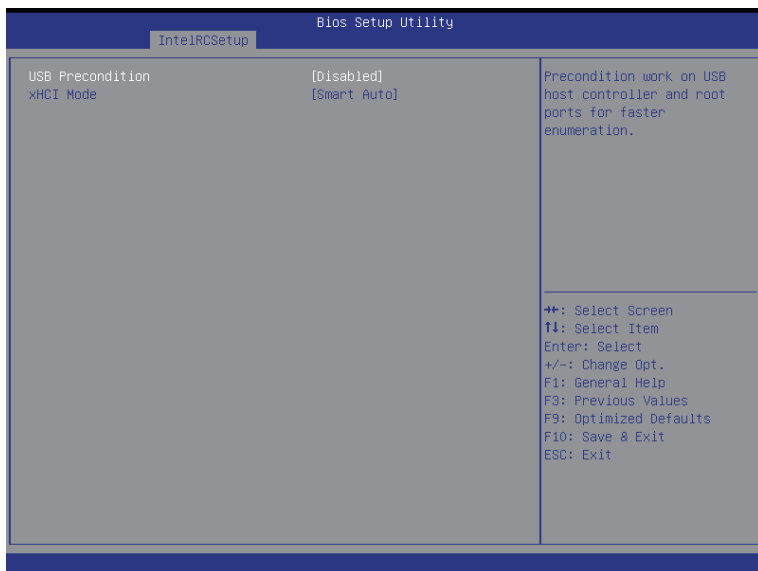

### **USB Precondition**

Precondition work on USB host controller and root ports for faster enumeration.

Options available: Enabled/Disabled. Default setting is **Disabled**.


### **xHCI Mode**

Enable/Disable xHCI (USB 3.0) support function.

Options available: Smart Auto/Enabled/Disabled. Default setting is **Smart Auto**.



## 5-3-8 Miscellaneous Configuration

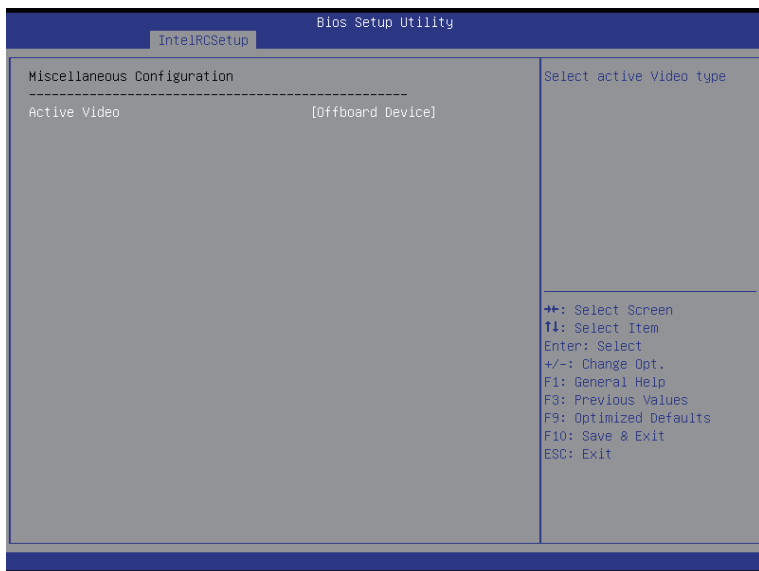

### ☞ Miscellaneous Configuration


#### ☞ Active Video

Select active Video type.

Options available: Onboard Device/Offboard Device. Default setting is **Offboard Device**.



### 5-3-9 Server ME Configuration

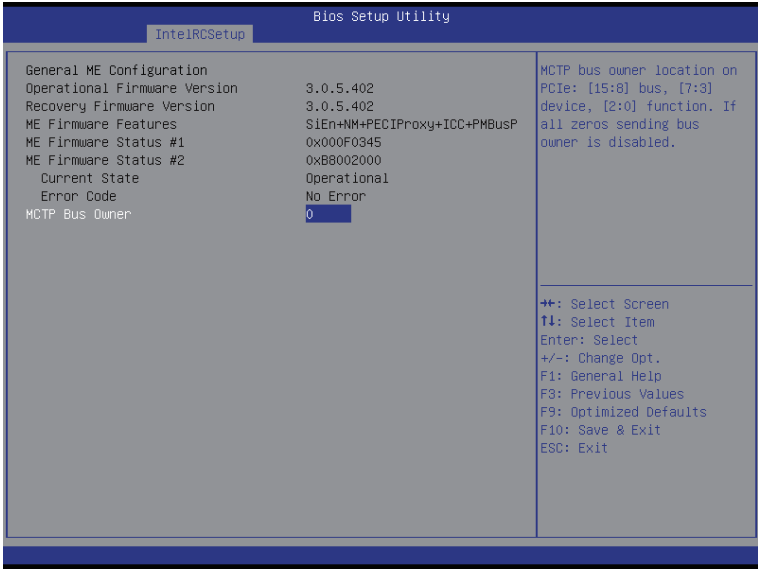

#### General ME Configuration

#### Operational Firmware Version

Display Operational Firmware Version information.

#### Recovery Firmware Version

Display Recovery Firmware Version information.

#### ME Firmware Features

Display ME Firmware features information.

#### ME Firmware Status #1/#2

Display ME Firmware status information.

#### Current State (for ME Firmware)

Display ME Firmware current status information.

#### Error Code (for ME Firmware)


Display ME Firmware status error code.

#### MCTP Bus Owner

Configure MCTP Bus Owner.



# 5-3-10 Runtime Error Logging

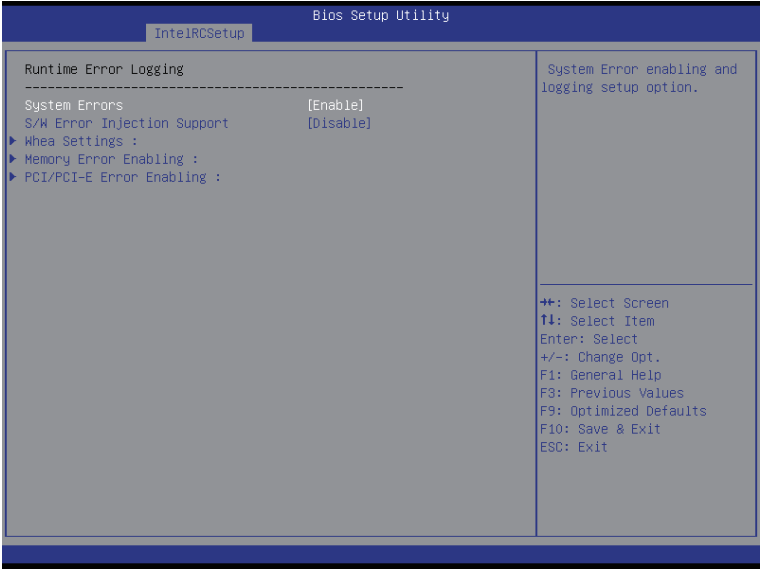

☞ **Runtime Error Logging**

☞ **System Errors**

Enable/Disable system error logging function.  
Options available: Enabled/Disabled. Default setting is **Enabled**.

☞ **S/W Error Injection Support**

Enable/Disable software injection error logging function.  
Options available: Enabled/Disabled. Default setting is **Disabled**.

☞ **Whea Settings**

Press [Enter] for configuration of advanced items.

☞ **Memory Error Enabling**

Press [Enter] for configuration of advanced items.

☞ **PCI/PCI-E Error Enabling**

Press [Enter] for configuration of advanced items.



### 5-3-10-1 Whea Setting




#### 🔑 **WHEA Support (Windows Hardware Error Architecture)**

Enable/Disable WHEA Support.

Options available: Enabled/Disabled. Default setting is **Enabled**.



## 5-3-10-2 Memory Error Enabling

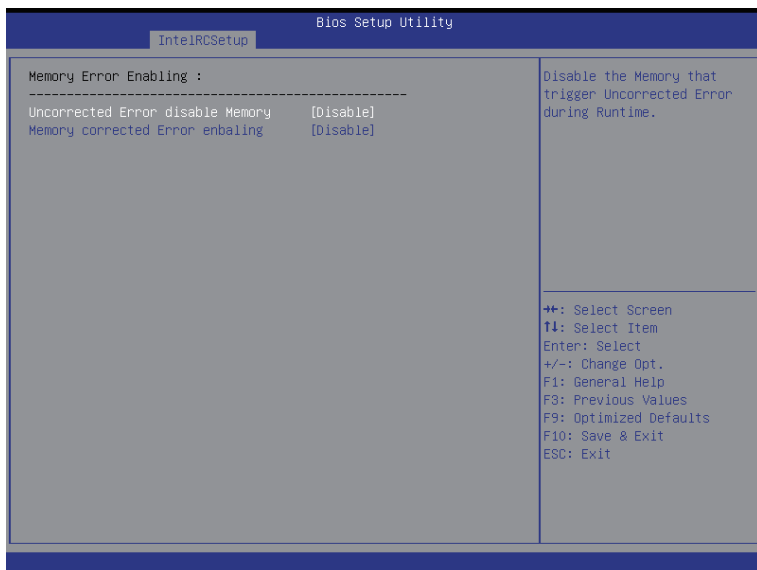

### ☞ Memory Error Enabling

### ☞ Un-Correctable Errors disable Memory

Options available: Enabled/Disabled. Default setting is **Disabled**.

### ☞ Memory corrected Errors enabling

Options available: Enabled/Disabled. Default setting is **Disabled**.



### 5-3-10-3 PCI/PCI Error Enabling




#### 🔑 PCI-Ex Error Enable

Options available: Yes/No. Default setting is **No**.



## 5-4 Server Management Menu

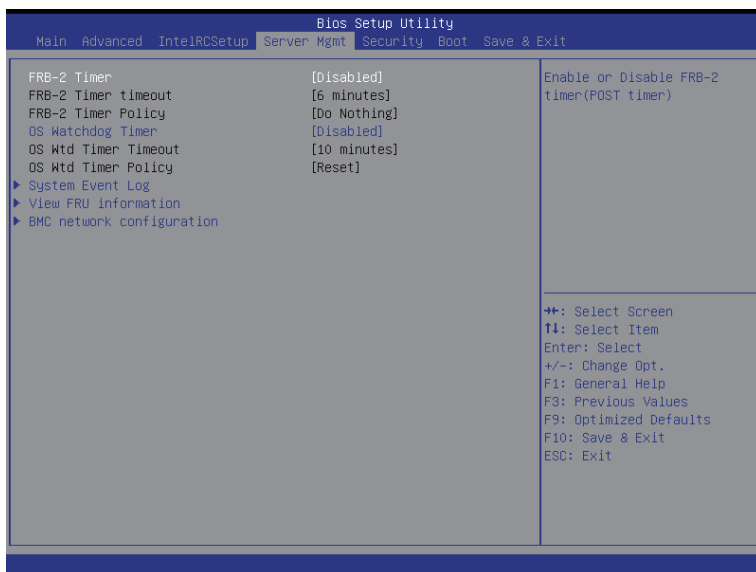

### 🔑 FRB-2 Timer

Enable/Disable FRB-2 timer (POST timer).

Options available: Enabled/Disabled. Default setting is **Disabled**.

### 🔑 FRB2 Timer timeout

Configure the FRB2 Timer timeout.

Options available: 3 minutes/4 minutes/5 minutes/6 minutes. Default setting is **6 minutes**.

**Please note that this item is configurable when FRB-2 Timer is set to Enabled.**

### 🔑 FRB2 Timer Policy

Configure the FRB2 Timer policy.

Options available: Do Nothing/Reset/Power Down. Default setting is **Do Nothing**.

**Please note that this item is configurable when FRB-2 Timer is set to Enabled.**

### 🔑 OS Watchdog Timer

Enable/Disable OS Watchdog Timer function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### 🔑 OS Wtd Timer Timeout

Configure OS Watchdog Timer.

Options available: 5 minutes/10 minutes/15 minutes/20 minutes. Default setting is **10 minutes**.

**Please note that this item is configurable when OS Watchdog Timer is set to Enabled.**

### 🔑 OS Wtd Timer Policy

Configure OS Watchdog Timer Policy.

Options available: Reset/Do Nothing/Power Down. Default setting is **Reset**.

**Please note that this item is configurable when OS Watchdog Timer is set to Enabled.**



☞ **System Event Log**

Press [Enter] for configuration of advanced items.

☞ **View FRU Information**


Press [Enter] to view the advanced items.

☞ **BMC network configuration**

Press [Enter] for configuration of advanced items.



## 5-4-1 System Event Log

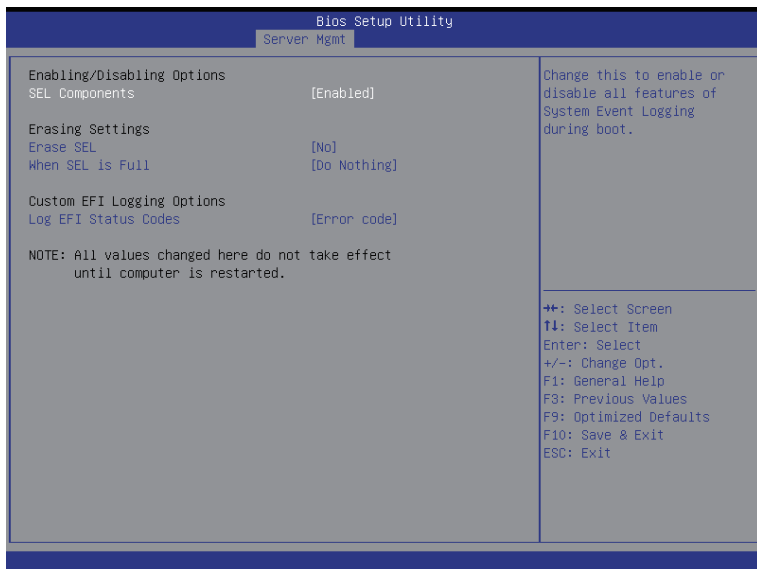

### ☞ Enabling/Disabling Options

#### ☞ SEL Components

Change this to enable or disable all features of System Event Logging during boot.

Options available: Enabled/Disabled. Default setting is **Enabled**.

#### ☞ Erasing Settings

#### ☞ Erasing SEL

Choose options for erasing SEL.

Options available: No/Yes, On next reset/Yes, On every reset. Default setting is **No**.

#### ☞ When SEL is Full

Choose options for reactions to a full SEL.

Options available: Do Nothing/Erase Immediately. Default setting is **Do Nothing**.

#### ☞ Custom EFI Logging Options

#### ☞ Log EFI Status Codes

Enable/Disable the logging of EFI Status Codes (if not already converted to legacy).

Options available: Disabled/Both/Error code/Progress code. Default setting is **Error code**.



## 5-4-2 View FRU Information

The FRU page is a simple display page for basic system ID information, as well as System product information. Items on this window are non-configurable.

### R180-F34


| Bios Setup Utility  |                        |
|---|------------------------|
| Server Mgmt   |                        |
| FRU Information   |                        |
| System Manufacturer   | GIGABYTE               |
| System Product Name   | R180-F34               |
| System Version  | 0100                   |
| System Serial Number  | 01234567890123456789AB |
| Board Manufacturer  | GIGABYTE               |
| Board Product Name  | MD90-F50               |
| Board Version   | 01234567               |
| Board Serial Number   | 1/B/S1445700014        |
| Chassis Manufacturer  | GIGABYTE               |
| Chassis Product Name  | 01234567               |
| Chassis Serial Number   | 01234567890123456789AB |
| <br>  |                        |
| +/: Select Screen<br>F1: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |                        |

### R180-F28

| Bios Setup Utility  |                        |
|---|------------------------|
| Server Mgmt   |                        |
| FRU Information   |                        |
| System Manufacturer   | GIGABYTE               |
| System Product Name   | R180-F28               |
| System Version  | 0100                   |
| System Serial Number  | 01234567890123456789AB |
| Board Manufacturer  | GIGABYTE               |
| Board Product Name  | MD90-F50               |
| Board Version   | 01234567               |
| Board Serial Number   | 1/B/S1445700014        |
| Chassis Manufacturer  | GIGABYTE               |
| Chassis Product Name  | 01234567               |
| Chassis Serial Number   | 01234567890123456789AB |
| <br>  |                        |
| +/: Select Screen<br>F1: Select Item<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |                        |



### 5-4-3 BMC network configuration

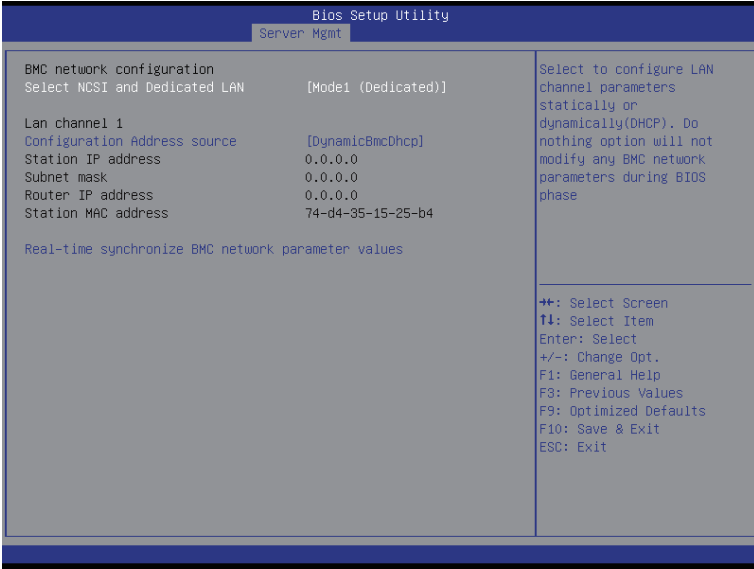

#### ➤ BMC network configuration

#### ➤ Select NCSI and Dedicated LAN

Switch NCSI and dedicated LAN and send KCS command.

Options available: Mode2(NSCI)/ Mode1 (Dedicated)/Do Nothing. Default setting is **Do Nothing**.

#### ➤ Lan Channel 1

#### ➤ Configuration Address source

Select to configure LAN channel parameters statically or dynamically (DHCP). Do nothing option will not modify any BMC network parameters during BIOS phase.

Options available: Unspecified/Static/DynamicBmcDhcp. Default setting is **Unspecified/Static**.

#### ➤ Station IP Address

Display IP Address information.

#### ➤ Subnet mask

Display Subnet Mask information.

Please note that the IP address must be in three digitals, for example, 192.168.000.001.

#### ➤ Router IP address

Display the Router IP Address information.

#### ➤ Station MAC Address

Display the MAC Address information.


#### ➤ Real-time synchronize BMC network parameter values

Press [Enter] to synchronize BMC network parameter values.



## 5-5 Security Menu

The Security menu allows you to safeguard and protect the system from unauthorized use by setting up access passwords.

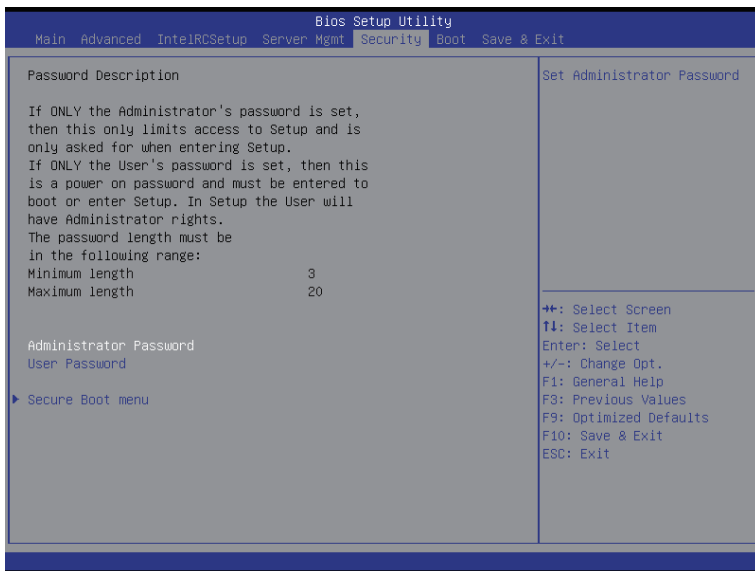

There are two types of passwords that you can set:

- **Administrator Password**  
Entering this password will allow the user to access and change all settings in the Setup Utility.
- **User Password**  
Entering this password will restrict a user's access to the Setup menus. To enable or disable this field, a Administrator Password must first be set. A user can only access and modify the System Time, System Date, and Set User Password fields.

### **Administrator Password**

Press Enter to configure the Administrator password.

### **User Password**

Press Enter to configure the user password.


### **Secure Boot menu**

Press [Enter] for configuration of advanced items.



## 5-5-1 Secure Boot menu

The Secure Boot Menu is applicable when your device is installed the Windows® 8 operatin system.

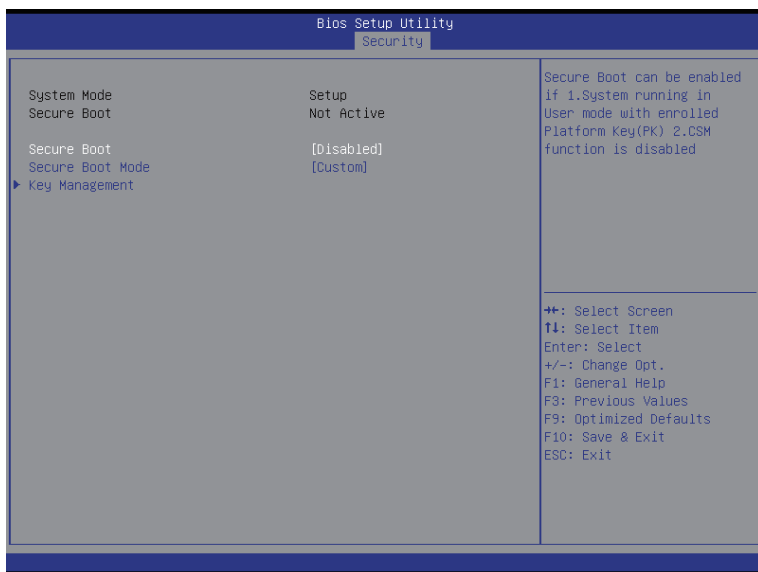

### 🔑 Secure Mode

Display the System secure mode state.

### 🔑 Secure Boot

Display the status of Secure Boot.

### 🔑 Secure Boot

Enable/Disable Secure Boot function.

Options available: Enabled/Disabled. Default setting is **Disabled**.

### 🔑 Secure Boot Mode

Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates. This way, the system knows all the files being loaded before Windows 8 loads and gets to the login screen have not been tampered with.

When set to Standard, it will automatically load the Secure Boot keys from the BIOS databases.

When set to Custom, you can customize the Secure Boot settings and manually load its keys from the BIOS database.

Options available: Standard/Custom. Default setting is **Custom**.


### 🔑 Key Management<sup>(Note)</sup>

Press [Enter] for configuration of advanced items.

(Note) Advanced items prompt when this item is set to **Custom**.



## 5-5-1-1 Key Management

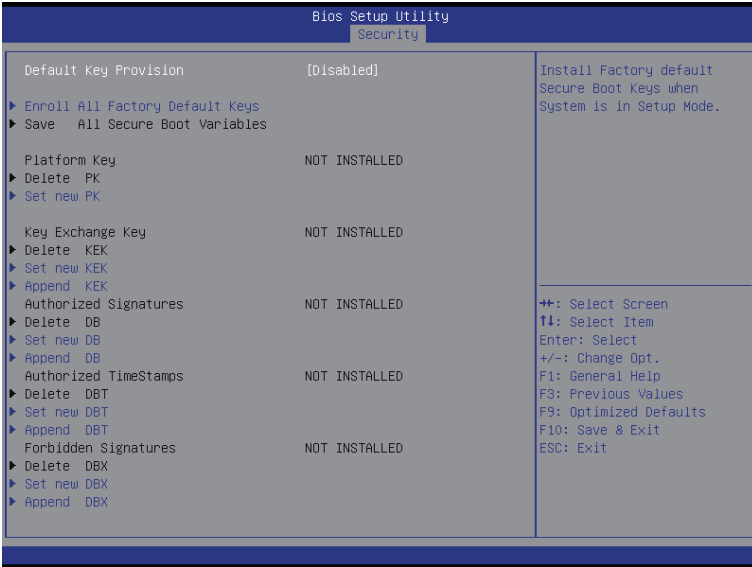

### 🔑 Default Key Provisioning

Force the system to Setup Mode. This will clear all Secure Boot Variables such as Platform Key (PK), Key-exchange Key (KEK), Authorized Signature Database (db), and Forbidden Signatures Database (dbx).

Options available: Enabled/Disabled. Default setting is **Disabled**.

### 🔑 Enroll All Factory Default Keys

Press [Enter] to install all factory default keys.

### 🔑 Save All Secure Boot Variables

Press [Enter] to save all Secure Boot Variables.

### 🔑 Platform Key (PK)

Display the status of Platform Key.

### 🔑 Delete the PK

Press [Enter] to delete the existed PK. Once the PK is deleted, all the system's Secure Boot keys will not be activated.

### 🔑 Set new PK File

Press [Enter] to configure a new PK.

### 🔑 Key Exchange Key Database (KEK)

Display the status of Platform Key.

### 🔑 Delete KEK

Press [Enter] to delete the KEK from your system.

### 🔑 Set new KEK

Press [Enter] to configure a new KEK.



☞ **Append Var to KEK**

Press [Enter] to load additional KEK from a storage devices for an additional db and dbx management.

☞ **Authorized Signature Database (DB)**

Display the status of Authorized Signature Database.

☞ **Delete DB**

Press [Enter] to delete the db from your system.

☞ **Set new DB**

Press [Enter] to configure a new db.

☞ **Append aVar to DB**

Press [Enter] to load additional db from a storage devices.

☞ **Forbidden Signature Database (DBX)**

Display the status of Forbidden Signature Database.

☞ **Delete the DBX**

Press [Enter] to delete the dbx from your system.

☞ **Set DBX from File**

Press [Enter] to configure a new dbx.


☞ **Append Var to DBX**

Press [Enter] to load additional db from a storage devices.



# 5-6 Boot Menu

The Boot menu allows you to set the drive priority during system boot-up. BIOS setup will display an error message if the legacy drive(s) specified is not bootable.

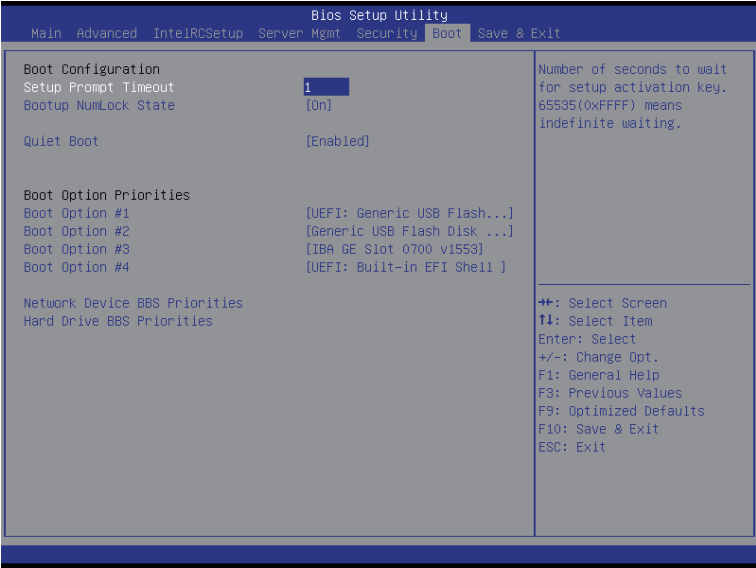

## Boot Configuration

### Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting."

Press the numeric keys to input the desired value.

### Bootup NumLock State

Enable or Disable Bootup NumLock function.

Options available: On/Off. Default setting is **On**.

### Quiet Boot

Enables or disables showing the logo during POST.

Options available: Enabled/Disabled. Default setting is **Enabled**.

### Boot Option Priorities

#### Boot Option #1/#2/#3#4

Press Enter to configure the boot priority.

By default, the server searches for boot devices in the following sequence:

1. UEFI device.
2. Hard drive.
3. Network device.
4. USB device



☞ **Network Device BBS Priorities**

Press Enter to configure the boot priority.


☞ **Hard Drive BBS Priorities**

Press Enter to configure the boot priority.



# 5-7 Save & Exit Menu

The Exit menu displays the various options to quit from the BIOS setup. Highlight any of the exit options then press **Enter**.

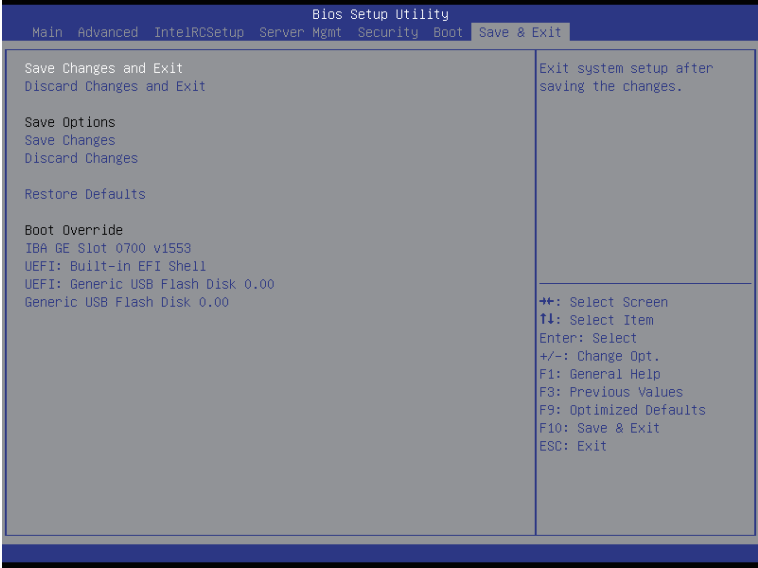

☞ **Save Changes and Exit**

Saves changes made and close the BIOS setup.

Options available: Yes/No.

☞ **Discard Changes and Exit**

Discards changes made and exit the BIOS setup.

Options available: Yes/No.

☞ **Save Options**

☞ **Save Changes**

Saves changes made in the BIOS setup.

Options available: Yes/No.

☞ **Discard Changes**

Discards changes made and close the BIOS setup.

Options available: Yes/No.

☞ **Restore Defaults**

Loads the default settings for all BIOS setup parameters. Setup Defaults are quite demanding in terms of resources consumption. If you are using low-speed memory chips or other kinds of low-performance components and you choose to load these settings, the system might not function properly.

Options available: Yes/No.



☞ **Boot Override**

Press Enter to configure the device as the boot-up drive.

☞ **UEFI: Built-in in EFI Shell**

Press <Enter> on this item to Launch EFI Shell from filesystem device.



## 5-8 BIOS POST Codes

|                                      |      |
|--------------------------------------|------|
| PEI_CORE_STARTED                     | 0x10 |
| PEI_CAR_CPU_INIT                     | 0x11 |
| // reserved for CPU 0x12 - 0x14      |      |
| PEI_CAR_NB_INIT                      | 0x15 |
| // reserved for NB 0x16 - 0x18       |      |
| PEI_CAR_SB_INIT                      | 0x19 |
| // reserved for SB 0x1A - 0x1C       |      |
| PEI_MEMORY_SPD_READ                  | 0x1D |
| PEI_MEMORY_PRESENCE_DETECT           | 0x1E |
| PEI_MEMORY_TIMING                    | 0x1F |
| PEI_MEMORY_CONFIGURING               | 0x20 |
| PEI_MEMORY_INIT                      | 0x21 |
| // reserved for OEM use: 0x22 - 0x2F |      |
| // reserved for AML use: 0x30        |      |
| PEI_MEMORY_INSTALLED                 | 0x31 |
| PEI_CPU_INIT                         | 0x32 |
| PEI_CPU_CACHE_INIT                   | 0x33 |
| PEI_CPU_BSP_SELECT                   | 0x34 |
| PEI_CPU_AP_INIT                      | 0x35 |
| PEI_CPU_SMM_INIT                     | 0x36 |
| PEI_MEM_NB_INIT                      | 0x37 |
| // reserved for NB 0x38 - 0x3A       |      |
| PEI_MEM_SB_INIT                      | 0x3B |
| // reserved for SB 0x3C - 0x3E       |      |
| // reserved for OEM use: 0x3F - 0x4E |      |
| PEI_DXE_IPL_STARTED                  | 0x4F |
| //Recovery                           |      |
| PEI_RECOVERY_AUTO                    | 0xF0 |
| PEI_RECOVERY_USER                    | 0xF1 |
| PEI_RECOVERY_STARTED                 | 0xF2 |
| PEI_RECOVERY_CAPSULE_FOUND           | 0xF3 |
| PEI_RECOVERY_CAPSULE_LOADED          | 0xF4 |
| //S3                                 |      |
| PEI_S3_STARTED                       | 0xE0 |
| PEI_S3_BOOT_SCRIPT                   | 0xE1 |
| PEI_S3_VIDEO_REPOST                  | 0xE2 |
| PEI_S3_OS_WAKE                       | 0xE3 |
| //DXE_STATUS_CODE                    |      |
| DXE_CORE_STARTED                     | 0x60 |
| DXE_NVRAM_INIT                       | 0x61 |



|                                     |      |
|-------------------------------------|------|
| DXE_SBRUN_INIT                      | 0x62 |
| DXE_CPU_INIT                        | 0x63 |
| //reserved for CPU 0x64 - 0x67      |      |
| DXE_NB_HB_INIT                      | 0x68 |
| DXE_NB_INIT                         | 0x69 |
| DXE_NB_SMM_INIT                     | 0x6A |
| //reserved for NB 0x6B - 0x6F       |      |
| DXE_SB_INIT                         | 0x70 |
| DXE_SB_SMM_INIT                     | 0x71 |
| DXE_SB_DEVICES_INIT                 | 0x72 |
| //reserved for SB 0x73 - 0x77       |      |
| DXE_ACPI_INIT                       | 0x78 |
| DXE_CSM_INIT                        | 0x79 |
| //reserved for AMI use: 0x7A - 0x7F |      |
| //reserved for OEM use: 0x80 - 0x8F |      |
| DXE_BDS_STARTED                     | 0x90 |
| DXE_BDS_CONNECT_DRIVERS             | 0x91 |
| DXE_PCI_BUS_BEGIN                   | 0x92 |
| DXE_PCI_BUS_HPC_INIT                | 0x93 |
| DXE_PCI_BUS_ENUM                    | 0x94 |
| DXE_PCI_BUS_REQUEST_RESOURCES       | 0x95 |
| DXE_PCI_BUS_ASSIGN_RESOURCES        | 0x96 |
| DXE_CON_OUT_CONNECT                 | 0x97 |
| DXE_CON_IN_CONNECT                  | 0x98 |
| DXE_SIO_INIT                        | 0x99 |
| DXE_USB_BEGIN                       | 0x9A |
| DXE_USB_RESET                       | 0x9B |
| DXE_USB_DETECT                      | 0x9C |
| DXE_USB_ENABLE                      | 0x9D |
| //reserved for AMI use: 0x9E - 0x9F |      |
| //reserved for AML use: 0xA0        |      |
| DXE_IDE_BEGIN                       | 0xA1 |
| DXE_IDE_RESET                       | 0xA2 |
| DXE_IDE_DETECT                      | 0xA3 |
| DXE_IDE_ENABLE                      | 0xA4 |
| DXE_SCSI_BEGIN                      | 0xA5 |
| DXE_SCSI_RESET                      | 0xA6 |
| DXE_SCSI_DETECT                     | 0xA7 |
| DXE_SCSI_ENABLE                     | 0xA8 |
| DXE_SETUP_VERIFYING_PASSWORD        | 0xA9 |
| //reserved for AML use: 0xAA        |      |
| DXE_SETUP_START                     | 0xAB |



|                                     |      |
|-------------------------------------|------|
| DXE_SETUP_INPUT_WAIT                | 0xAC |
| DXE_READY_TO_BOOT                   | 0xAD |
| DXE_LEGACY_BOOT                     | 0xAE |
| DXE_EXIT_BOOT_SERVICES              | 0xAF |
| RT_SET_VIRTUAL_ADDRESS_MAP_BEGIN    | 0xB0 |
| RT_SET_VIRTUAL_ADDRESS_MAP_END      | 0xB1 |
| DXE_LEGACY_OPROM_INIT               | 0xB2 |
| DXE_RESET_SYSTEM                    | 0xB3 |
| DXE_USB_HOTPLUG                     | 0xB4 |
| DXE_PCI_BUS_HOTPLUG                 | 0xB5 |
| DXE_NVRAM_CLEANUP                   | 0xB6 |
| DXE_CONFIGURATION_RESET             | 0xB7 |
| //reserved for AMI use: 0xB8 - 0xBF |      |
| //reserved for OEM use: 0xC0 - 0xCF |      |
| //PEI_STATUS_CODE                   |      |
| //Errors                            |      |
| //Regular boot                      |      |
| PEI_MEMORY_INVALID_TYPE             | 0x50 |
| PEI_MEMORY_INVALID_SPEED            | 0x50 |
| PEI_MEMORY_SPD_FAIL                 | 0x51 |
| PEI_MEMORY_INVALID_SIZE             | 0x52 |
| PEI_MEMORY_MISMATCH                 | 0x52 |
| PEI_MEMORY_NOT_DETECTED             | 0x53 |
| PEI_MEMORY_NONE_USEFUL              | 0x53 |
| PEI_MEMORY_ERROR                    | 0x54 |
| PEI_MEMORY_NOT_INSTALLED            | 0x55 |
| PEI_CPU_INVALID_TYPE                | 0x56 |
| PEI_CPU_INVALID_SPEED               | 0x56 |
| PEI_CPU_MISMATCH                    | 0x57 |
| PEI_CPU_SELF_TEST_FAILED            | 0x58 |
| PEI_CPU_CACHE_ERROR                 | 0x58 |
| PEI_CPU_MICROCODE_UPDATE_FAILED     | 0x59 |
| PEI_CPU_NO_MICROCODE                | 0x59 |
| PEI_CPU_INTERNAL_ERROR              | 0x5A |
| PEI_CPU_ERROR                       | 0x5A |
| PEI_RESET_NOT_AVAILABLE             | 0x5B |
| //reserved for AMI use: 0x5C - 0x5F |      |
| //Recovery                          |      |
| PEI_RECOVERY_PPI_NOT_FOUND          | 0xF8 |
| PEI_RECOVERY_NO_CAPSULE             | 0xF9 |
| PEI_RECOVERY_INVALID_CAPSULE        | 0xFA |
| //reserved for AMI use: 0xFB - 0xFF |      |



|                                     |      |
|-------------------------------------|------|
| //S3 Resume                         |      |
| PEI_MEMORY_S3_RESUME_FAILED         | 0xE8 |
| PEI_S3_RESUME_PPI_NOT_FOUND         | 0xE9 |
| PEI_S3_BOOT_SCRIPT_ERROR            | 0xEA |
| PEI_S3_OS_WAKE_ERROR                | 0xEB |
| //reserved for AMI use: 0xEC - 0xEF |      |
| // DXE_STATUS_CODE                  |      |
| DXE_CPU_ERROR                       | 0xD0 |
| DXE_NB_ERROR                        | 0xD1 |
| DXE_SB_ERROR                        | 0xD2 |
| DXE_ARCH_PROTOCOL_NOT_AVAILABLE     | 0xD3 |
| DXE_PCI_BUS_OUT_OF_RESOURCES        | 0xD4 |
| DXE_LEGACY_OPROM_NO_SPACE           | 0xD5 |
| DXE_NO_CON_OUT                      | 0xD6 |
| DXE_NO_CON_IN                       | 0xD7 |
| DXE_INVALID_PASSWORD                | 0xD8 |
| DXE_BOOT_OPTION_LOAD_ERROR          | 0xD9 |
| DXE_BOOT_OPTION_FAILED              | 0xDA |
| DXE_FLASH_UPDATE_FAILED             | 0xDB |
| DXE_RESET_NOT_AVAILABLE             | 0xDC |
| //reserved for AMI use: 0xDE - 0xDF |      |



## 5-9 BIOS POST Beep code

### 5-9-1 PEI Beep Codes

| # of Beeps | Description  |
|------------|--|
| 1          | Memory not Installed.  |
| 1          | Memory was installed twice (InstallPeiMemory routine in PEI Core called twice) |
| 2          | Recovery started   |
| 3          | DXE IPL was not found  |
| 3          | DXE Core Firmware Volume was not found   |
| 4          | Recovery failed  |
| 4          | S3 Resume failed   |
| 7          | Reset PPI is not available   |

### 5-9-2 DEX Beep Codes

| # of Beeps | Description   |
|------------|---|
| 1          | Invalid password                                      |
| 4          | Some of the Architectural Protocols are not available |
| 5          | No Console Output Devices are found                   |
| 5          | No Console Input Devices are found                    |
| 6          | Flash update is failed                                |
| 7          | Reset protocol is not available                       |




## 5-10 BIOS Recovery Instruction

The system has an embedded recovery technique. In the event that the BIOS becomes corrupt the boot block can be used to restore the BIOS to a working state. To restore your BIOS, please follow the instructions listed below:

### Recovery Instruction:

1. Change xxx.ROM to amiboot.rom.
2. Copy amiboot.rom and AFUDOS.exe to USB diskette.
3. Setting BIOS Recovery jump to enabled status.

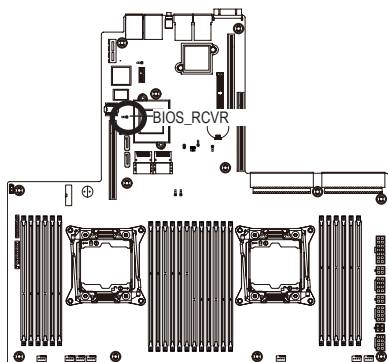

4. Boot into BIOS recovery.
5. Run Proceed with flash update.
6. BIOS update.

