
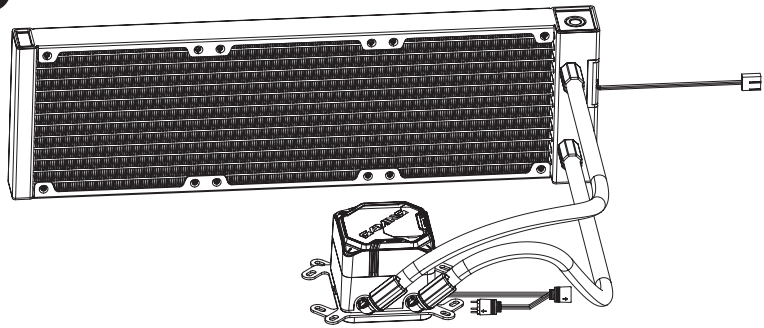
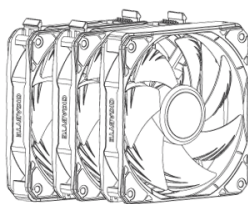
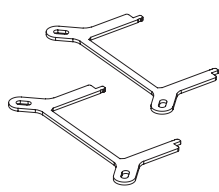
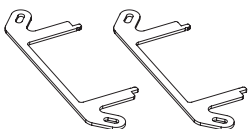
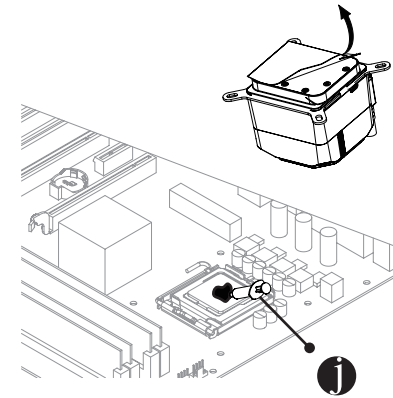


GIGABYTE GAMING 360 ICE / GIGABYTE GAMING 360 Installation Guide


Package Contents / 包裝內容 / 包裝內容 / パッケージ内容 / 패키지 내용물 / पैकेज की सामग्री / สิ่งของภายในกล่อง / Packungsinhalt / Contenido del paquete / Contenu de l'emballage / Содержимое упаковки / Paket İçeriği / محتويات العبوة

a 		b 			
12cm fans x 3 12cm 風扇 x 3 12cm 風扇 x 3		12cm ファン x 3 12cm 팬 x 3 12 सेमी फैन x 3		พัดลม 12 ซม. x 3 12 cm Lüfter x 3 Ventiladores de 12 cm x 3	
GIGABYTE GAMING 360 ICE / GIGABYTE GAMING 360					
c 		d 		e 	
Intel Mounting Bracket Intel 安裝支架 Intel 安裝支架 Intel マウントブラケット Intel 장착 브래킷 Intel माउंटिंग ब्रेकेट ขายึด Intel	Intel Montageschiene Soporte de montaje Intel AMD 安裝支架 Soporte de montaje Intel AMD 安裝支架 Soporte de montaje AMD 				


Intel LGA1851 / 1700 / 1200 / 115x Socket

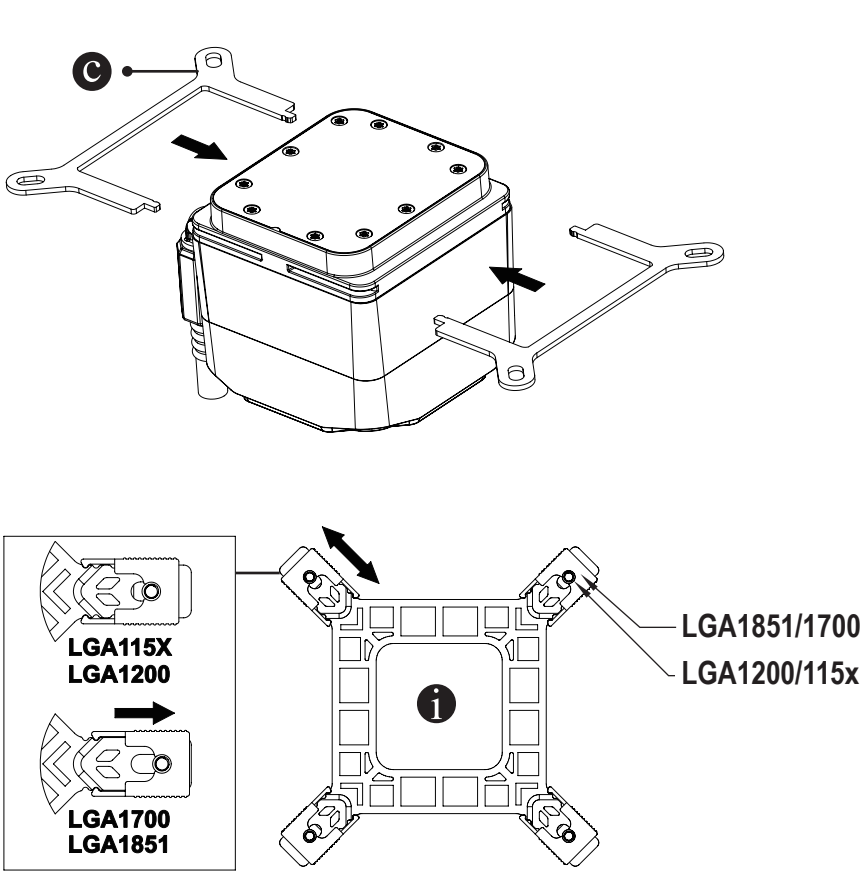


Notice: Please remove the protect tape before installing
注意: 安裝前請先撕下保護膜
注意: 安裝前請移除保護膠膜
注意: インストール前に保護テープを取り外してください
주의: 설치 전에 보호 테이프를 제거하십시오.
सूचना: कृपया इंस्टॉल करने से पहले सुरक्षा टेप हटा दें
หมายเหตุ: กรุณาเอาเทปป้องกันออกก่อนติดตั้ง
Hinweis: Bitte entfernen Sie das Schutzband vor der Installation
Nota: Por favor, retire la cinta protectora antes de la instalación
Remarque: Veuillez retirer le ruban de protection avant l'installation
Внимание: Пожалуйста, удалите защитную ленту перед установкой
Uyarı: Lütfen kurulumdan önce koruyucu bandı çıkarın
ملاحظة: يرجى إزالة الشريط الوقائي قبل التثبيت

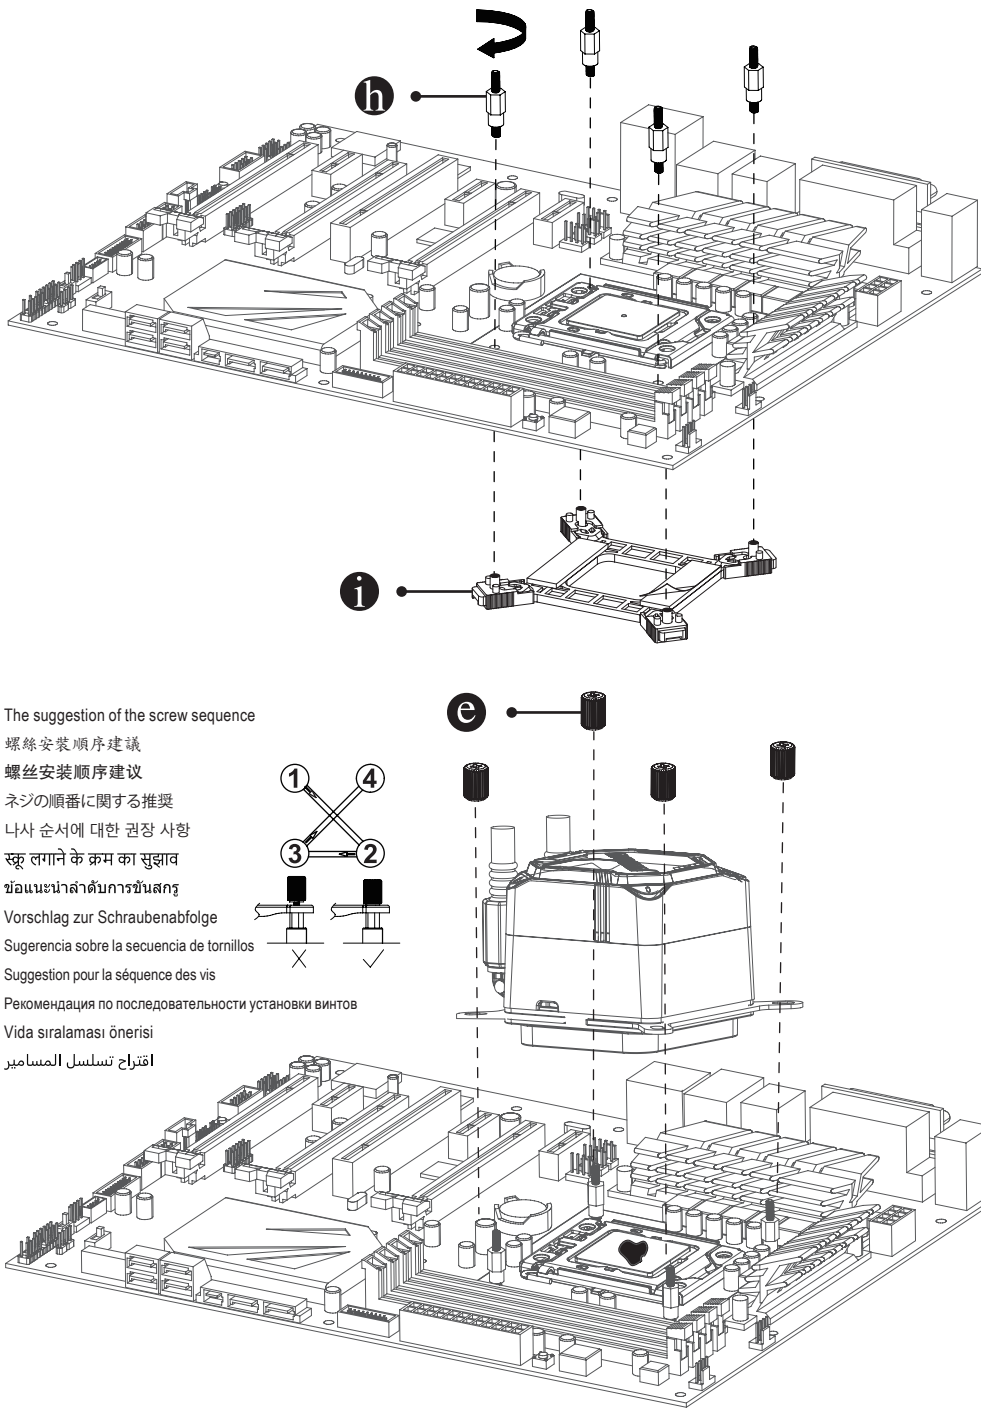

The suggestion of the screw sequence
螺絲安裝順序建議
螺丝安装顺序建议
ネジの順番に関する推奨
나사 순서에 대한 권장 사항
स्कू लगाने के क्रम का सुझाव
ချော့မေးပေးသောစကားစာအုပ်
Vorschlag zur Schraubenabfolge
Sugerencia sobre la secuencia de tornillos
Suggestion pour la séquence des vis
Рекомендация по последовательности установки винтов
Vida sıralaması önerisi
اقترح تسلسل المسامير

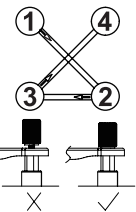

AMD AM5 / AM4 Socket

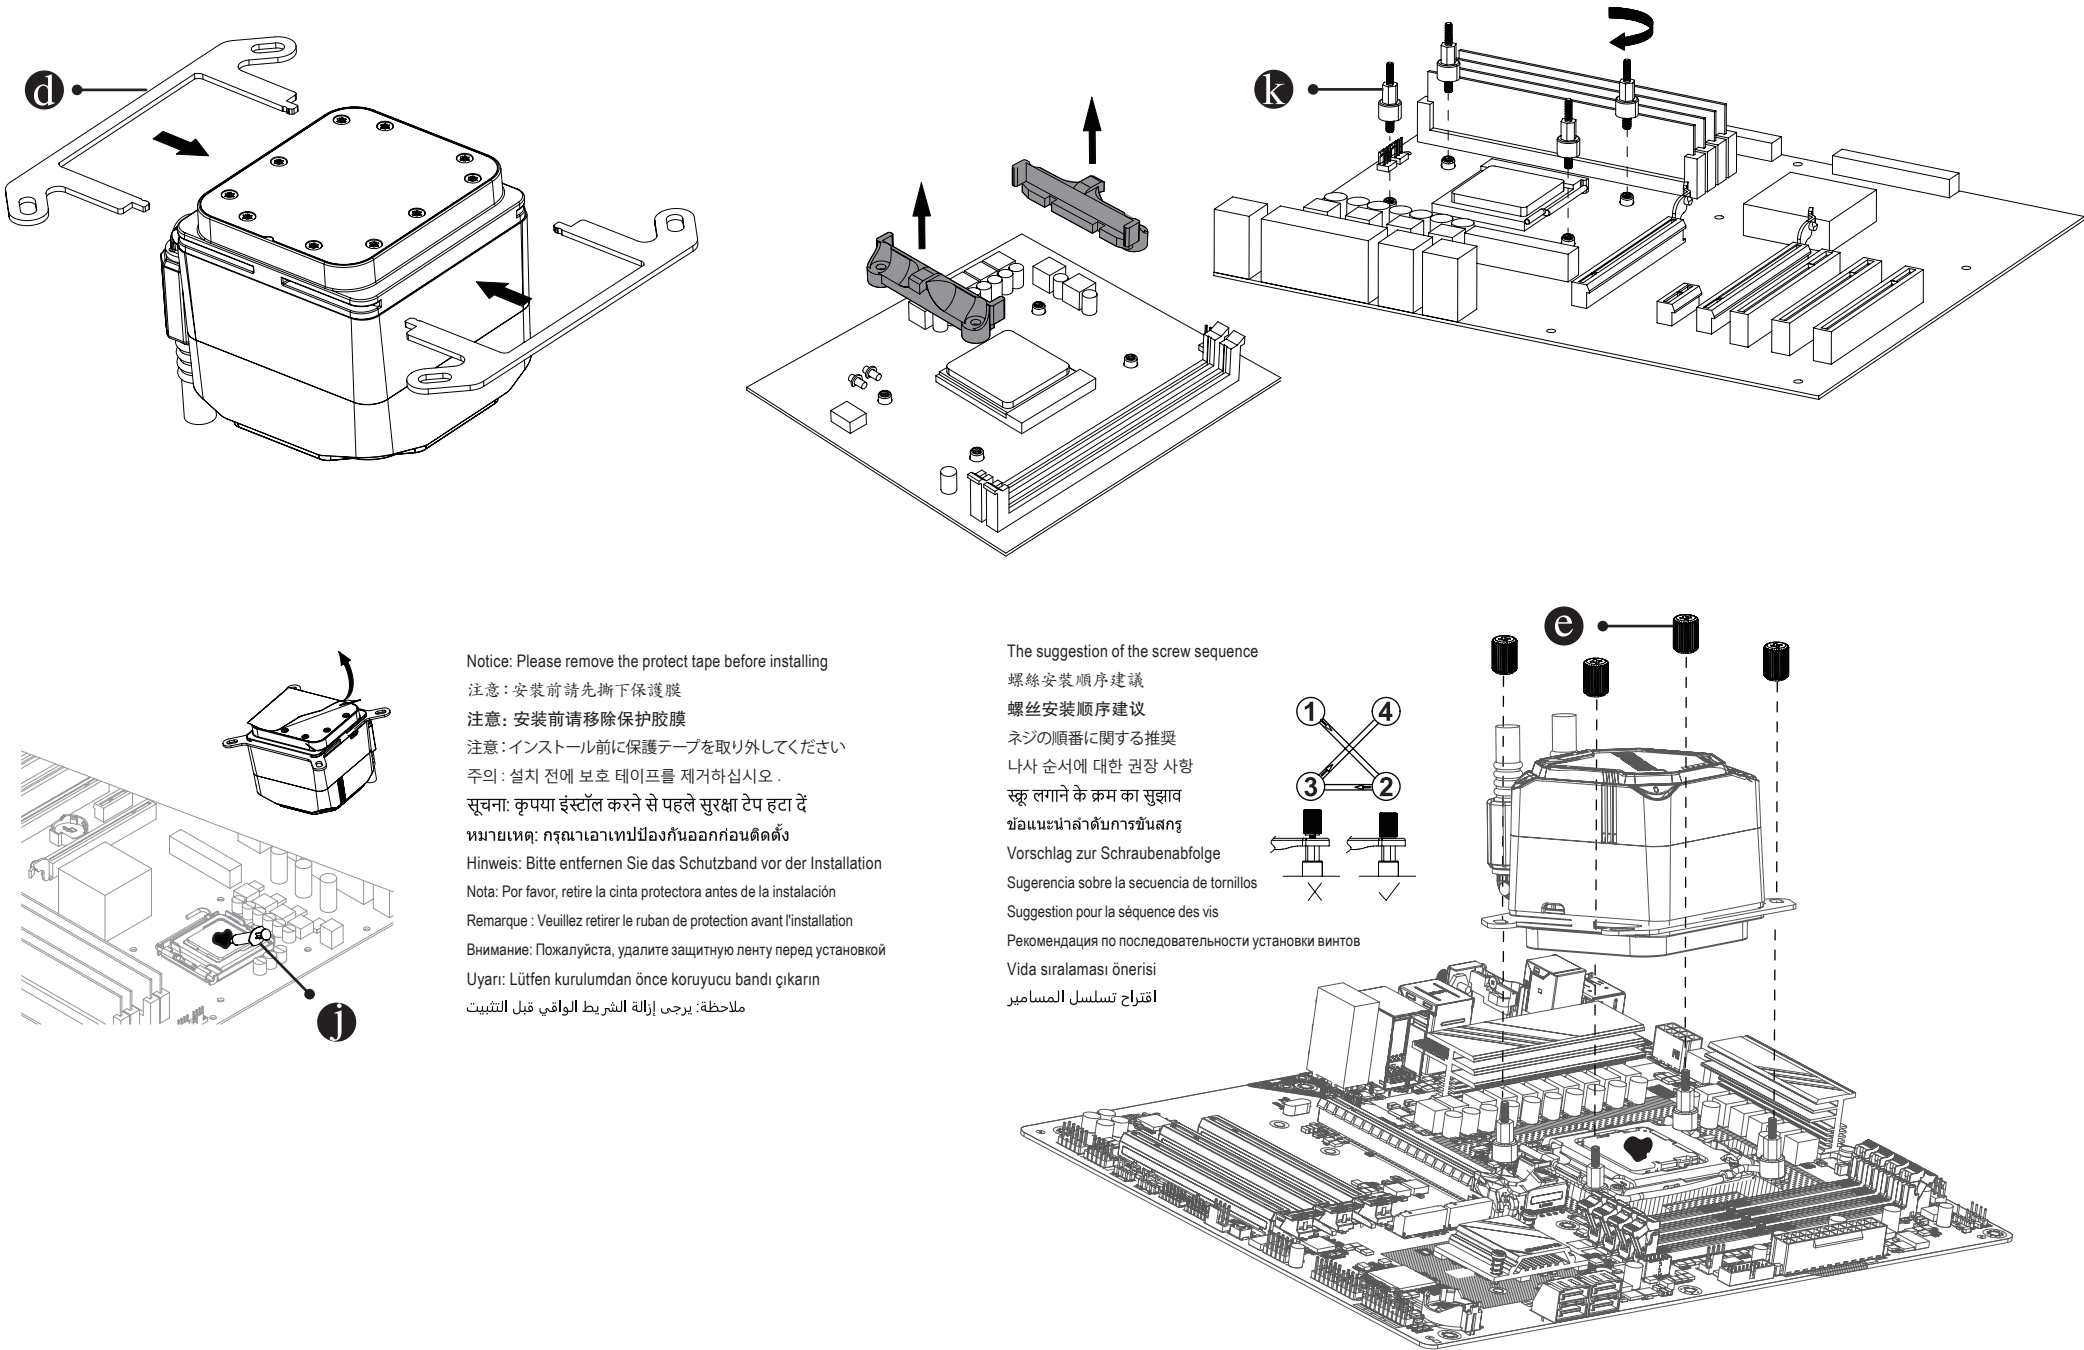



Notice: Please remove the protect tape before installing
注意：安裝前請先撕下保護膜
注意：安裝前請移除保護膠膜
注意：インストール前に保護テープを取り外してください
주의 : 설치 전에 보호 테이프를 제거하십시오 .
सूचना: कृपया ईस्टॉल करने से पहले सुरक्षा टेप हटा दें
หมายเหตุ: กรุณาเอาเทปป้องกันออกก่อนติดตั้ง
Hinweis: Bitte entfernen Sie das Schutzband vor der Installation
Nota: Por favor, retire la cinta protectora antes de la instalación
Remarque : Veuillez retirer le ruban de protection avant l'installation
Внимание: Пожалуйста, удалите защитную ленту перед установкой
Uyarı: Lüften kurulumdan önce koruyucu bandı çıkarın
ملاحظة: يرجى إزالة الشريط الواقي قبل التثبيت

The suggestion of the screw sequence
螺絲安裝順序建議
螺丝安装顺序建议
ネジの順番に関する推奨
나사 순서에 대한 권장 사항
स्कू लगाने के क्रम का सुझाव
ข้อแนะนำลำดับการขันสกรู
Vorschlag zur Schraubenabfolge
Sugerencia sobre la secuencia de tornillos
Suggestion pour la séquence des vis
Рекомендация по последовательности установки винтов
Vida sıralaması önerisi
اقترح تسلسل المسامير

Installation / Cable Connection

Installation / 安裝 / 安装 / インストール / 설치 / स्थापना / การติดตั้ง / Installation / Instalación / Installation / Установка / Kurulum / التثبيت

Cable Connection / 連接線安裝 / 連接線安裝 / ケーブル接続 / 케이블 연결 / केबल कनेक्शन / การเชื่อมต่อสายเคเบิล / Kabelverbindung / Conexión de cables / Connexion de câbles / Подключение кабеля / Kablo Bağlantısı / الاتصال بالكابل

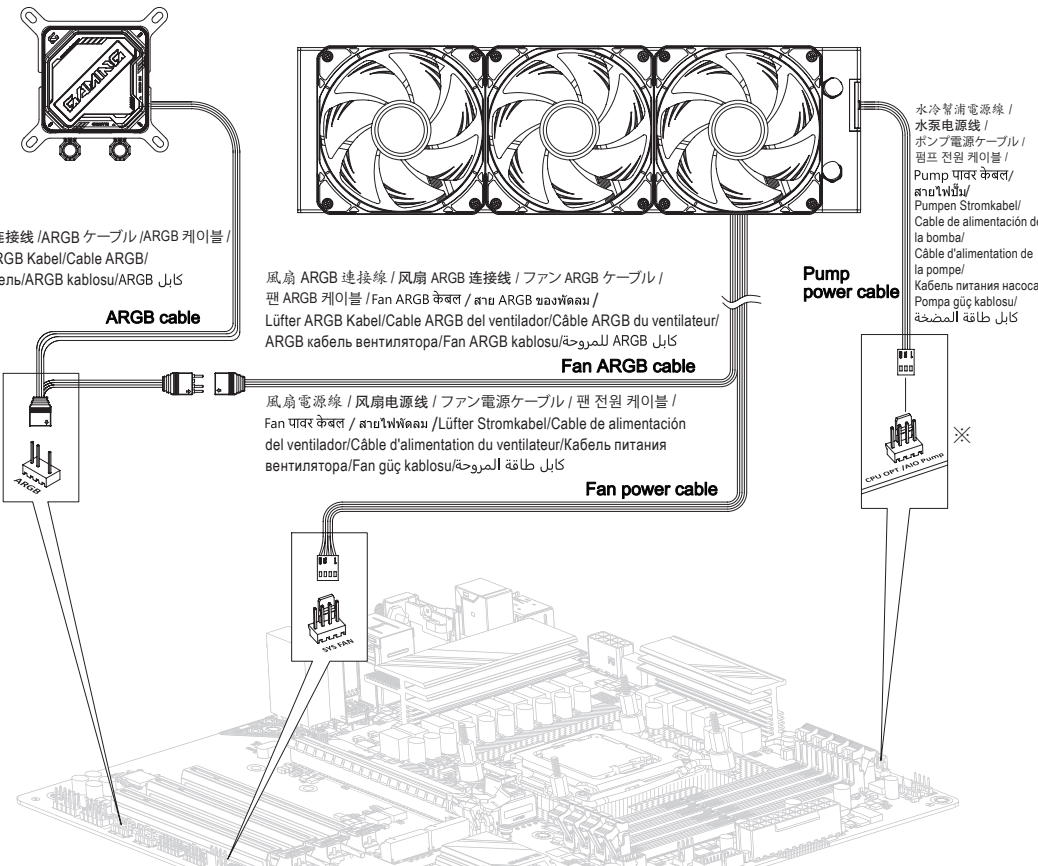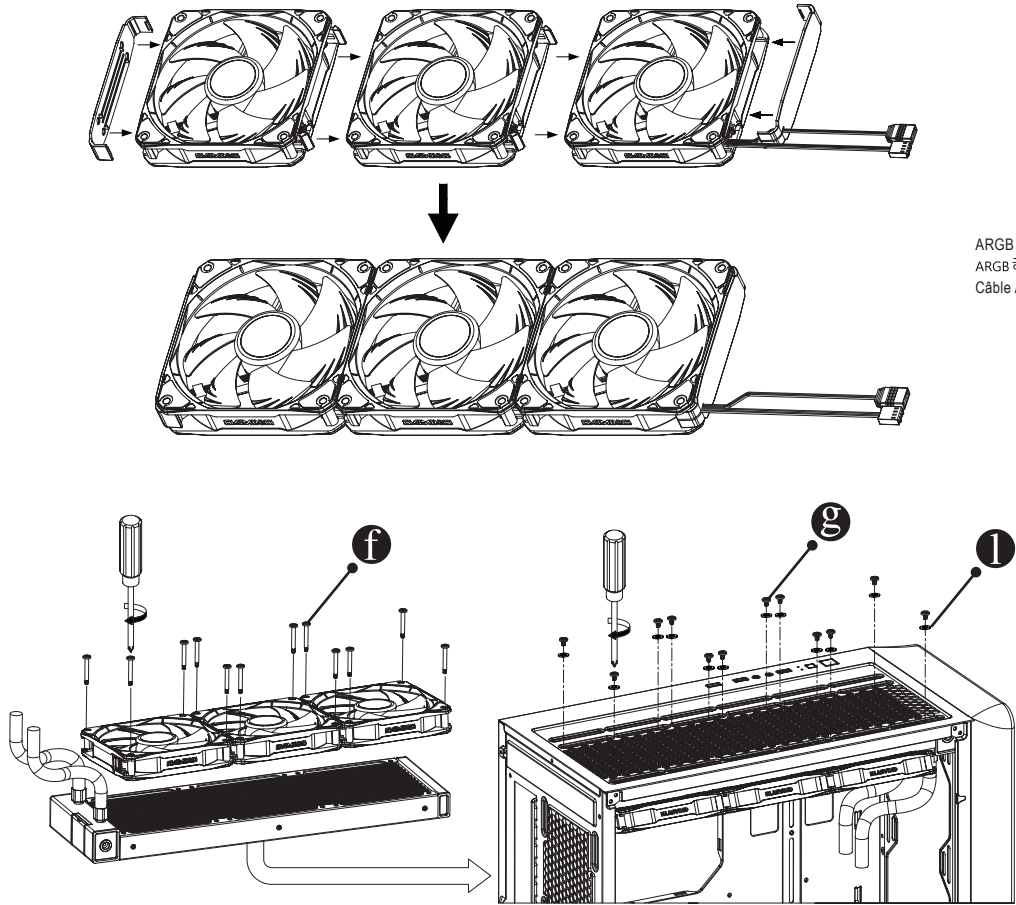

- ※ Set a fixed max speed of 4500 RPM for optimal cooling. The pump speed is controlled through voltage mode.
- ※ 建議設定固定的最大轉速為 4500 RPM，以保持最佳散熱效果。幫浦轉速透過電壓模式控制。
- ※ 建議設置固定最大轉速 4500 RPM，以保持最佳散熱性能。水泵轉速透過電壓模式控制。
- ※ 最適な冷却のために最大回転数を 4500 RPM に固定します。ポンプの速度は電圧モードで制御されます。
- ※ 최적의 냉각을 위해 최대 속도를 4500 RPM 으로 고정합니다. 펌프 속도는 전압 모드로 제어됩니다.
- ※ इष्टतम शीतलन के लिए अधिकतम गति 4500 RPM पर निर्धारित करें। पंप की गति वोल्टेज मोड द्वारा नियंत्रित होती है।
- ※ ตั้งค่าความเร็วสูงสุดคงที่ที่ 4500 RPM เพื่อการระบายความร้อนที่ดีที่สุด ความเร็วของปั๊มถูกควบคุมด้วยโหมดแรงดันไฟฟ้า
- ※ Eine feste maximale Drehzahl von 4500 U/min für optimale Kühlung festlegen. Die Pumpengeschwindigkeit wird über den Spannungsmodus gesteuert.
- ※ Establezca una velocidad máxima fija de 4500 RPM para una refrigeración óptima. La velocidad de la bomba se controla mediante el modo de voltaje.
- ※ Réglez une vitesse maximale fixe de 4500 tr/min pour un refroidissement optimal. La vitesse de la pompe est contrôlée via le mode tension.
- ※ Установите фиксированную максимальную скорость 4500 об/мин для оптимального охлаждения. Скорость насоса регулируется в режиме напряжения.
- ※ Optimum soğutma için sabit maksimum hız 4500 RPM olarak ayarlanmalıdır. Pompa hızı voltaj modu ile kontrol edilir.
- ※ قم بتعيين سرعة قصوى ثابتة تبلغ 4500 دورة في الدقيقة لتحقيق التبريد الأمثل. يتم التحكم في سرعة المضخة من خلال وضع الجهد.



Contact Us

GIGA-BYTE TECHNOLOGY CO., LTD.
技嘉科技股份有限公司
Address: No.6, Baoqiang Rd., Xindian Dist., New Taipei City 231
地址：新北市231新店區寶強路6號
TEL: +886-2-8912-4000, FAX: +886-2-8912-4005
Tech. and Non-Tech. Support (Sales/Marketing) : https://esupport.gigabyte.com
WEB address (English): https://www.gigabyte.com
WEB address (Chinese): https://www.gigabyte.com/tw

Copyright
© 2025 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.
The trademarks mentioned in this manual are legally registered to their respective owners.
Disclaimer
Information in this manual is protected by copyright laws and is the property of GIGABYTE. Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice.
No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission. For product-related information, check on our website at: https://www.gigabyte.com



GIGABYTE™