GIGABYTE™

GAMING MONITOR

USER GUIDE

AORUS ELITE FO32U24G (FO32U24G)

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Copyright

© 2026 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in this manual are legally registered to their respective owners.

Disclaimer

Information in this manual is protected by copyright laws and is the property of GIGABYTE.

Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice.

No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

- In order to assist in the use of this monitor, carefully read the User Guide.
- For more information, check on our website at: https://www.gigabyte.com

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

CONTENTS

INTRODUCTION 4
- Package Contents 4
- Peeling off the Screen Protective Film Using the Peel Tab 5
- Product Overview 6
- Preparing your Monitor for Wall-Mounting 7

USING THE DEVICE 7
- Turning the Power On/Off 7

OPERATIONS 8
- Selecting the Input Source 8
- Elite Menu 8
- Quick Switch 9
- Main Menu Guide 10

APPENDICES 21
- Specifications 21
- Supported Timing List 22
- Supported Timing List (PIP/PBP) 23
- Troubleshooting 24
- Basic Care 24
- GIGABYTE Service Information 24


SAFETY INFORMATION 25
- Safety Precautions 25
- Information on Rating Label 25
- Stability Hazard Precautions 26
- User Comfort Recommendations 26

REGULATORY INFORMATION 27


INTRODUCTION

Package Contents

The following items come with your packaging box. If any of them is missing, please contact your local dealer.

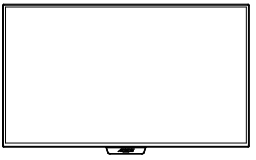

Monitor



Monitor Base




Stand




VESA Mount Adapter



Power Cable

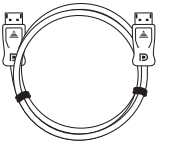

DP Cable

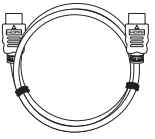

HDMI Cable



Cable clip



Quick Start Guide



Warranty Card



Color Calibration Report

Note:


Please keep the packaging box and packing materials for possible transportation of the monitor.

Please note that some parts of the base and stand have sharp edges; however, they will not scratch the skin under normal use. To avoid discomfort, please refrain from gripping the top of the stand directly or lifting the base and stand by the corners.


Peeling off the Screen Protective Film Using the Peel Tab

Instructions on Using the Peel Tab:

1. The peel tab is located as indicated by the red arrow in the picture below.

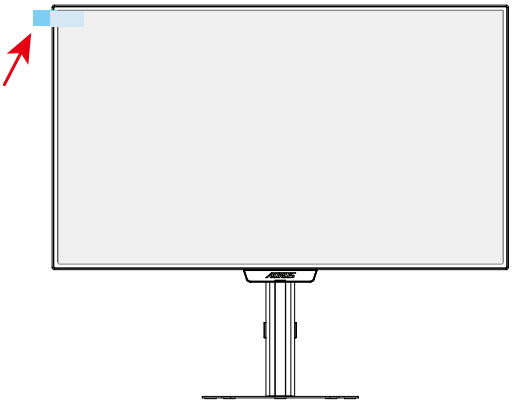


2. Remove the screen protective film in the direction indicated by the red arrow in the picture below.
   Note: To prevent damage to the screen, please avoid using fingernails or any sharp objects to peel off the protective film. Instead, use adhesive tape to lift and remove the protective film.

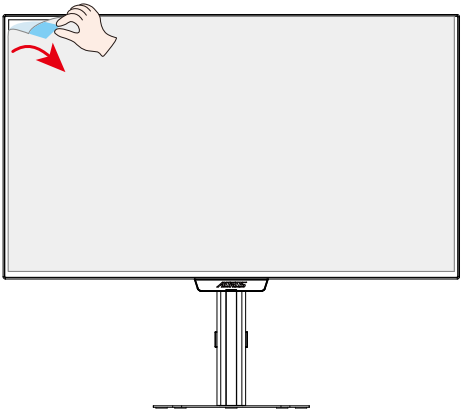


Product Overview

Front View

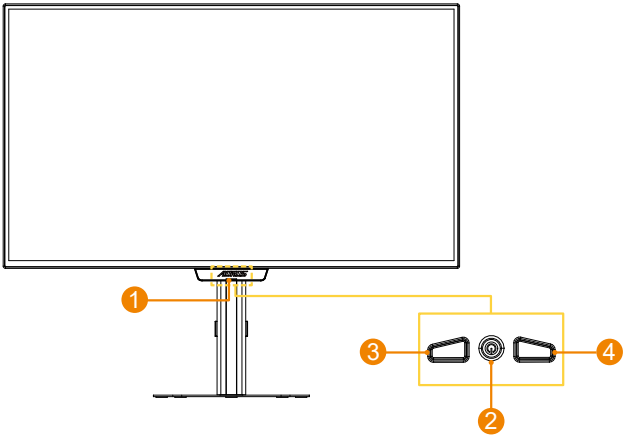

1 Power LED
2 Control button
3 Power off
4 Tactical switch

Rear View

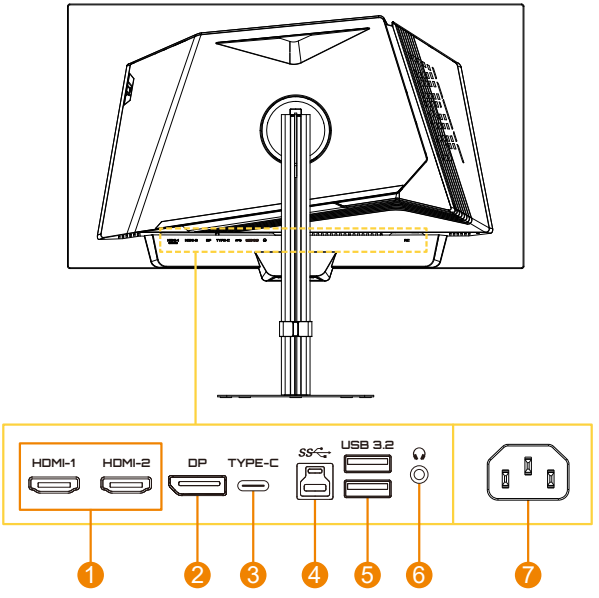

1 HDMI ports (x2)
2 DisplayPort
3 USB Type-C port
4 USB upstream port
5 USB 3.2 ports (x2)
6 Headphone jack
7 AC IN jack

Preparing your Monitor for Wall-Mounting


Note: Use only a 100 x 100 mm VESA compatible wall mount kit to mount the monitor on the wall. Refer to the installation guide included in the wall-mount bracket kit. VESA mounting screw quantity and size: 4 x M4 x 10mm minimum.

USING THE DEVICE

Turning the Power On/Off

Power On

1. Connect one end of the power cable to the AC IN jack at the rear of the monitor.
2. Connect other end of the power cable to a power outlet.
3. Press the **Control** button to turn on the monitor. The Power LED will light in white, indicating the monitor is ready to use.

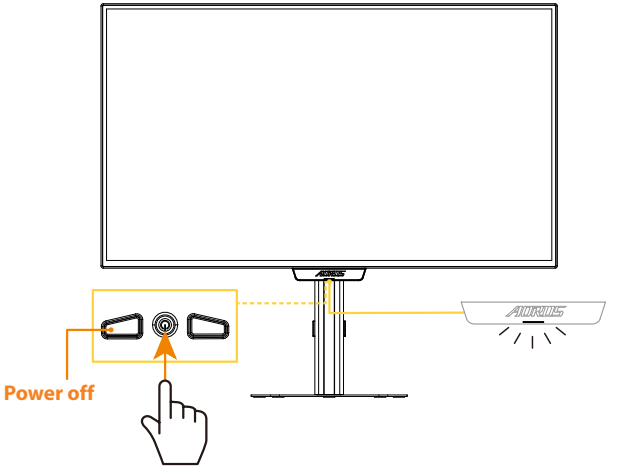


Power Off

- Press the **Control** button for 2 seconds to turn off the monitor.
- Press the Power off button (Refer to "Front View" on page 6).

OPERATIONS

Selecting the Input Source


1. Move the **Control** button right (‹◈›) to enter the **Input** menu or open the **Elite** menu and select the **Input** item.
2. Move the **Control** button up/down (‹◈›) to select the desired input source. Then press the **Control** button to confirm.

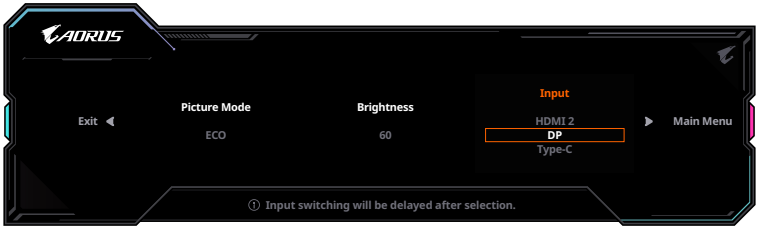

Elite Menu

To access the **Elite** menu functions, do the following:



1. Press the center of the **Control** button to open the **Elite** menu.
2. Move the **Control** button left/right (‹◈›) to select items you wish to adjust.
3. Move the **Control** button up/down (‹◈›) to adjust the selected items.
4. Move the selection to the rightmost option to open the **Main** Menu for more settings.
5. To close the **Elite** menu, press the center of the **Control** button again or move the selection to the leftmost option.

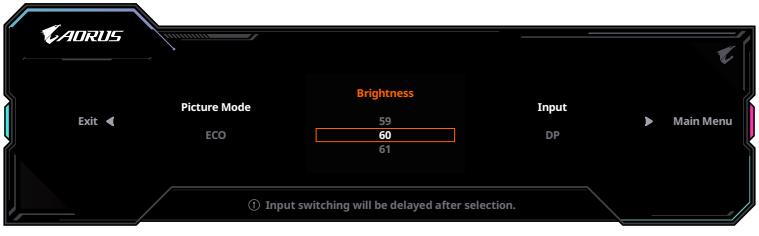

Quick Switch


By default, the **Control** button has been assigned with the specific function.

To access the Quick Switch functions, do the following:

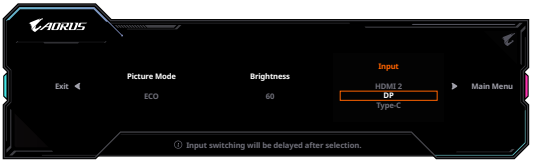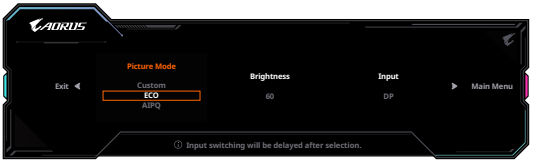Switch Up	Press the center of the **Control** button or move the **Control** button up (‹◆›) to open the **Brightness** menu. Move the **Control** button up/down (‹◆›) to adjust the setting and press the **Control** button to confirm. 
Switch Right	Move the **Control** button right (‹◆›) to enter the **Input** menu. Refer to the "Selecting the Input Source" section. 
Switch Left	Move the **Control** button left (‹◆›) to open the **Picture Mode** menu. Move the **Control** button up/down (‹◆›) to select the desired option and press the **Control** button to confirm. 
Switch Down	Move the **Control** button down (‹◆›) to enter the **Main** menu.

Main Menu Guide

To open the **Main** Menu, move the **Control** button down (‹◆›), or move the selection to the rightmost option when the **Elite** menu is open.

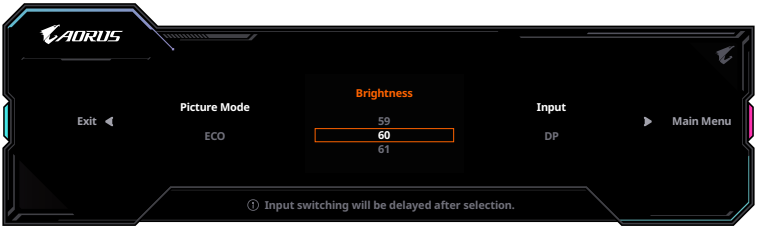


Then use the **Control** button (up/down/left/right) to select a function page and configure the related settings.



Settings > Gaming


Configure the gaming related settings.

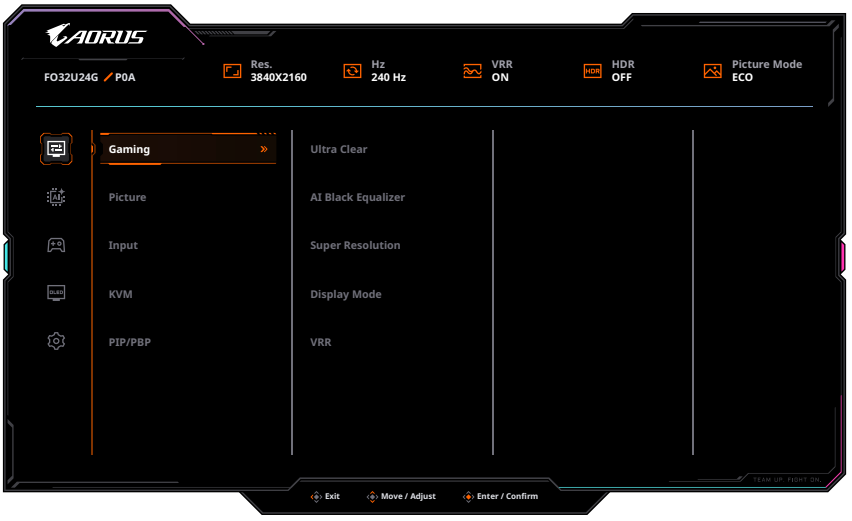

Item	Description
Ultra Clear	When this function is enabled, it reduces the motion blur in a fast moving games. **Note:** This function is available when the frequency is set to 120Hz.
AI Black Equalizer	Adjust the visibility of dark areas in the image to enhance details and improve visibility in dark scenes.
Super Resolution	Enhance the overall image quality to provide sharper detailed visuals.
Display Mode	Select the screen aspect ratio.
VRR	Enable/Disable receiving VRR signal.

Settings > Picture

Configure the image related settings.

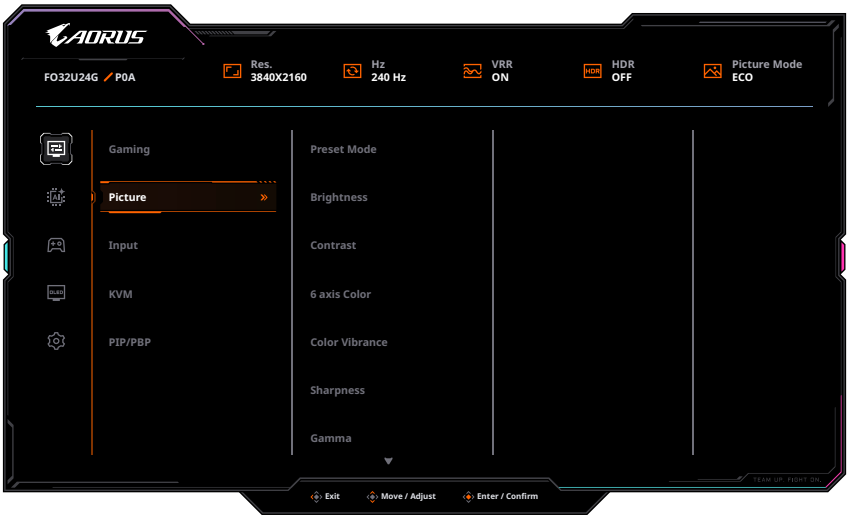


Item	Description
Preset Mode	Select a predefined picture mode for different usage scenarios (e.g., Standard, Movie, Reader).
Brightness	Adjust the brightness of the image.
Contrast	Adjust the contrast of the image.
6 axis Color	An advanced color adjustment that user can individually customize hue and saturation for each axis color. **Note:** 6-axis Color is only available when **Preset Mode** is set to **Custom**.
Color Vibrance	Adjust the intensity of the more muted colors.
Sharpness	Adjust the sharpness of the image.
Gamma	Adjust the middle level of luminance.
Color Temperature	Select the color temperature. **Note:** Select **User Define** to customize the color temperature by adjusting the red (R), green (G), or blue (B) level according to your preference.
Reset Picture	Reset all **Picture** settings to their factory defaults.

Note: The Monitor uses a Low Blue Light panel and is compliant with TÜV Rheinland Low Blue Light Hardware Solution at factory reset/default setting mode.

Settings > Input


Configure the input source related settings.

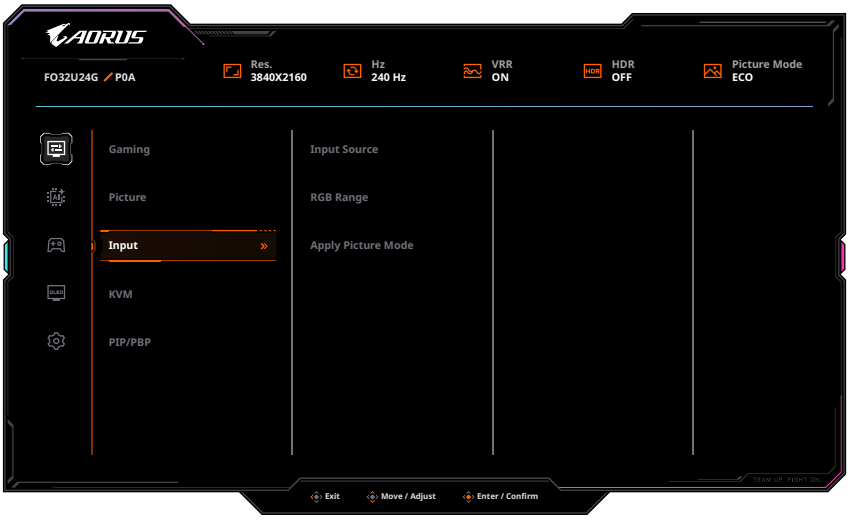

Item	Description
Input Source	Select the input source.
RGB Range	Manually set the range of RGB or auto-detect.
Apply Picture Mode	Set the Picture mode to apply to all input sources, or the current input source.

Settings > KVM


Configure the KVM related settings.

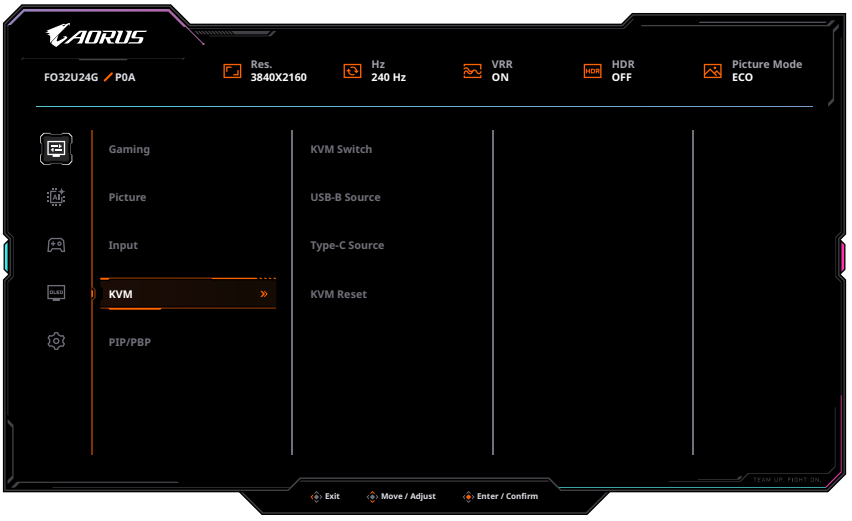

Item	Description
KVM Switch	Switch between the USB-B Source and Type-C Source devices.
USB-B Source	Assign the video input source that pairs with the USB-B upstream connection.
Type-C Source	Assign the video input source that pairs with the Type-C connection.
KVM Reset	Reset the KVM settings to default.

Settings > PIP/PBP

Configure the Picture-In-Picture and Picture-By-Picture related settings.

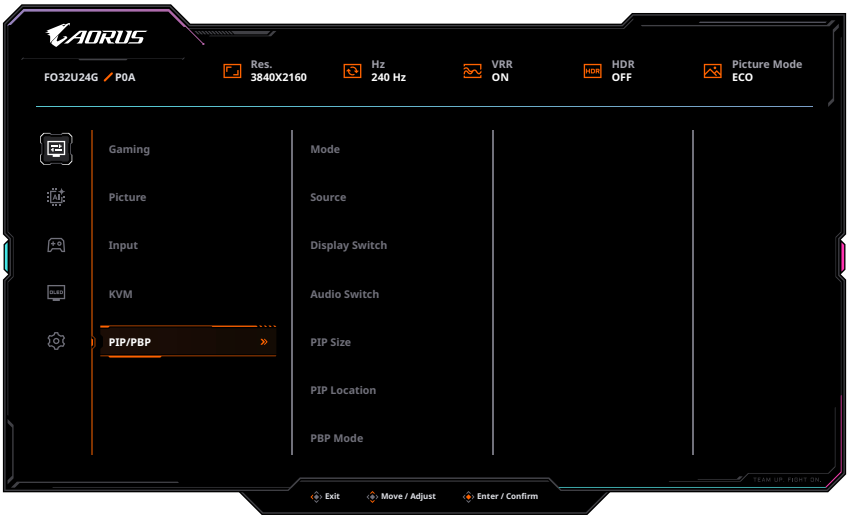


Item	Description
Mode	Select to turn the PIP or PBP mode On or Off.
Source	Select the input source for the Sub window.
Display Switch	Swap the video sources between the Main window and the Sub windows.
Audio Switch	Swap the audio sources between the Main window and the Sub windows.
PIP Size	Adjust the size of the Sub window in PIP mode.
PIP Location	Adjust the position of the Sub window on the screen.
PBP Mode	Select how the input signals are displayed within the PBP windows.

Note: PIP/PBP function cannot be enabled when receiving HDR and VRR signals.

AI Assistant

Configure advanced AI-driven settings.

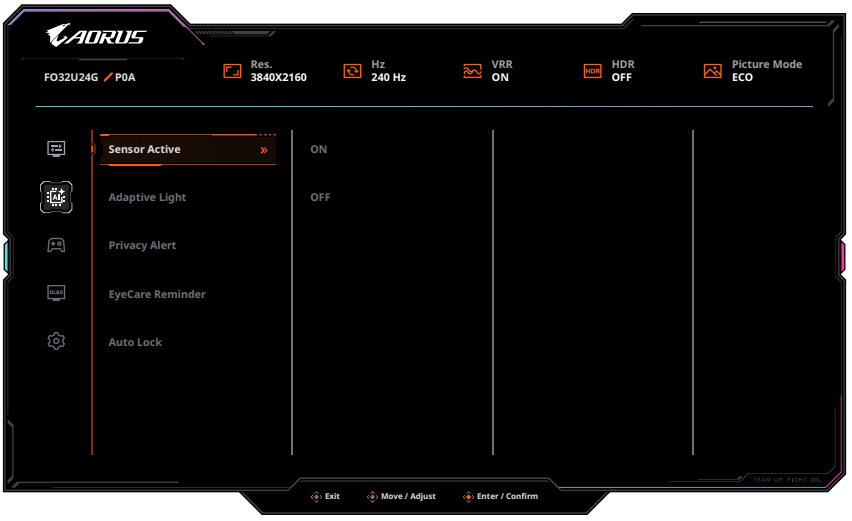


Item	Description
Sensor Active	Turn sensor on/off (The LED indicator lights up green when the sensor is active). **Note:** The following sensor functions are only configurable when this option is turned on.
Adaptive Light	Adjust screen brightness automatically based on the surrounding ambient light.
Privacy Alert	Activate privacy protections when unauthorized viewers are detected within the sensor range.
EyeCare Reminder	Display a pop-up notification to encourage regular eye breaks.
Auto Lock	Turn off the display automatically when no user is detected to extend panel life, and resume operation once a user is detected again.

Note: This sensor uses low-resolution technology for human presence detection and supports related features based solely on detection results. The sensor does not support photography, video recording, image storage, or transmission, and does not record any personal images or personally identifiable information (PII).

GameAssist


Configure advanced tactical gaming features.

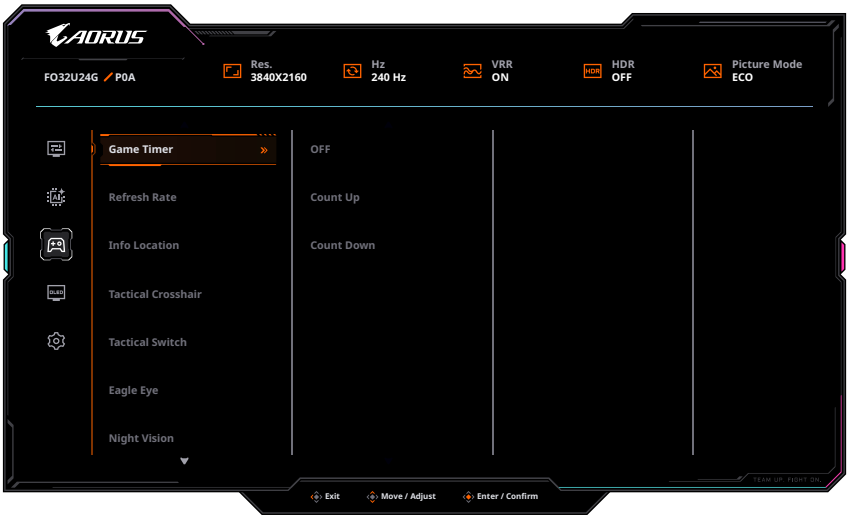

Item	Description
Game Timer	Display an on-screen count-up or count-down timer to track elapsed or remaining game time.
Refresh Rate	Display the real-time refresh rate (Hz).
Info Location	Set the display position for information such as the **Game Timer** and **Refresh Rate**.
Tactical Crosshair	Display an on-screen crosshair. • **Offset:** Fine-tune the horizontal and vertical position of the crosshair. • **Color Adapt:** Automatically adjust the crosshair color based on the background scene.
Tactical Switch	Adjust the screen display size and resolution to specified options. **Note:** Please close full-screen applications before activating Resolution Switch. • **Key Binding:** Select other functionalities for the Tactical Switch button. (Only one function can be selected at a time.)
Eagle Eye	Enable/Disable a window which can enlarge a specific area of the screen and adjust related settings.
Night Vision	Enable/Disable night vision for clarifying targets in low-light condition.
Tactical HUD	Duplicate HUD info from screen corners to the bottom-center of the screen.

AI OLED Care Pro


Configure the OLED Care related settings.

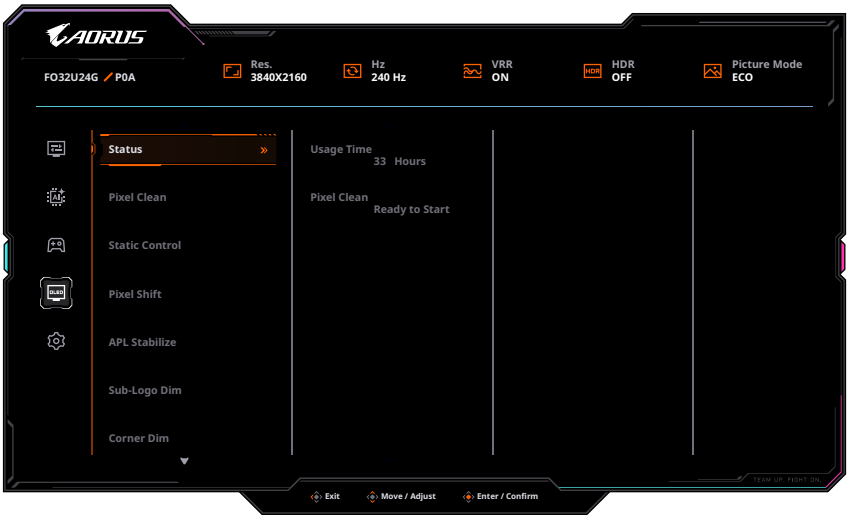

Item	Description
Status	Show the current status of the screen, such as screen usage time and the execution status of the Pixel Clean function.
Pixel Clean	When the monitor is used for over 4 hours, it's recommended to initiate this process to clean and refresh the pixel compensation OLED screen.
Static Control	Reduce screen brightness when the image remains static.
Pixel Shift	Move the screen content by pixels to prevent static image retention.
APL Stabilize	Adjust the screen brightness to stabilize Average Picture Level (APL).
Sub-Logo Dim	Reduce the brightness of the taskbar and static logos to prevent image retention.
Corner Dim	Reduce the brightness at the four corners of the screen.
Reset Settings	Reset all **AI OLED Care Pro** settings to their factory defaults.

System

Configure the system related settings.

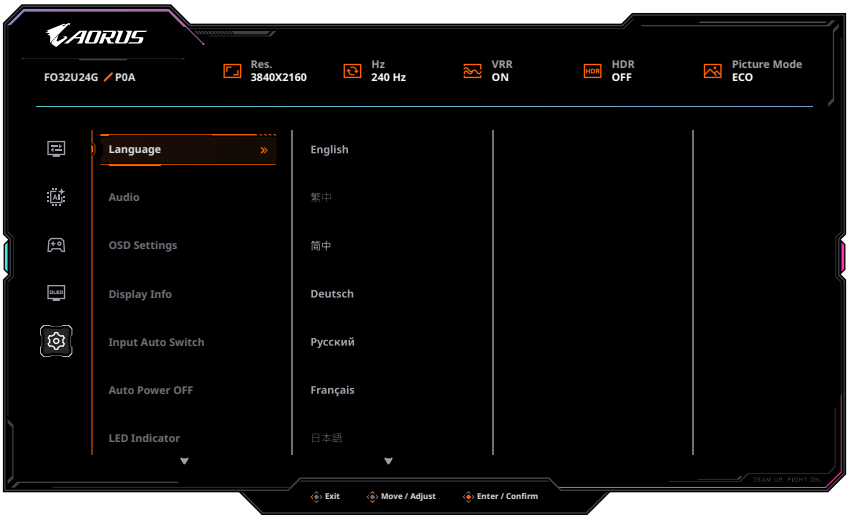

Item	Description
Language	Select the desired language for the OSD menu.
Audio	Configure the audio related settings.
OSD Settings	Configure the On-Screen-Display menu related settings.
Display Info	Enable/Disable the resolution information when switching or restarting the screen signal source.
Input Auto Switch	Enable/Disable automatic switching to an available input source.
Auto Power OFF	Enable/Disable the timer to automatically turn off the monitor.
LED Indicator	Select the indicator type of power LED.
RGB LED	Select the pattern of the backlight LED.
Type-C Compatibility	Turn this option ON for more mobile devices compatibility.
HDMI Version	Select the HDMI version.
HDMI CEC	When this function is enabled, CEC devices like PS5, XBOX can turn on the monitor when they are awakened and switch off the display when they enter either standby or off mode.

USB(A/C) Charge	Enable/Disable the USB Type-A and Type-C charging function. USB Type-C fast charge voltage and current specifications in standby mode: ⇨ Auto (enable): 5V/3A, 9V/3A, 15V/3A, 20V/3.25A. ⇨ Disable: Charging is not available.
USB 3.2 Support	Turn this option ON to support Type-C Version 3.2 (supports Version 2.0 when disabled).
DSC	Select **OFF** to disable DSC signal source.
Reset to default	Restore the monitor to its factory default settings.

APPENDICES

Specifications

Item	Specifications
Panel Size	31.5-inch
Aspect Ratio	16:9
Resolution	UHD (3840 x 2160)
LED Life	30,000 hours (min.)
Pixel Pitch	0.1814 (H) x 0.1814 (V) mm
Brightness	SDR 335 cd/m^2 (typ.)
Contrast Ratio	1.85M:1
Color Depth	1.07B (10 Bit)
Active Display Area	699.48 (H) x 393.28 (V) mm
Viewing Angle	178° (H)/178° (V)
Input/Output Terminals	• 2 x HDMI 2.1 • 1 x DP 2.1 (13.5G) • 1 x USB Type-C (5V/3A, 9V/3A, 15V/3A, 20V/3.25A) • 1 x USB upstream • 2 x USB 3.2 (downstream, 5V/1.5A) • 1 x Headphone
Power Rating	100-240VAC, 50/60Hz
Power Consumptions	• On Mode: 43W • Standby: 0.5W • Off Mode: 0.3W **Note:** The test conditions follow the CEC standards.
Dimensions (W x H x D)	714.3 x 608.1 x 251.7 mm (with stand) 714.3 x 412.0 x 79.4 mm (without stand)
Weight	8.79 ± 0.5 kg (with stand) 6.77 ± 0.5 kg (without stand)
Temperature Range (operation)	0°C to 40°C

Note: Specifications subject to change without notice.

Supported Timing List

Timing List	HDMI 1	HDMI 2	DP	Type-C
640 x 480 / 60Hz	V	V	V	V
640 x 480 / 67Hz	V	V	V	V
640 x 480 / 72Hz	V	V	V	V
640 x 480 / 75Hz	V	V	V	V
720 x 400 / 70Hz	V	V	V	V
720 x 480 / 60Hz	V	V	V	V
800 x 600 / 56Hz	V	V	V	V
800 x 600 / 60Hz	V	V	V	V
800 x 600 / 72Hz	V	V	V	V
800 x 600 / 75Hz	V	V	V	V
832 x 624 / 75Hz	V	V	V	V
1024 x 768 / 60Hz	V	V	V	V
1024 x 768 / 70Hz	V	V	V	V
1024 x 768 / 75Hz	V	V	V	V
1152 x 864 / 75Hz	V	V	V	V
1152 x 870 / 75Hz	V	V	V	V
1280 x 720 / 50Hz	V	V	V	V
1280 x 720 / 60Hz	V	V	V	V
1280 x 720 / 100Hz	V	V	V	V
1280 x 800 / 60Hz	V	V	V	V
1280 x 960 / 60Hz	V	V	V	V
1280 x 1024 / 60Hz	V	V	V	V
1280 x 1024 / 75Hz	V	V	V	V
1440 x 900 / 60Hz	V	V	V	V
1600 x 900 / 60Hz	V	V	V	V
1680 x 1050 / 60Hz	V	V	V	V
1920 x 1080 / 24Hz	V	V		
1920 x 1080 / 50Hz	V	V	V	V
1920 x 1080 / 60Hz	V	V	V	V
1920 x 1080 / 100Hz	V	V	V	V
1920 x 1080 / 120Hz	V	V	V	V
1920 x 1080 / 240Hz	V	V	V	V
2560 x 1440 / 60Hz		V	V	V
2560 x 1440 / 120Hz	V	V	V	V
2560 x 1440 / 240Hz	V	V	V	V
3840 x 2160 / 30Hz	V	V	V	V
3840 x 2160 / 50Hz	V	V	V	V
3840 x 2160 / 60Hz	V	V	V	V
3840 x 2160 / 120Hz	V	V	V	V
3840 x 2160 / 165Hz	V	V	V	V
3840 x 2160 / 240Hz	V	V	V	V

Supported Timing List (PIP/PBP)

Timing List	HDMI 1	HDMI 2	DP	Type-C
640 x 480 / 60Hz	V	V	V	V
640 x 480 / 67Hz	V	V	V	V
640 x 480 / 72Hz	V	V	V	V
640 x 480 / 75Hz	V	V	V	V
720 x 400 / 70Hz	V	V	V	V
720 x 480 / 60Hz	V	V	V	V
800 x 600 / 56Hz	V	V	V	V
800 x 600 / 60Hz	V	V	V	V
800 x 600 / 72Hz	V	V	V	V
800 x 600 / 75Hz	V	V	V	V
832 x 624 / 75Hz	V	V	V	V
1024 x 768 / 60Hz	V	V	V	V
1024 x 768 / 70Hz	V	V	V	V
1024 x 768 / 75Hz	V	V	V	V
1152 x 864 / 75Hz	V	V	V	V
1152 x 870 / 75Hz	V	V	V	V
1280 x 720 / 50Hz	V	V	V	V
1280 x 720 / 60Hz	V	V	V	V
1280 x 800 / 60Hz	V	V	V	V
1280 x 960 / 60Hz	V	V	V	V
1280 x 1024 / 60Hz	V	V	V	V
1280 x 1024 / 75Hz	V	V	V	V
1440 x 900 / 60Hz	V	V	V	V
1600 x 900 / 60Hz	V	V	V	V
1680 x 1050 / 60Hz	V	V	V	V
1920 x 1080 / 24Hz	V	V		
1920 x 1080 / 60Hz	V	V	V	V
2560 x 1440 / 60Hz	V	V	V	V
3840 x 2160 / 30Hz	V	V	V	V
3840 x 2160 / 60Hz	V	V	V	V
1920 x 2160 / 60Hz (PBP)	V	V	V	V

Troubleshooting

Problem	Possible Solution(s)
No power	• Make sure the power cable is properly connected to the power source and the monitor. • Check the cable and plug to make sure they are not broken. • Make sure the monitor is turned on.
No image appears on the screen	• Make sure the monitor and the computer are properly connected and both devices are turned on. • Make sure you have selected the correct input source. Refer to page 8 or 13.
The image does not fill the entire screen	• Try different **Display Mode** (aspect ratio) setting. Refer to page 11.
The colors are distorted	• Make sure the input signal cable is properly connected. • Configure the image related settings. Refer to the "Picture" section.
No sound or volume is low	• Make sure the headphone cable is properly connected. • Adjust the volume level. Refer to page 19. • Adjust your computer sound related settings.

Note: If the problem persists, please contact our customer service for further assistance.

Basic Care

- Wipe the screen with a soft, lint-free cloth to remove any residual dust.
- Spray or apply the cleaning fluid onto a soft cloth. Then wipe the screen gently with the damp cloth.

  Note:
  - Make sure that the cloth is damp, but not wet.
  - When wiping, avoid applying excessive pressure on the screen.
  - Acidic or abrasive cleaners can damage the screen.

GIGABYTE Service Information

More service information, please visit GIGABYTE official website.

https://www.gigabyte.com/

SAFETY INFORMATION

Safety Precautions

Read through the following Safety Precautions before using the monitor.

- Only use the accessories that are provided with the monitor or that which are recommended by the manufacturer.
- Keep the plastic packaging bag for the product in a place that cannot be reached by children.
- Before connecting the monitor to the power outlet, make sure that the voltage rating of the power cable is compatible with the power specification in the country where you are located.
- The power cord plug must be connected to a properly wired and grounded power outlet.
- Do not touch the plug with wet hands, as it can easily cause electric shock.
- Place the monitor in a stable and well-ventilated place.
- Do not place the monitor near any heat sources, such as electric radiators or direct sunlight.
- The holes or openings on the monitor are for ventilation. Do not cover or block the ventilation holes with any objects.
- Do not use the monitor near water, drinks, or all types of liquids. Failure to do so may result in electric shock or damage to the monitor.
- Make sure to unplug the monitor from the power outlet before cleaning.
- As the screen surface is easy to be scratched, avoid touching the surface with any hard or sharp object.
- Use a soft lint-free cloth instead of a tissue to wipe the screen. You may use a glass cleaner to clean the monitor if required. However, never spray the cleaner directly onto the screen.
- Disconnect the power cable if the monitor is not being used for a long period of time.
- Do not attempt to disassemble or repair the monitor yourself.

Information on Rating Label

The rating label is located on the rear cover, placed between the mounting holes for VESA kits. To access the rating label:

1. Place the monitor with the screen facing down on a flat surface covered by a clean, dry and protective sheet.
2. Push the release button upwards to disengage the stand from the monitor.
3. Remove the stand.

Stability Hazard Precautions

The product may fall, causing serious personal injury or death. To prevent injury, this product must be securely attached to the floor/wall in accordance with the installation instructions.

Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use stands or installation methods recommended by the manufacturer of the product set.
- ALWAYS use furniture that can safely support the product.
- ALWAYS ensure the product is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the product or its controls.
- ALWAYS route cords and cables connected to your product so they cannot be tripped over, pulled or grabbed.
- NEVER place a product in an unstable location.
- NEVER place the product on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the product to a suitable support.
- NEVER place the product on cloth or other materials that may be located between the product and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the product or furniture on which the product is placed.
- If the existing product is going to be retained and relocated, the same considerations as above should be applied.
- To prevent personal injury or damage to the product caused by tipping over due to earthquakes or other shocks, make sure to install the product in a stable location and take measures to prevent falling.

User Comfort Recommendations

The monitor adopts Flicker-Free technology which clears the eye visible monitor flicker and prevents users from suffering eye strain and fatigue.

The following are some tips for comfortable viewing of your monitor:

- Allow a minimum distance of 50 to 75cm (20" to 30") between your eyes and the monitor.
- A general guideline is to position the monitor such that the top of the screen is at or slightly below your eye-height when you are comfortably seated.
- Use adequate lighting for the type of work you are performing.
- Take regular and frequent breaks (at least for 10 minutes) every half-hour.
- Be sure to periodically look away from your monitor screen and focus on a far object for at least 20 seconds during the breaks.
- Eye exercise can help reduce eye strain. Repeat these exercises frequently:
  (1) look up and down (2) slowly roll your eye (3) move your eyes diagonally.

This model has passed Flicker Free and Low Blue Light verification by TÜV Rheinland.
To learn more:
https://www.gigabyte.com/tw/Support/FAQ/4310

REGULATORY INFORMATION

United States of America, Federal Communications Commission Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. This class B digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

European Union (EU) CE Declaration of Conformity

This device complies with the following directives: Electromagnetic Compatibility Directive 2014/30/EU, Low-voltage Directive 2014/35/EU, ErP Directive 2009/125/EC, RoHS directive (recast) 2011/65/EU & the Directive (EU) 2015/863 amendment of Annex II.

Compliance with these directives is assessed using applicable European Harmonised Standards.

European Union (EU) RoHS (recast) Directive 2011/65/EU & the European Commission Delegated Directive (EU) 2015/863 Statement

GIGABYTE prohibits the intentional addition of hazardous substances (Pb, Hg, Cd, Cr^{6+}, PBB, PBDE, DEHP, BBP, DBP, and DIBP), except for uses permitted under applicable RoHS exemptions. Incidental presence of these substances shall comply with the applicable maximum concentration values (MCVs) specified in Directive 2011/65/EU, as amended by Directive (EU) 2015/863.

For any support regarding the EU General Product Safety Regulation (GPSR), please contact Giga-Byte Technology B.V. Steenoven 24, 5626 DK Eindhoven, Netherlands.
Email: EU.grp@gigabyte.com

European Union (EU) Community Waste Electrical & Electronic Equipment (WEEE) Directive Statement

GIGABYTE will fulfill the national laws as interpreted from the 2012/19/EU WEEE (Waste Electrical and Electronic Equipment) (recast) directive. The WEEE Directive specifies the treatment, collection, recycling and disposal of electric and electronic devices and their components. Under the Directive, used equipment must be marked, collected separately, and disposed of properly.

WEEE Symbol Statement



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

For more information about where you can drop off your waste equipment for recycling, please contact your local government office, your household waste disposal service or where you purchased the product for details of environmentally safe recycling.

End of Life Directives-Recycling



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

CE Déclaration de Conformité

Cet appareil est conforme aux Directives de l'UE suivantes: Directive Compatibilité Electromagnétique 2014/30/UE, Directive Basse Tension 2014/35/UE, Directive 2009/125/CE en matière d'écoconception, la Directive RoHS II 2011/65/UE & Directive (UE) 2015/863 modifiant l'Annexe II.

La conformité à ces directives est évaluée sur la base des normes européennes harmonisées applicables.

CE-Konformitätserklärung

Dieses Produkte erfüllen folgenden EU-Richtlinien: EMV-Richtlinie 2014/30/EU, Niederspannungsrichtlinie 2014/30/EU, Ökodesign-Richtlinie 2009/125/EC, RoHS-Richtlinie 2011/65/EG erfüllt und die Richtlinie (EU) 2015/863 zur Änderung von Anhang II.

Die Konformität mit diesen Richtlinien wird anhand der anwendbaren harmonisierten Europäischen Normen bewertet.

CE Declaración de conformidad

Este producto cumplen con las siguientes Directivas de la Unión Europea: Directiva EMC 2014/30/EU, Directiva de bajo voltaje 2014/35/EU, Directiva de Ecodiseño 2009/125/CE, Directiva RoHS 2011/65/EU y la Directiva (EU) 2015/863 por la que se modifica el Anexo II.

El cumplimiento de estas directivas se evalúa mediante las normas europeas armonizadas.

CE declaração de conformidade

Este produto estão em conformidade com das seguintes Diretivas UE: Diretiva Baixa Tensão 2014/35/UE; Diretiva CEM 2014/30/UE; Diretiva Conceção Ecológica 2009/125/CE; Diretiva RSP 2011/65/CE e a Diretiva (UE) 2015/863 que altera o Anexo II.

A conformidade com estas diretivas é verificada utilizando as normas europeias harmonizadas.

CE Dichiarazione di conformità

I prodotti sono conformi con una o più delle seguenti Direttive UE, come applicabile: Direttiva EMC 2014/30/UE, Direttiva sulla bassa tensione 2014/35/UE, Direttiva Ecodesign EMC 2009/125/CE, Direttiva RoHS 2011/65/UE e Direttiva (UE) 2015/863 recante modifica dell'Allegato II.

La conformità con tali direttive viene valutata utilizzando gli Standard europei armonizzati applicabili.

CE Deklaracja zgodności

Urządzenie jest zgodne z następującymi dyrektywami: Dyrektywa kompatybilności elektromagnetycznej 2014/30/UE, Dyrektywa niskonapięciowej 2014/35/UE, Dyrektywa ErP 2009/125/WE, Dyrektywa RoHS 2011/65/UE i Dyrektywa (UE) 2015/863 zmieniająca Załącznik II. Zgodność z tymi dyrektywami oceniono za pomocą mających zastosowanie zharmonizowanych norm europejskich.

CE Prohlášení o shodě

Toto zařízení splňuje požadavky Směrnice o Elektromagnetické kompatibilitě 2014/30/EU, Směrnice o Nízkém napětí 2014/35/EU, Směrnice ErP 2009/125/ES, Směrnice RoHS 2011/65/EU a Směrnice (EU) 2015/863 kterou se mění Příloha II.

Shoda s těmito směrnicemi je posuzována v souladu s příslušnými evropskými harmonizačními standardy.

CE Megfelelőségi nyilatkozata

A termék megfelelnek a következőrájuk vonatkozó egy vagy több Európai Uniós irányelvnek: EMC irányelv 2014/30/EU, Kisfeszültségű villamos berendezésekre vonatkozó irányelv2014/35/EU, Környezetbarát tervezésről szóló irányelv 2009/125/EZ, Direktivi RoHS irányelv 2011/65/EU és Direktivi (EU) 2015/863 o izmjeni Priloga II.

A fenti irányelveknek történőmegfelelés megállapítása a vonatkozó harmonizált európai szabványok segítségével történik.

CE Δήλωση συμμόρφωσης

Είναι σε συμμόρφωση με τις διατάξεις των παρακάτω Οδηγιών της Ευρωπαϊκής Κοινότητας: Οδηγία 2014/30/ΕΕ σχετικά με την ηλεκτρομαγνητική συμβατότητα, Οδηγία χαμηλή τάση 2014/35/EU, Οδηγία 2009/125/ΕΚ σχετικά με τον οικολογικό σχεδιασμό, Οδηγία RoHS 2011/65/ΕΕ και Οδηγία (ΕΕ) 2015/863 για την τροποποίηση του παραρτήματος II.

Η συμμόρφωση με αυτές τις οδηγίες αξιολογείται χρησιμοποιώντας τα ισχύοντα εναρμονισμένα ευρωπαϊκά πρότυπα.

CE Declarație de conformitate

Acest aparat este conform cu: Compatibilitatea electromagnetică Directiva 2014/30/UE, Directiva privind echipamentele de joasă tensiune 2014/35/UE, Directiva privind proiectarea ecologică 2009/125/CE, Directiva RoHS 2011/65/UE & Directiva (UE) 2015/863 de modificare a Anexei II.

Conformitatea cu aceste directive este evaluatăutilizând Standardele europene armonizate aplicabile.

CE Overensstemmelseserklæring

Denne enhed overholder stk.: elektromagnetisk kompatibilitet Direktivet 2014/30/EC, LVD Direktivet 2014/35/EC, miljøvenligt design Direktivet 2009/125/EF, RoHS Direktivet 2011/65/EU & Direktivet (UE) 2015/863 om ændring af Bilag II.

Overholdelse af disse direktiver vurderes med gældende europæiske harmoniserede standarder.

CE Vyhlásenie o zhode

Tento produkt spĺňajú najmenej jednu z nasledujúcich platných smerníc EÚ: Smernica 2014/30/ES pre elektromagnetickú kompatibilitu, Smernica 2014/35/ES o Nízkom Napätí (LVD), Smernica 2009/125/ES pre ekodizajn, Smernica RoHS 2011/65/EÚ & Smernica (EÚ) 2015/863 ktorou sa mení Príloha II.

Zhoda s týmito smernicami sa hodnotí použitím príslušných európskych harmonizovaných štandardov.

CE Vaatimustenmukaisuusvakuutus

Tämä tuote on näiden EU-direktiivien mukainen: EMC Direktiivi 2014/30/EY, LVD Direktiivi 2014/35/EY, Ekologista suunnittelua koskeva Direktiivi 2009/125/EY, RoHS Direktiivi 2011/65/EU & Direktiivi (EU) 2015/863 Liitteen II muuttamisesta.

Yhdenmukaisuus näiden direktiivien kanssa on arvioitu käyttäen soveltuvia eurooppalaisia harmonisoituja standardeja.

CE Försäkran om överensstämmelse

Denna produkt uppfyller följande direktiv: Direktivet om Eelektromagnetisk kompatibilitet 2014/30/EU, Lågspänningsdirektivet 2014/35/EU, Ekodesigndirektiv 2009/125/EG, Direktiv RoHS 2011/65/EU mid Direktiv (EU) 2015/863 om ändring av Bilaga II.

Överensstämmelse med dessa direktiv bedöms med hjälp av tillämpliga europeiska harmoniserade standarder.

CE Conformiteitsverklaring

Dit product voldoet aan de volgende van toepassing zijnde EU-richtlijnen: EMC Richtlijn 2014/30/EG, Laagspanningsrichtlijn 2014/35/EU, Ecodesign-richtlijn 2009/125/EG, G RoHS Richtlijn 2011/65/EG & Richtlijn (EU) 2015/863 tot wijziging van Bijlage II.

Het voldoen aan deze richtlijnen is beoordeeld met de van toepassing zijnde Europese geharmoniseerde normen.

CE Vyhlásenie o zhode

Toto zariadenie vyhovuje nasledujúcim smerniciam: Smernica elektromagnetickej kompatibility 2014/30/EÚ, Smernica o nízkom napätí 2014/35/EÚ, Smernica o výrobkoch týkajúcich sa energie 2009/125/ES, Smernica RoHS 2011/65/EÚ & Smernica (EÚ) 2015/863 ktorou sa mení príloha II.

Zhoda s týmito smernicami sa hodnotí použitím príslušných európskych harmonizovaných štandardov.

India RoHS

This product complies with the India E-waste (Management) Rules 2022 and its amendments, and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemptions set in Schedule II of the Rules.

Japan Class 1 Equipment Statement

安全にご使用いただくために

接地接続は必ず電源プラグを電源につなぐ前に行って下さい。

また、接地接続を外す場合は、必ず電源プラグを電源から切り離してから行って下さい。

- 製品には、同梱された電源コードセットを使用すること
- 同梱された電源コードセットは、他の製品に使用しないこと

Japan VCCI Class B Statement

クラスB VCCI 基準について

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B