GIGABYTE™

GAMING MONITOR

USER GUIDE

G27Q24T / G27Q24

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Copyright

© 2026 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in this manual are legally registered to their respective owners.

Disclaimer

Information in this manual is protected by copyright laws and is the property of GIGABYTE.

Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice.

No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

- In order to assist in the use of this monitor, carefully read the User Guide.
- For more information, check on our website at: https://www.gigabyte.com

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

CONTENTS

INTRODUCTION **4**
- Package Contents 4
- Product Overview 5
- Preparing your Monitor for Wall-Mounting 7

USING THE DEVICE **7**
- Turning the Power On/Off 7
- Selecting the Input Source 8

OPERATIONS **8**
- Quick Menu 8
- Function Key Guide 10

APPENDICES **17**
- Specifications 17
- Supported Timing List 18
- Monitor Firmware Update Instructions 19
- Troubleshooting 20
- Basic Care 20
- GIGABYTE Service Information 20


SAFETY INFORMATION **21**
- Safety Precautions 21
- Stability Hazard Precautions 22
- User Comfort Recommendations 22

REGULATORY INFORMATION **23**


INTRODUCTION

Package Contents


The following items come with your packaging box. If any of them is missing, please contact your local dealer.

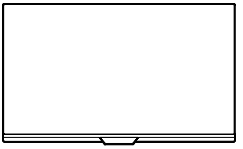


Monitor

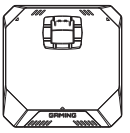


Monitor Base (G27Q24T)



Stand (G27Q24T)




Power Cable



Monitor Base (G27Q24)



Stand (G27Q24)

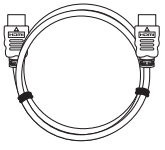

HDMI Cable



Quick Start Guide




Warranty Card

Note:
Please keep the packaging box and packing materials for possible transportation of the monitor.


Product Overview

Front View (G27Q24T)

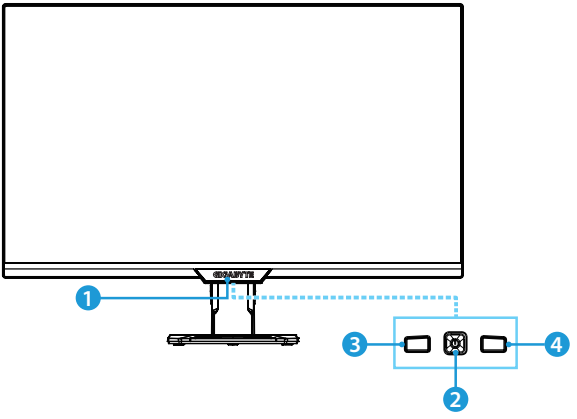


1 Power LED
2 Control button
3 Power off
4 Crosshair

Rear View (G27Q24T)

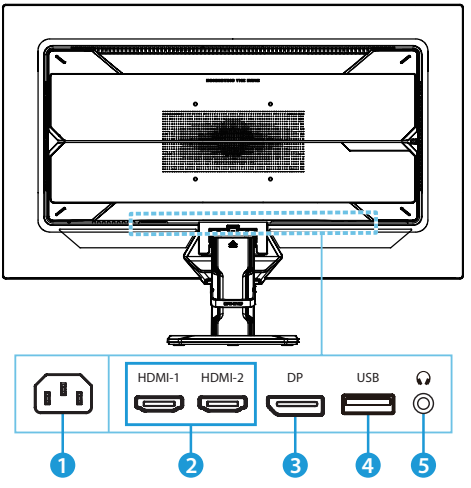


1 AC IN jack
2 HDMI ports (x2)
3 DisplayPort
4 USB port
(For firmware update only.)
5 Headphone jack

Front View (G27Q24)

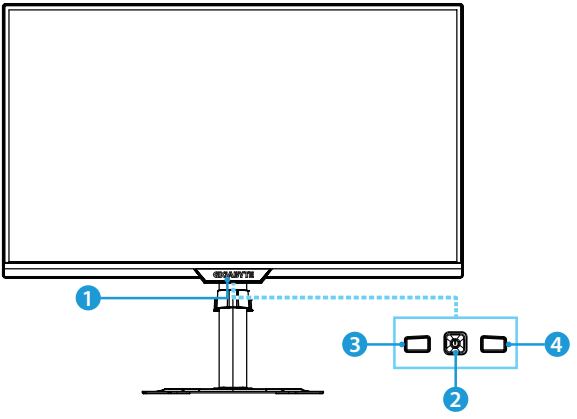

1 Power LED
2 Control button
3 Power off
4 Crosshair

Rear View (G27Q24)

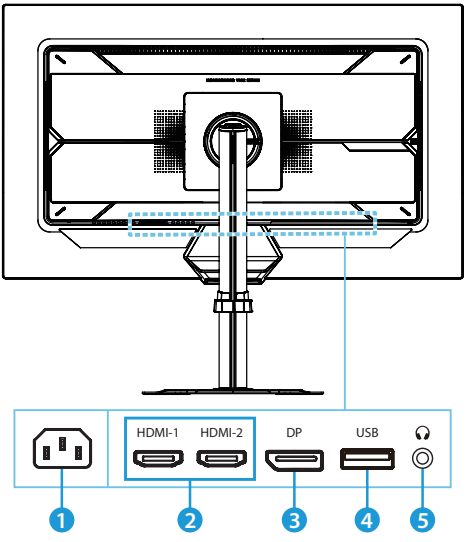

1 AC IN jack
2 HDMI ports (x2)
3 DisplayPort
4 USB port
(For firmware update only.)
5 Headphone jack

Preparing your Monitor for Wall-Mounting


Note: Use only a 100 x 100 mm VESA compatible wall mount kit to mount the monitor on the wall. Refer to the installation guide included in the wall-mount bracket kit. VESA mounting screw quantity and size: 4 x M4 x 10mm minimum.

USING THE DEVICE

Turning the Power On/Off

Power On

1. Connect one end of the power cable to the AC IN jack at the rear of the monitor.
2. Connect other end of the power cable to a power outlet.
3. Press the **Control** button to turn on the monitor. The Power LED will light in white, indicating the monitor is ready to use.

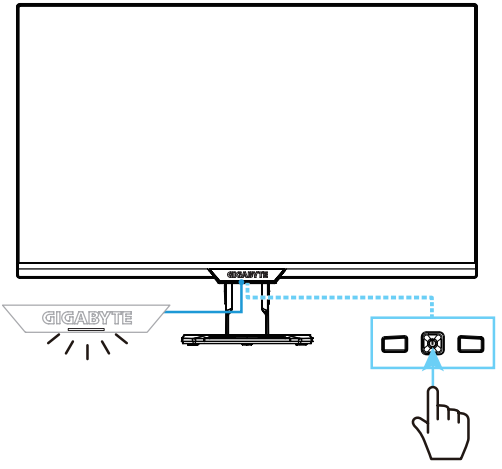


Power Off

Press the **Control** button for 2 seconds to turn off the monitor.

Note: When the **Main** menu appears on the screen, you can also turn off the monitor by moving the **Control** button down (◈) and selecting "Power Off". Refer to page 10.

Selecting the Input Source

1. Move the **Control** button right (◈) to enter the **Input** menu.
2. Move the **Control** button center (◈) to select the desired input source. Then press the **Control** button to confirm.

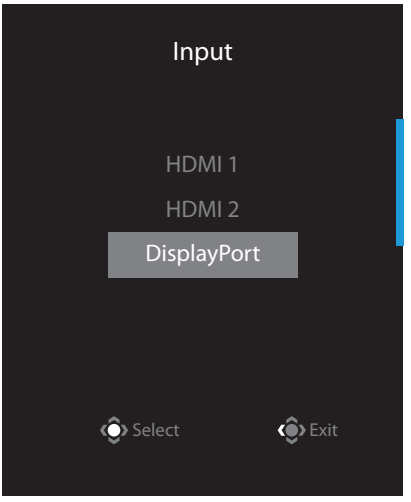

OPERATIONS

Quick Menu

Hot Key


By default, the **Control** button has been assigned with the specific function.

Note: To change the preset hot key function, refer to the "Quick Switch" section on page 15.

To access the Quick Switch functions, do the following:


- Move the **Control** button up (◈) to enter the **Black Equalizer** menu.

  Move the **Control** button up/down (◈) to adjust the setting and press the **Control** button to confirm.

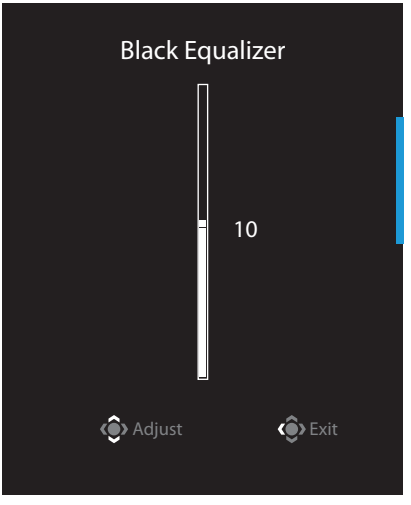


- Move the **Control** button down (◈) to enter the **Picture Mode** menu.

  Move the **Control** button center (◈) to select the desired option and press the **Control** button to confirm.

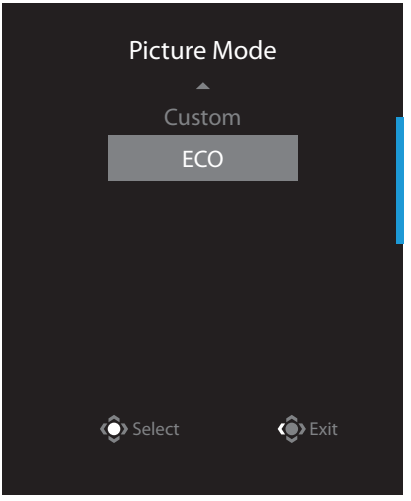

- Move the **Control** button left (◈) to enter the **Crosshair** menu.

  Move the **Control** button up/down (◈) to select the desired volume and press the **Control** button to confirm.

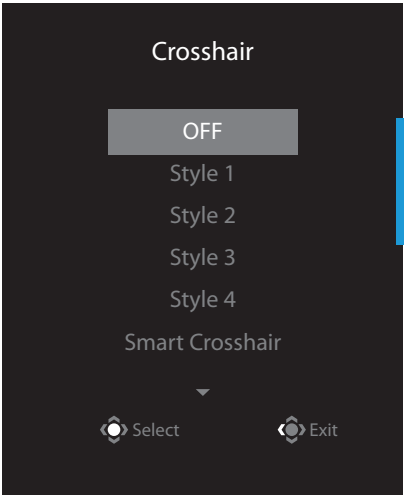


- Move the **Control** button right (◈) to enter the **Input** menu. Refer to the "Selecting the Input Source" section.

Note: To close the menu, move the **Control** button left (◈).

Function Key Guide

- Press the **Control** button to display the Main menu.

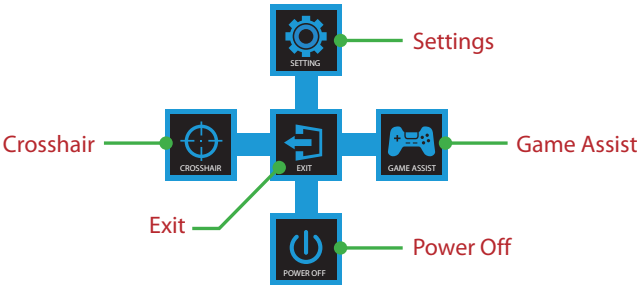

Then use the **Control** button to select the desired function and configure the related settings.

Game Assist

- When the **Main** menu appears on the screen, move the **Control** button right (◈) to enter the **Game Assist** menu.



- **GAME INFO:** Enable/Disable the Gaming information shown on the screen.
  - √ Select **Gaming Timer** to select countdown timer mode. To disable this function, set the setting to **OFF**.
  - √ Select **Refresh Rate** to enable/disable real-time refresh rate setting.
  - √ Select **Info Location** to specify the location of the information to be shown on the screen.




- **Display Alignment:** When the function is enabled, it displays the alignment lines on the four sides of the screen, providing handy tool for you to line up multiple monitors perfectly.
- **Key Binding:** Select a function for the function button. (Only one function can be selected at a time.)

Configure the Device Settings


When the **Main** menu appears on the screen, move the **Control** button up (◈) to enter the **Settings** menu.

Note: Use the **Control** button to navigate through the menu and make adjustments.

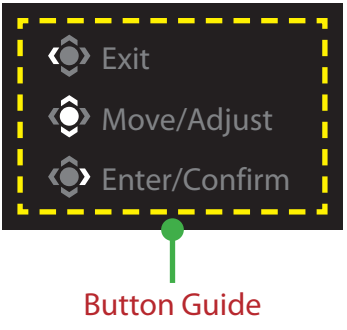

Gaming


Configure the game related settings.

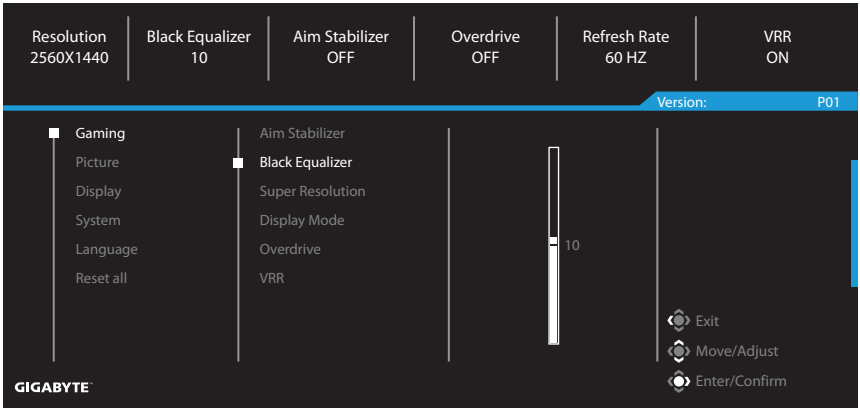

Item	Description
Aim Stabilizer	When this function is enabled, it reduces the motion blur in a fast moving games. **Note:** This function is not available under the following condition: - when the frequency setting is lower than 100Hz.
Black Equalizer	Adjust the brightness of the black areas.
Super Resolution	Enhance the overall image quality to provide sharper detailed visuals.
Display Mode	Select the screen aspect ratio.
Overdrive	Improve the response time of the LCD monitor.
VRR	Enable/Disable receiving VRR signal. **Note:** This option is not compatible with Aim Stabilizer.

Picture

Configure the image related settings.

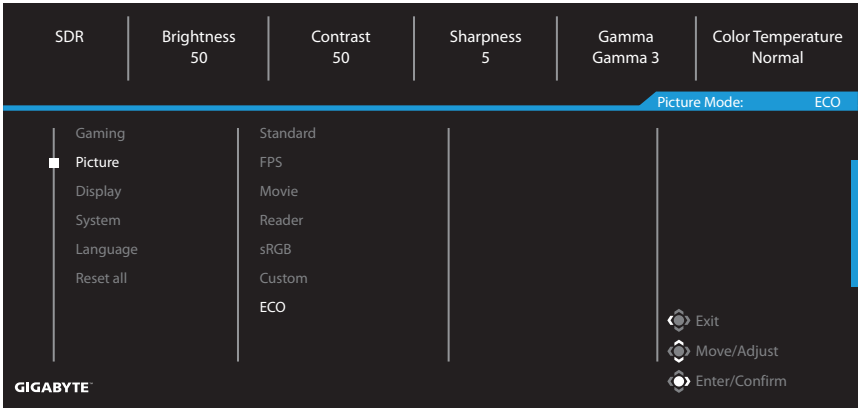


Item	Description
Picture	Select different predefined settings to optimize the visual presentation based on the content type or customize personal preferences.

Note: The Monitor uses a Low Blue Light panel and is compliant with TÜV Rheinland Low Blue Light Hardware Solution at factory reset/default setting mode.

Display


Configure the display screen related settings.

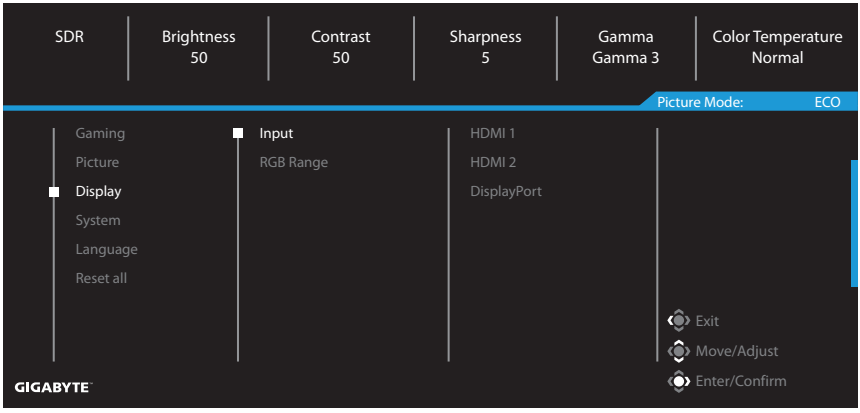

Item	Description
Input	Select the input source.
RGB Range	Manually set the range of RGB or auto-detect.

System


Configure the system related settings.

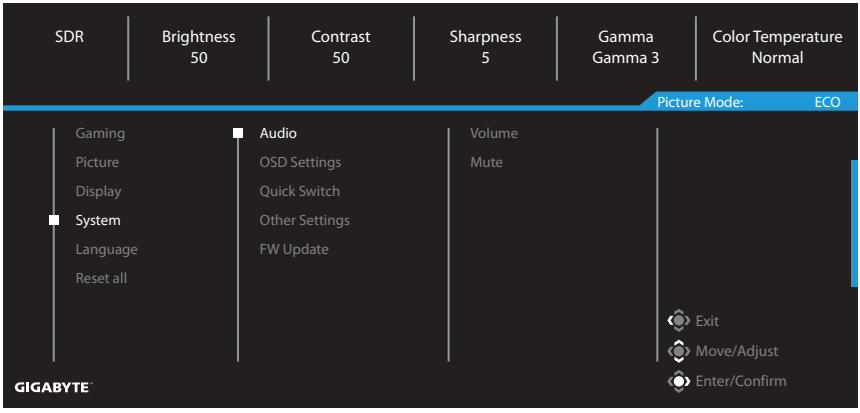

Item	Description
Audio	Configure the audio related settings.
OSD Settings	Configure the On-Screen-Display menu related settings.
Quick Switch	Assign the functions of Quick Switch to the **Control** button.
Other Settings	• **Resolution Notice:** Enable/Disable the resolution information when switching or restarting the screen signal source. • **Input Auto Switch:** Enable/Disable automatic switching to an available input source. • **Auto Power OFF:** Enable/Disable the timer to automatically turn off the monitor. • **LED Indicator:** Select the indicator type of power LED. • **HDMI-CEC:** When this function is enabled, CEC devices like PS5, XBOX can turn on the monitor when they are awakened and switch off the display when they enter either standby or off mode.
FW Update	Insert the USB drive (with the correct firmware file) to begin the Firmware Update process.


Language

Select the desired language for the OSD menu.

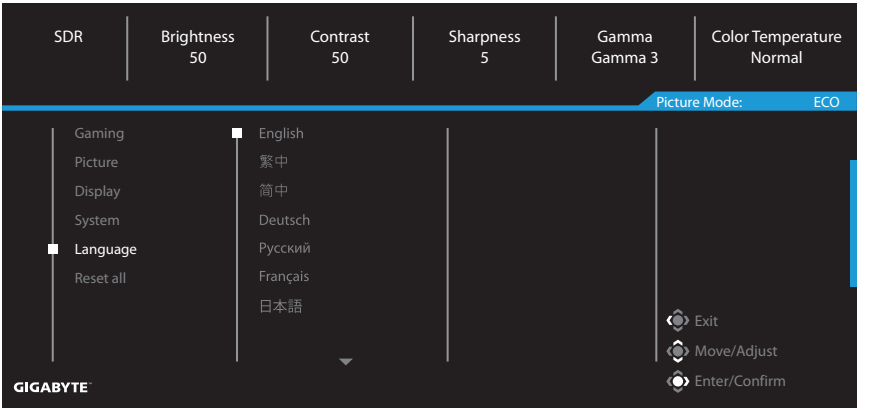

Reset All

Restore the monitor to its factory default settings.

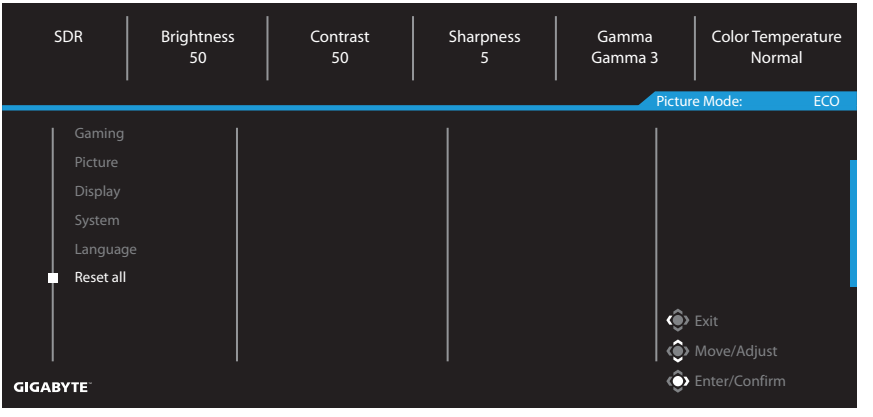

APPENDICES

Specifications

Item	Specifications	
Model	**G27Q24T**	**G27Q24**
Panel Size	27-inch	
Aspect Ratio	16:9	
Resolution	QHD (2560 x 1440)	
LED Life	30,000 hours (min.)	
Pixel Pitch	0.2331 (H) x 0.2331 (V)	
Brightness	SDR 400 nits (typ.) / 350 nits (min.)	
Contrast Ratio	1000:1 (typ.)	
Color Depth	1.07B (8Bit+FRC)	
Active Display Area	596.736 (H) x 335.664 (V)	
Viewing Angle	178° (H)/178° (V)	
Input/Output Terminals	• 2 x HDMI 2.1 • 1 x DP 1.4 • 1 x USB (For firmware update only) • 1 x Headphone	
Power Rating	100-240VAC, 50/60Hz	
Power Consumptions	• On Mode: 20W • Standby: 0.5W • Off Mode: 0.3W **Note:** The test conditions follow the CEC standards.	
Dimensions (W x H x D)	613.9 x 454.5 x 205.4 mm (with stand) 613.9 x 366 x 56.8 mm (without stand)	613.9 x 520 x 197.4 mm (with stand) 613.9 x 366 x 56.9 mm (without stand)
Weight	4.35 kg ± 0.5 kg (with stand) 3.90 kg ± 0.5 kg (without stand)	5.4 kg ± 0.5 kg (with stand) 3.88 kg ± 0.5 kg (without stand)
Temperature Range (operation)	0°C to 40°C	

Note: Specifications subject to change without notice.

Supported Timing List

Timing	Timing List	HDMI 1	HDMI 2	DP
Established Timing	720 x 400 / 70Hz (IBM.VGA)	V	V	V
	640 x 480 / 60Hz (IBM.VGA)	V	V	V
	640 x 480 / 67Hz (Apple.MacII)	V	V	V
	640 x 480 / 72Hz (VESA)	V	V	V
	640 x 480 / 75Hz (VESA)	V	V	V
	800 x 600 / 56Hz (VESA)	V	V	V
	800 x 600 / 60Hz (VESA)	V	V	V
	800 x 600 / 72Hz (VESA)	V	V	V
	800 x 600 / 75Hz (VESA)	V	V	V
	832 x 624 / 75Hz (Apple.MacII)	V	V	V
	1024 x 768 / 60Hz (VESA)	V	V	V
	1024 x 768 / 70Hz (VESA)	V	V	V
	1024 x 768 / 75Hz (VESA)	V	V	V
	1280 x 1024 / 75Hz (VESA)	V	V	V
Standard Timing	1152 x 864 / 75Hz/4:3	V	V	V
	1280 x 1024 / 60Hz/5:4	V	V	V
	1440 x 900 / 60Hz/16:10	V	V	V
Video Identification Code (VIC)	720 x 480 / 60Hz	V	V	V
	1280 x 720 / 60hZ	V	V	V
	1440 x 480 / 60hZ	V	V	V
	1920 x 1080 / 60hZ	V	V	V
	1920 x 1080 / 100hZ	V	V	V
	1920 x 1080 / 120Hz	V	V	V
	3840 x 2160 / 60Hz	V	V	
Detailed Timing	2560 x 1440 / 60Hz	V (default)	V (default)	V (default)
	2560 x 1440 / 100Hz	V	V	V
	2560 x 1440 / 120Hz	V	V	V
	2560 x 1440 / 144Hz	V	V	V
	2560 x 1440 / 200Hz			V
	2560 x 1440 / 240Hz			V

Monitor Firmware Update Instructions

1. Use a browser on your computer to visit the GIGABYTE official website at https://www.gigabyte.com/
2. Enter the monitor model in the search bar and locate the monitor product you need.
3. Select the latest firmware file for your monitor model, download it to your computer, and extract it (the extracted file is in .bin format).


   Note: Do not rename the file.
4. Save the extracted firmware file to the root directory of the USB drive.

   Note: Ensure your USB drive is formatted to FAT32 beforehand.
5. Connect the USB drive to the USB port on the back of the monitor.
6. After connecting the USB drive, select **FW Update** at System settings (refer to page 15) then a firmware update confirmation dialog box will appear in the center of the monitor screen (as shown in the picture below).




7. Use the **Control** button to select **Yes**, and the update will begin automatically. During the update process, the monitor may restart multiple times.


   Note: Do not operate or turn off the monitor power before the update is complete.

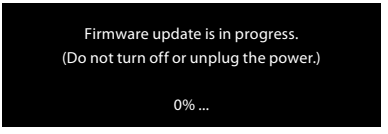

8. When the progress reaches 100%, indicating that the firmware data transfer is complete. After 3 seconds, the monitor will automatically restart, completing the firmware update. Remove the USB drive.

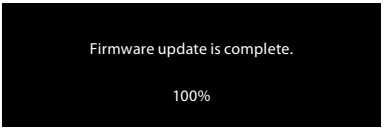

9. Finally, use the **Control** button to enter the **Main** menu and check the updated firmware version.

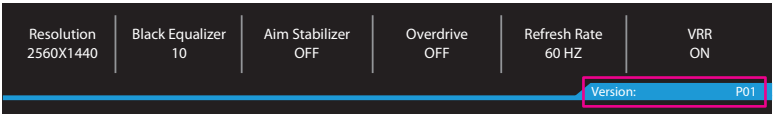

Troubleshooting

Problem	Possible Solution(s)
No power	• Make sure the power cable is properly connected to the power source and the monitor. • Check the cable and plug to make sure they are not broken. • Make sure the monitor is turned on.
No image appears on the screen	• Make sure the monitor and the computer are properly connected and both devices are turned on. • Make sure you have selected the correct input source. Refer to page 8 or 14.
The image does not fill the entire screen	• Try different **Display Mode** (aspect ratio) setting. Refer to page 12.
The colors are distorted	• Make sure the input signal cable is properly connected. • Configure the image related settings. Refer to the "Picture" section.
No sound or volume is low	• Make sure the headphone cable is properly connected. • Adjust the volume level. Refer to page 15. • Check the **Audio Source** setting. • Adjust your computer sound related settings.

Note: If the problem persists, please contact our customer service for further assistance.

Basic Care

- Wipe the screen with a soft, lint-free cloth to remove any residual dust.
- Spray or apply the cleaning fluid onto a soft cloth. Then wipe the screen gently with the damp cloth.

  Note:
  - Make sure that the cloth is damp, but not wet.
  - When wiping, avoid applying excessive pressure on the screen.
  - Acidic or abrasive cleaners can damage the screen.

GIGABYTE Service Information

More service information, please visit GIGABYTE official website.

https://www.gigabyte.com/

SAFETY INFORMATION

Safety Precautions

Read through the following Safety Precautions before using the monitor.

- Only use the accessories that are provided with the monitor or that which are recommended by the manufacturer.
- Keep the plastic packaging bag for the product in a place that cannot be reached by children.
- Before connecting the monitor to the power outlet, make sure that the voltage rating of the power cable is compatible with the power specification in the country where you are located.
- The power cord plug must be connected to a properly wired and grounded power outlet.
- Do not touch the plug with wet hands, as it can easily cause electric shock.
- Place the monitor in a stable and well-ventilated place.
- Do not place the monitor near any heat sources, such as electric radiators or direct sunlight.
- The holes or openings on the monitor are for ventilation. Do not cover or block the ventilation holes with any objects.
- Do not use the monitor near water, drinks, or all types of liquids. Failure to do so may result in electric shock or damage to the monitor.
- Make sure to unplug the monitor from the power outlet before cleaning.
- As the screen surface is easy to be scratched, avoid touching the surface with any hard or sharp object.
- Use a soft lint-free cloth instead of a tissue to wipe the screen. You may use a glass cleaner to clean the monitor if required. However, never spray the cleaner directly onto the screen.
- Disconnect the power cable if the monitor is not being used for a long period of time.
- Do not attempt to disassemble or repair the monitor yourself.

Stability Hazard Precautions

The product may fall, causing serious personal injury or death. To prevent injury, this product must be securely attached to the floor/wall in accordance with the installation instructions.

Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use stands or installation methods recommended by the manufacturer of the product set.
- ALWAYS use furniture that can safely support the product.
- ALWAYS ensure the product is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the product or its controls.
- ALWAYS route cords and cables connected to your product so they cannot be tripped over, pulled or grabbed.
- NEVER place a product in an unstable location.
- NEVER place the product on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the product to a suitable support.
- NEVER place the product on cloth or other materials that may be located between the product and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the product or furniture on which the product is placed.
- If the existing product is going to be retained and relocated, the same considerations as above should be applied.
- To prevent personal injury or damage to the product caused by tipping over due to earthquakes or other shocks, make sure to install the product in a stable location and take measures to prevent falling.

User Comfort Recommendations

The monitor adopts Flicker-Free technology which clears the eye visible monitor flicker and prevents users from suffering eye strain and fatigue.

The following are some tips for comfortable viewing of your monitor:

- Allow a minimum distance of 50 to 75cm (20" to 30") between your eyes and the monitor.
- A general guideline is to position the monitor such that the top of the screen is at or slightly below your eye-height when you are comfortably seated.
- Use adequate lighting for the type of work you are performing.
- Take regular and frequent breaks (at least for 10 minutes) every half-hour.
- Be sure to periodically look away from your monitor screen and focus on a far object for at least 20 seconds during the breaks.
- Eye exercise can help reduce eye strain. Repeat these exercises frequently:
  (1) look up and down (2) slowly roll your eye (3) move your eyes diagonally.

This model has passed Flicker Free and Low Blue Light verification by TÜV Rheinland.
To learn more:
https://www.gigabyte.com/tw/Support/FAQ/4310

REGULATORY INFORMATION

United States of America, Federal Communications Commission Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. This class B digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

European Union (EU) CE Declaration of Conformity

This device complies with the following directives: Electromagnetic Compatibility Directive 2014/30/EU, Low-voltage Directive 2014/35/EU, ErP Directive 2009/125/EC, RoHS directive (recast) 2011/65/EU & the Directive (EU) 2015/863 amendment of Annex II.

Compliance with these directives is assessed using applicable European Harmonised Standards.

European Union (EU) RoHS (recast) Directive 2011/65/EU & the European Commission Delegated Directive (EU) 2015/863 Statement

GIGABYTE prohibits the intentional addition of hazardous substances (Pb, Hg, Cd, Cr^{6+}, PBB, PBDE, DEHP, BBP, DBP, and DIBP), except for uses permitted under applicable RoHS exemptions. Incidental presence of these substances shall comply with the applicable maximum concentration values (MCVs) specified in Directive 2011/65/EU, as amended by Directive (EU) 2015/863.

For any support regarding the EU General Product Safety Regulation (GPSR), please contact Giga-Byte Technology B.V. Steenoven 24, 5626 DK Eindhoven, Netherlands.
Email: EU.grp@gigabyte.com

European Union (EU) Community Waste Electrical & Electronic Equipment (WEEE) Directive Statement

GIGABYTE will fulfill the national laws as interpreted from the 2012/19/EU WEEE (Waste Electrical and Electronic Equipment) (recast) directive. The WEEE Directive specifies the treatment, collection, recycling and disposal of electric and electronic devices and their components. Under the Directive, used equipment must be marked, collected separately, and disposed of properly.

WEEE Symbol Statement



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

For more information about where you can drop off your waste equipment for recycling, please contact your local government office, your household waste disposal service or where you purchased the product for details of environmentally safe recycling.

End of Life Directives-Recycling



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

CE Déclaration de Conformité

Cet appareil est conforme aux Directives de l'UE suivantes: Directive Compatibilité Electromagnétique 2014/30/UE, Directive Basse Tension 2014/35/UE, Directive 2009/125/CE en matière d'écoconception, la Directive RoHS II 2011/65/UE & Directive (UE) 2015/863 modifiant l'Annexe II.

La conformité à ces directives est évaluée sur la base des normes européennes harmonisées applicables.

CE-Konformitätserklärung

Dieses Produkte erfüllen folgenden EU-Richtlinien: EMV-Richtlinie 2014/30/EU, Niederspannungsrichtlinie 2014/30/EU, Ökodesign-Richtlinie 2009/125/EC, RoHS-Richtlinie 2011/65/EG erfüllt und die Richtlinie (EU) 2015/863 zur Änderung von Anhang II.

Die Konformität mit diesen Richtlinien wird anhand der anwendbaren harmonisierten Europäischen Normen bewertet.

CE Declaración de conformidad

Este producto cumplen con las siguientes Directivas de la Unión Europea: Directiva EMC 2014/30/EU, Directiva de bajo voltaje 2014/35/EU, Directiva de Ecodiseño 2009/125/CE, Directiva RoHS 2011/65/EU y la Directiva (EU) 2015/863 por la que se modifica el Anexo II.

El cumplimiento de estas directivas se evalúa mediante las normas europeas armonizadas.

CE declaração de conformidade

Este produto estão em conformidade com das seguintes Diretivas UE: Diretiva Baixa Tensão 2014/35/UE; Diretiva CEM 2014/30/UE; Diretiva Conceção Ecológica 2009/125/CE; Diretiva RSP 2011/65/CE e a Diretiva (UE) 2015/863 que altera o Anexo II.

A conformidade com estas diretivas é verificada utilizando as normas europeias harmonizadas.

CE Dichiarazione di conformità

I prodotti sono conformi con una o più delle seguenti Direttive UE, come applicabile: Direttiva EMC 2014/30/UE, Direttiva sulla bassa tensione 2014/35/UE, Direttiva Ecodesign EMC 2009/125/CE, Direttiva RoHS 2011/65/UE e Direttiva (UE) 2015/863 recante modifica dell'Allegato II.

La conformità con tali direttive viene valutata utilizzando gli Standard europei armonizzati applicabili.

CE Deklaracja zgodności

Urządzenie jest zgodne z następującymi dyrektywami: Dyrektywa kompatybilności elektromagnetycznej 2014/30/UE, Dyrektywa niskonapięciowej 2014/35/UE, Dyrektywa ErP 2009/125/WE, Dyrektywa RoHS 2011/65/UE i Dyrektywa (UE) 2015/863 zmieniająca Załącznik II. Zgodność z tymi dyrektywami oceniono za pomocą mających zastosowanie zharmonizowanych norm europejskich.

CE Prohlášení o shodě

Toto zařízení splňuje požadavky Směrnice o Elektromagnetické kompatibilitě 2014/30/EU, Směrnice o Nízkém napětí 2014/35/EU, Směrnice ErP 2009/125/ES, Směrnice RoHS 2011/65/EU a Směrnice (EU) 2015/863 kterou se mění Příloha II.

Shoda s těmito směrnicemi je posuzována v souladu s příslušnými evropskými harmonizačními standardy.

CE Megfelelőségi nyilatkozata

A termék megfelelnek a következőrájuk vonatkozó egy vagy több Európai Uniós irányelvnek: EMC irányelv 2014/30/EU, Kisfeszültségű villamos berendezésekre vonatkozó irányelv2014/35/EU, Környezetbarát tervezésről szóló irányelv 2009/125/EZ, Direktivi RoHS irányelv 2011/65/EU és Direktivi (EU) 2015/863 o izmjeni Priloga II.

A fenti irányelveknek történőmegfelelés megállapítása a vonatkozó harmonizált európai szabványok segítségével történik.

CE Δήλωση συμμόρφωσης

Είναι σε συμμόρφωση με τις διατάξεις των παρακάτω Οδηγιών της Ευρωπαϊκής Κοινότητας: Οδηγία 2014/30/ΕΕ σχετικά με την ηλεκτρομαγνητική συμβατότητα, Οδηγία χαμηλή τάση 2014/35/EU, Οδηγία 2009/125/ΕΚ σχετικά με τον οικολογικό σχεδιασμό, Οδηγία RoHS 2011/65/ΕΕ και Οδηγία (ΕΕ) 2015/863 για την τροποποίηση του παραρτήματος II.

Η συμμόρφωση με αυτές τις οδηγίες αξιολογείται χρησιμοποιώντας τα ισχύοντα εναρμονισμένα ευρωπαϊκά πρότυπα.

CE Declarație de conformitate

Acest aparat este conform cu: Compatibilitatea electromagnetică Directiva 2014/30/UE, Directiva privind echipamentele de joasă tensiune 2014/35/UE, Directiva privind proiectarea ecologică 2009/125/CE, Directiva RoHS 2011/65/UE & Directiva (UE) 2015/863 de modificare a Anexei II.

Conformitatea cu aceste directive este evaluatăutilizând Standardele europene armonizate aplicabile.

CE Overensstemmelseserklæring

Denne enhed overholder stk.: elektromagnetisk kompatibilitet Direktivet 2014/30/EC, LVD Direktivet 2014/35/EC, miljøvenligt design Direktivet 2009/125/EF, RoHS Direktivet 2011/65/EU & Direktivet (UE) 2015/863 om ændring af Bilag II.

Overholdelse af disse direktiver vurderes med gældende europæiske harmoniserede standarder.

CE Vyhlásenie o zhode

Tento produkt spĺňajú najmenej jednu z nasledujúcich platných smerníc EÚ: Smernica 2014/30/ES pre elektromagnetickú kompatibilitu, Smernica 2014/35/ES o Nízkom Napätí (LVD), Smernica 2009/125/ES pre ekodizajn, Smernica RoHS 2011/65/EÚ & Smernica (EÚ) 2015/863 ktorou sa mení Príloha II.

Zhoda s týmito smernicami sa hodnotí použitím príslušných európskych harmonizovaných štandardov.

CE Vaatimustenmukaisuusvakuutus

Tämä tuote on näiden EU-direktiivien mukainen: EMC Direktiivi 2014/30/EY, LVD Direktiivi 2014/35/EY, Ekologista suunnittelua koskeva Direktiivi 2009/125/EY, RoHS Direktiivi 2011/65/EU & Direktiivi (EU) 2015/863 Liitteen II muuttamisesta.

Yhdenmukaisuus näiden direktiivien kanssa on arvioitu käyttäen soveltuvia eurooppalaisia harmonisoituja standardeja.

CE Försäkran om överensstämmelse

Denna produkt uppfyller följande direktiv: Direktivet om Eelektromagnetisk kompatibilitet 2014/30/EU, Lågspänningsdirektivet 2014/35/EU, Ekodesigndirektiv 2009/125/EG, Direktiv RoHS 2011/65/EU mid Direktiv (EU) 2015/863 om ändring av Bilaga II.

Överensstämmelse med dessa direktiv bedöms med hjälp av tillämpliga europeiska harmoniserade standarder.

CE Conformiteitsverklaring

Dit product voldoet aan de volgende van toepassing zijnde EU-richtlijnen: EMC Richtlijn 2014/30/EG, Laagspanningsrichtlijn 2014/35/EU, Ecodesign-richtlijn 2009/125/EG, G RoHS Richtlijn 2011/65/EG & Richtlijn (EU) 2015/863 tot wijziging van Bijlage II.

Het voldoen aan deze richtlijnen is beoordeeld met de van toepassing zijnde Europese geharmoniseerde normen.

CE Vyhlásenie o zhode

Toto zariadenie vyhovuje nasledujúcim smerniciam: Smernica elektromagnetickej kompatibility 2014/30/EÚ, Smernica o nízkom napätí 2014/35/EÚ, Smernica o výrobkoch týkajúcich sa energie 2009/125/ES, Smernica RoHS 2011/65/EÚ & Smernica (EÚ) 2015/863 ktorou sa mení príloha II.

Zhoda s týmito smernicami sa hodnotí použitím príslušných európskych harmonizovaných štandardov.

India RoHS

This product complies with the India E-waste (Management) Rules 2022 and its amendments, and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemptions set in Schedule II of the Rules.

Japan Class 1 Equipment Statement

安全にご使用いただくために

接地接続は必ず電源プラグを電源につなぐ前に行って下さい。

また、接地接続を外す場合は、必ず電源プラグを電源から切り離してから行って下さい。

- 製品には、同梱された電源コードセットを使用すること
- 同梱された電源コードセットは、他の製品に使用しないこと

Japan VCCI Class B Statement

クラスB VCCI 基準について

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B